


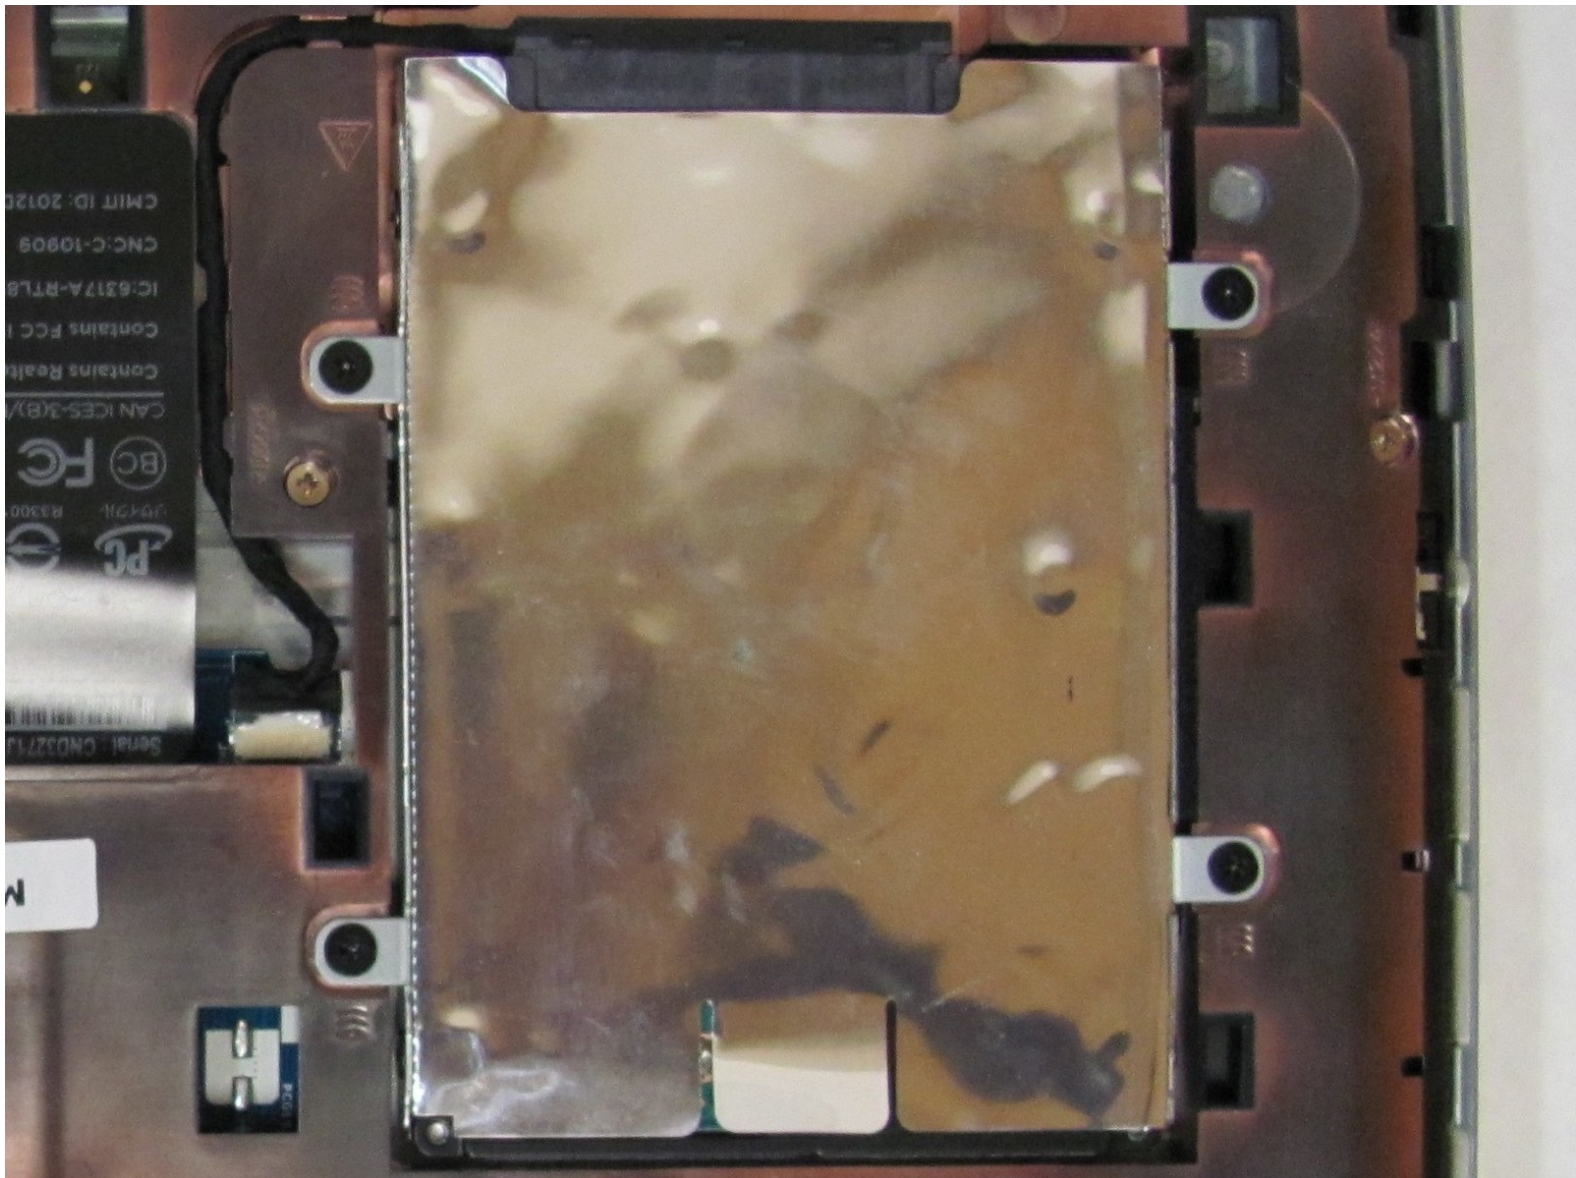

HP Pavilion Touchsmart 11z-e000 Hard Drive Replacement

This guide will instruct a user in the replacement of the laptop's hard drive.

Written By: Robert Hemphill



INTRODUCTION

The hard drive for a computer is essentially where all of the computers information is stored. They are crucial to the performance of any computer. Upgrading a hard drive can improve the speed of a computer, as well as allow the user to save more files, run more programs, and generally improve the performance.



TOOLS:

- [Small Phillips Head Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery





- Remove battery by pushing the two tabs and pulling the battery outwards slowly but firmly.

Step 2 — Hard Drive




- Wedge your finger (or tool) in between the outer plastic cover of the laptop and the main part of the laptop.
- Pry the outer plastic cover off of the laptop.
- ⓘ Prying the outer plastic cover off may take a significant amount of force.

Step 3

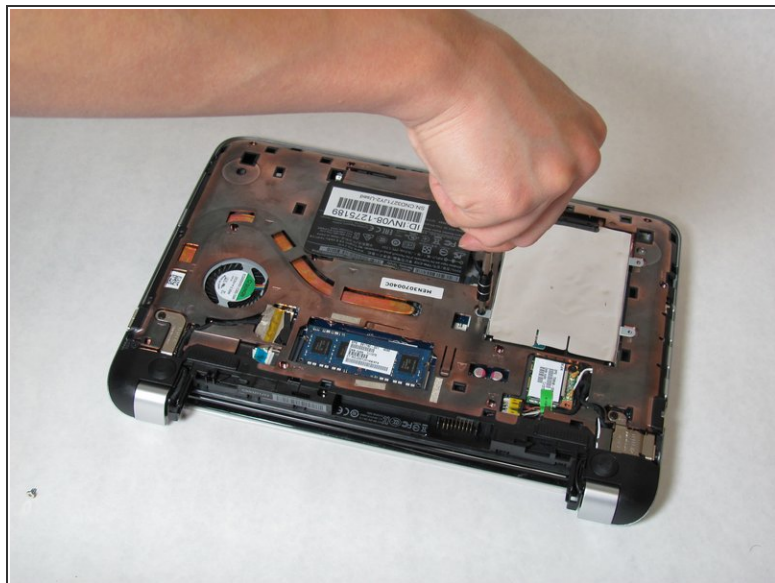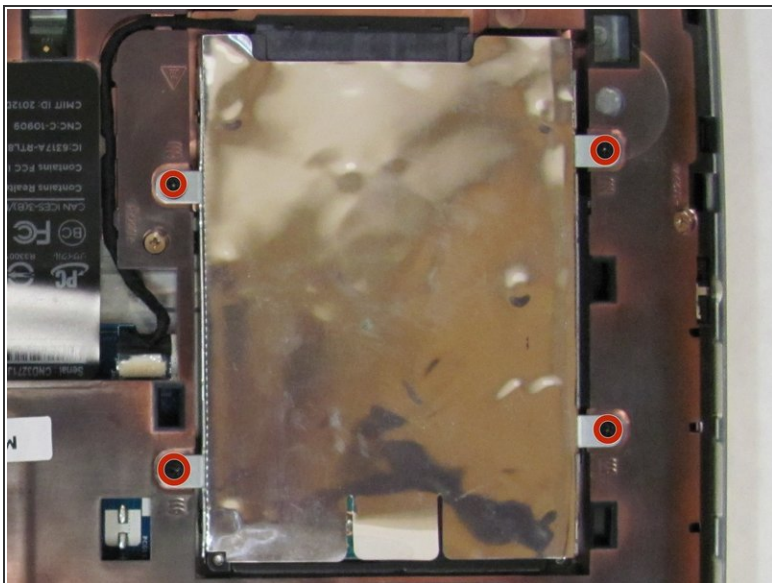


- Unscrew all screws that surround the hard drive with a Philip Head

Step 4

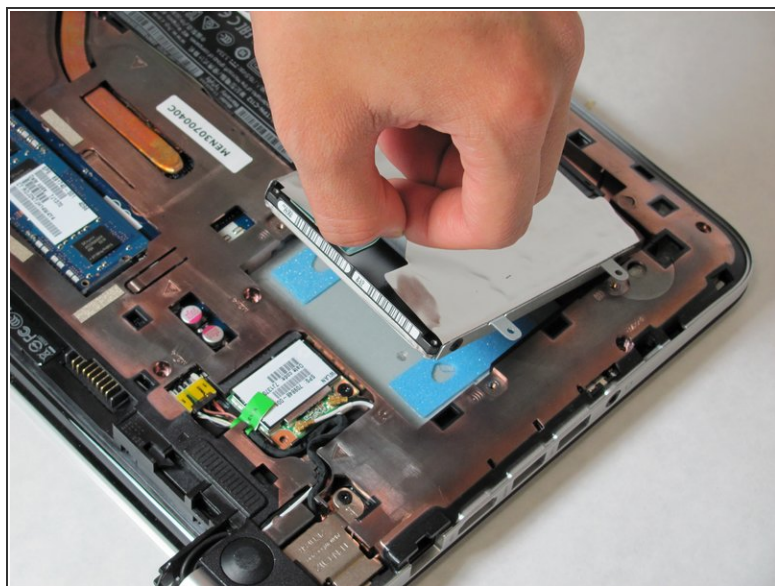

- Carefully lift the hard drive up by holding the tag shown here.

Step 5

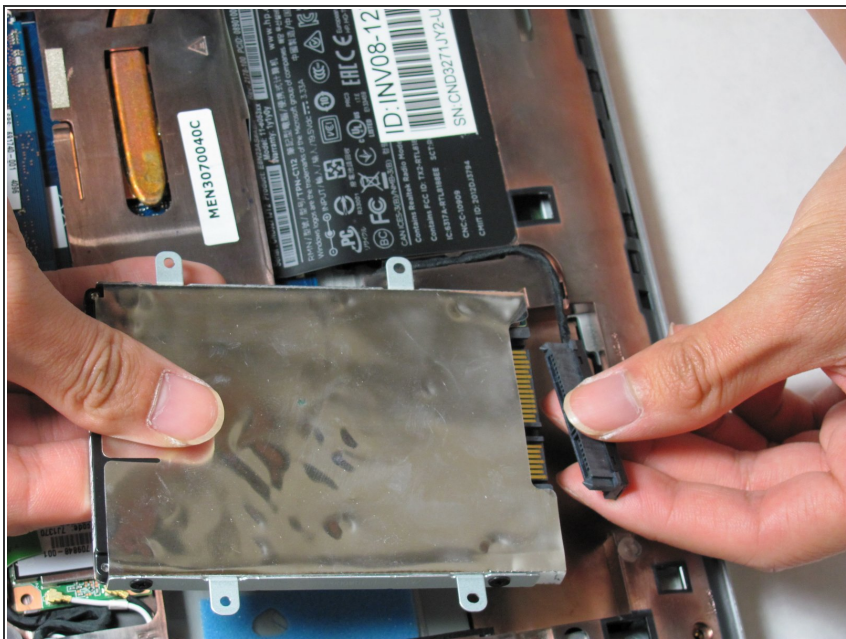

- Remove the final attachment to the hard drive located at the end shown here.

To reassemble your device, follow these instructions in reverse order.