



Disassembling IBM ThinkPad A30 Battery

This disassembly guide shows how to remove the ThinkPad A30 battery.


Written By: Alan



INTRODUCTION

This guide will show you how to remove the battery for the ThinkPad A30.

Step 1 — Battery

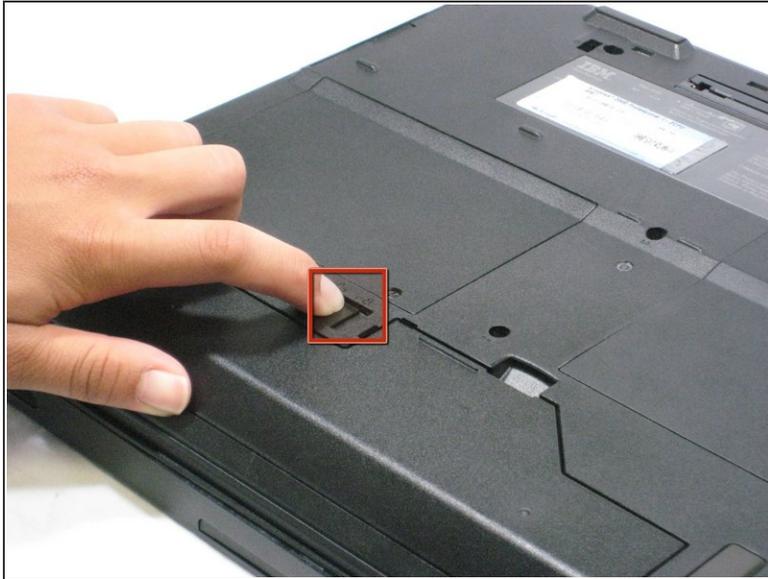

- ① Flip the ThinkPad over so that it is upside down.
- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it upwards away from the laptop.

To reassemble your device, follow these instructions in reverse order.