


# Vivitar Vivicam T027 Power Button Replacement

Replace the power button of the Vivitar Vivicam T027 digital camera.

Written By: Dana

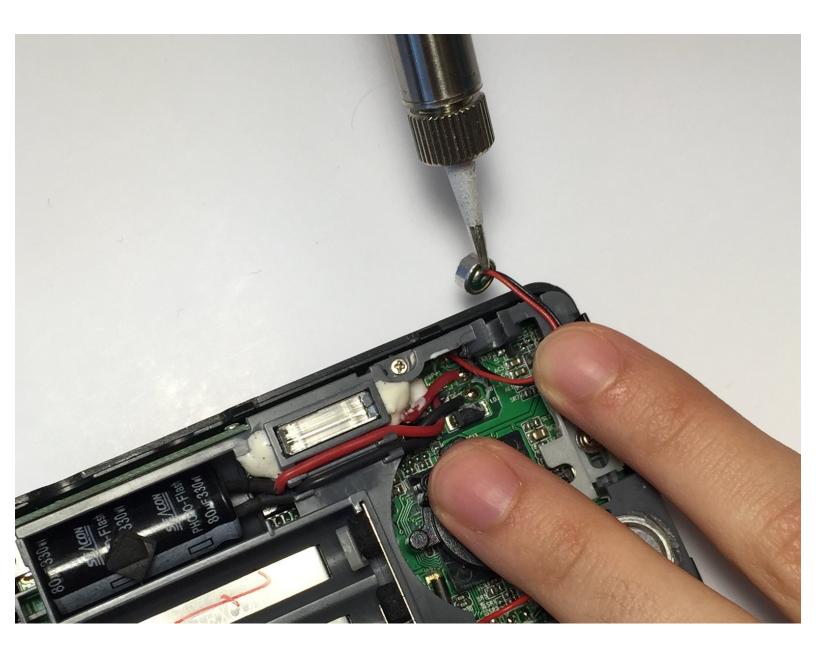

This document was generated on 2020-11-28 04:23:43 AM (MST).

#### **INTRODUCTION**

If the power button on your Vivitar Vivicam T027 digital camera breaks or gets jammed, you may need to replace it. This guide will show you how.

Note: This repair requires soldering. View the soldering guide for more information.



# **TOOLS:**

- Tweezers (1)
- Soldering Iron (1)
- Phillips #00 Screwdriver (1)

#### Step 1 — Power Button





- Using a Phillips #00 screwdriver, remove four exposed 3mm screws.
- You will find one screw on the top, one on the bottom, and one on each side of the camera.
- (i) Put the screws in a safe place so you can find them and put them back in later.


#### Step 2



- Remove the sticker on the top of the camera.
- Use the Phillips #00 screwdriver to remove the screw that was underneath the sticker.


## Step 3



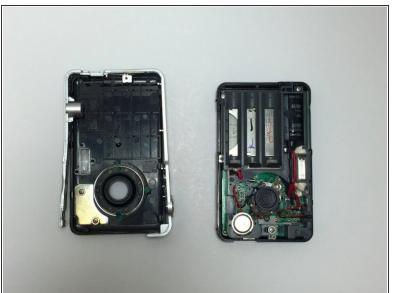


Separate the front and the back of the camera completely to expose the motherboard.

## Step 4

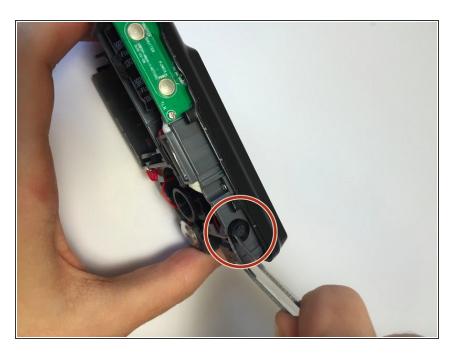

- Locate the power button on the top of the camera.
- Using tweezers, gently remove the black plastic cover from the power button.

#### Step 5

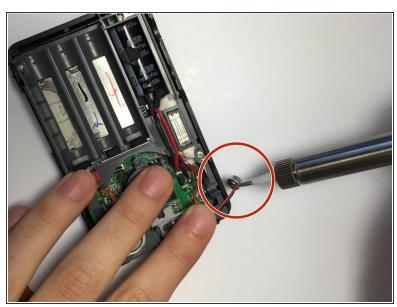



- Using a soldering kit, de-solder the black and red wire from the silver power button.
- Solder the new power button to the black and red wire.
- ↑ To avoid burns, be careful of the heat from the soldering iron.
- (i) Reference the soldering guide for assistance!

To reassemble your device, follow these instructions in reverse order.