




Vivitar Vivicam T027 Lens Replacement

Replace the lens of your camera.

Written By: Nicole Knoebel

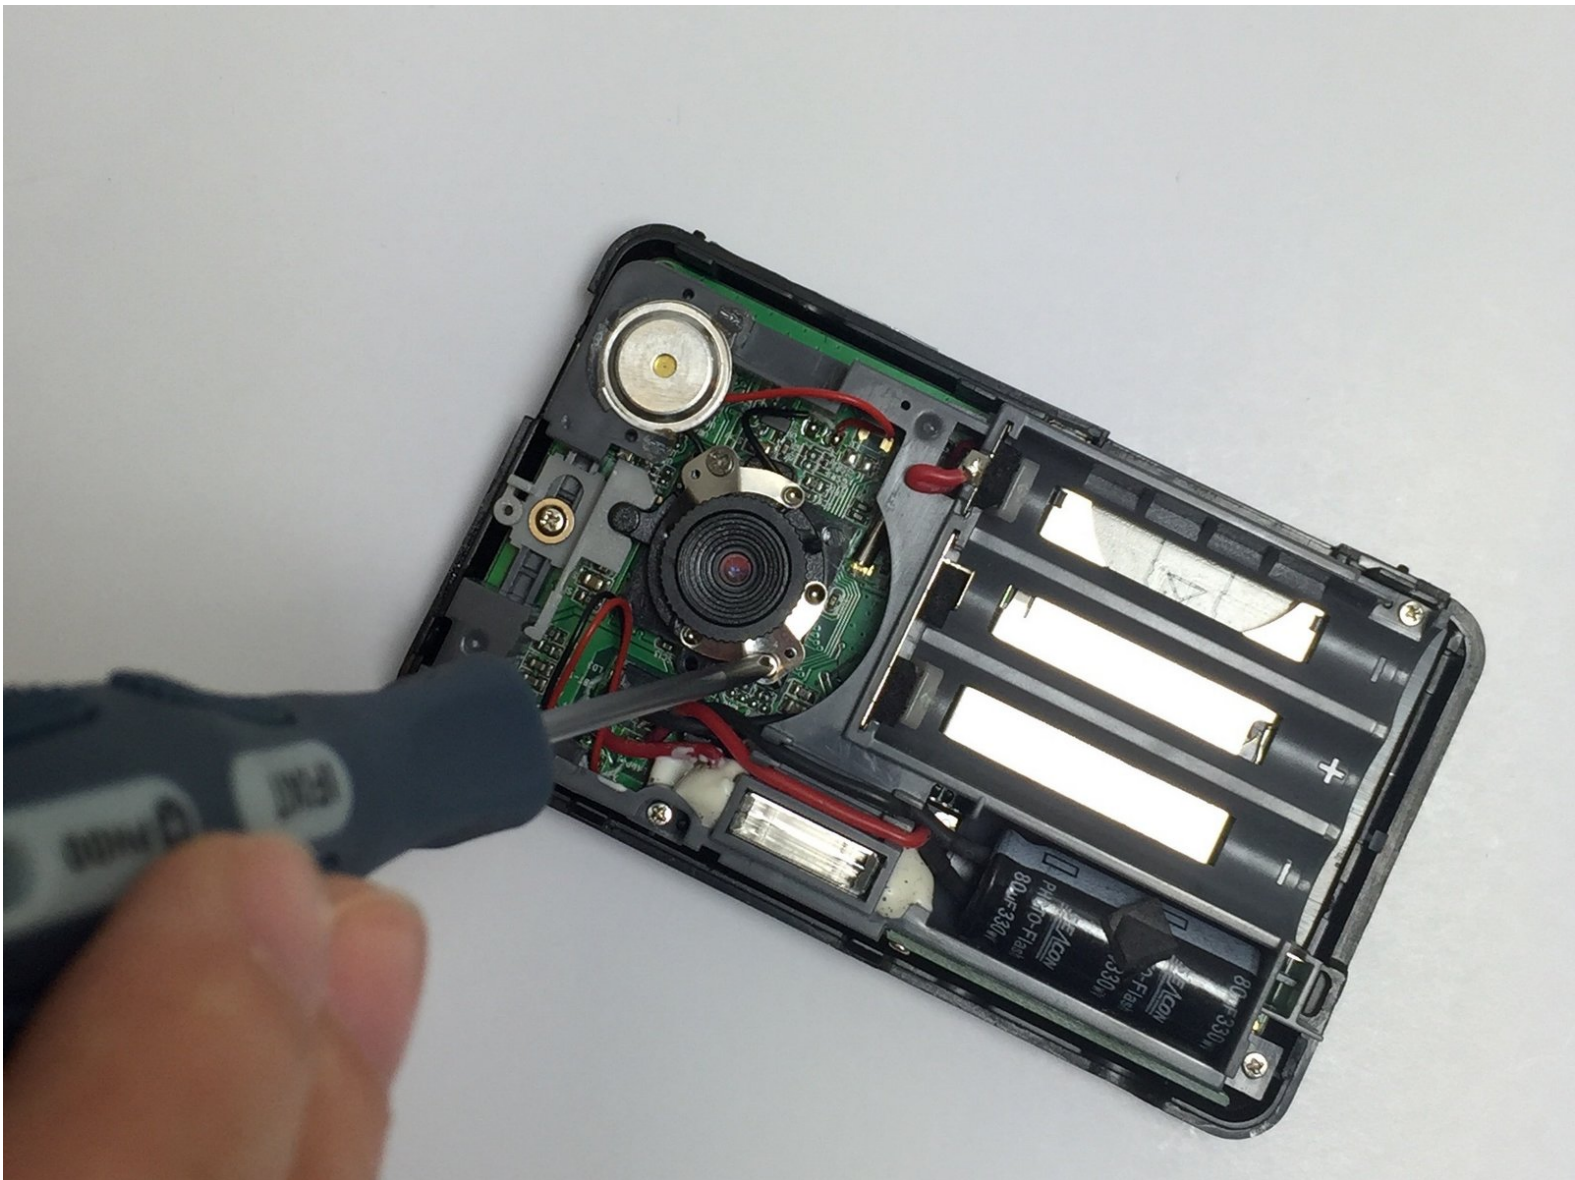

INTRODUCTION

You will need a set of tweezers, a Phillips #00 screwdriver and a Phillips #000 screwdriver to replace your camera's lens.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Lens




- Use a Phillips #00 screwdriver to remove the 3 mm screws at the sides of the camera.

Step 2





- Remove sticker on top of camera as it covers a screw.
- ⓘ There are 5 screws to remove in total on the sides of the camera.

Step 3

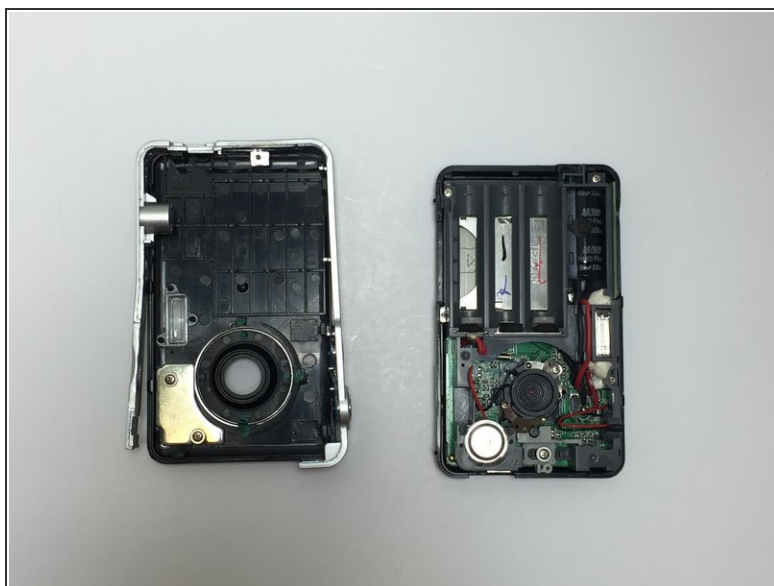

- Separate the front piece of the camera from the back, revealing the motherboard.

Step 4

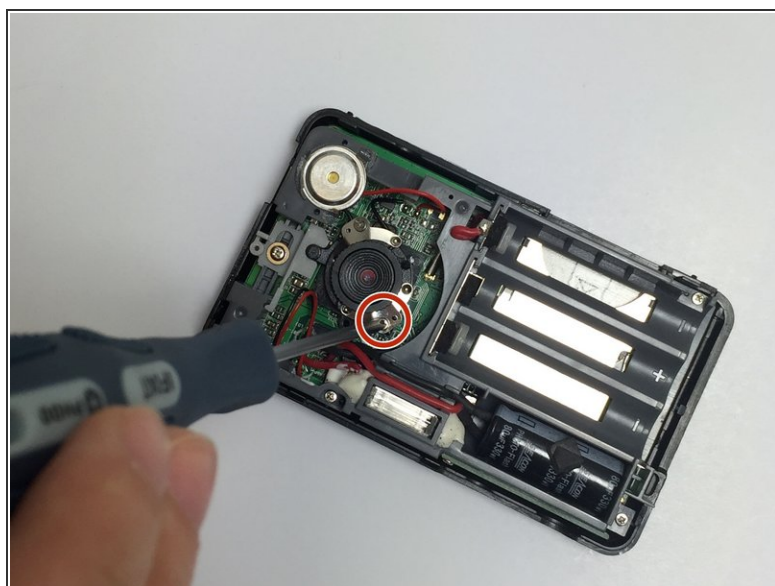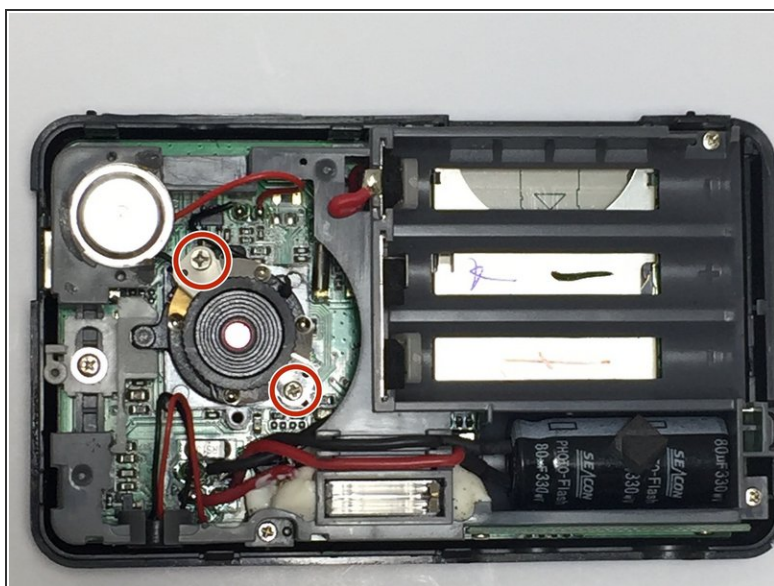


- Use a Phillips #000 screwdriver to remove the two 2.3 mm screws that surround the lens.

Step 5



- Remove the two silver plates using tweezers.

Step 6

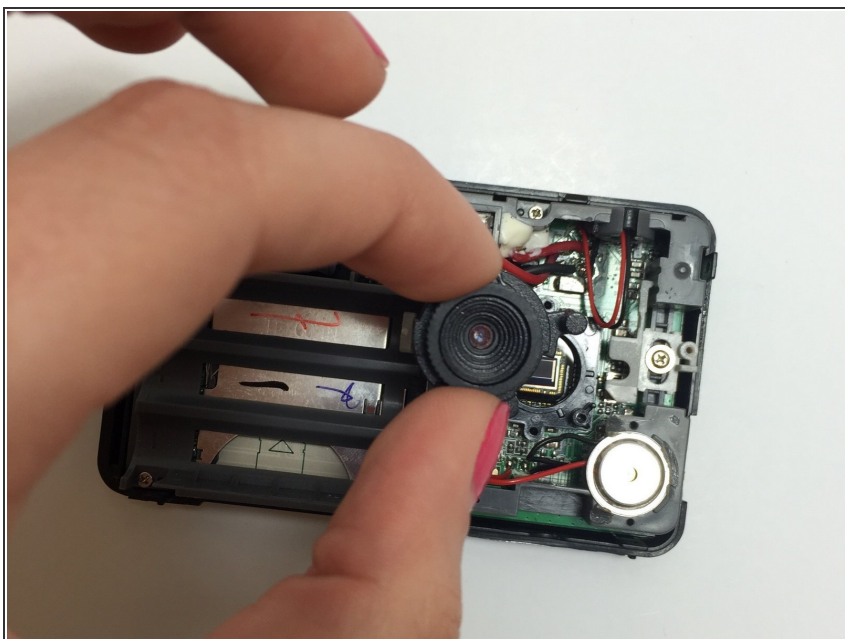

- Remove the black lens carefully with your fingers.

To reassemble your device, follow these instructions in reverse order.