


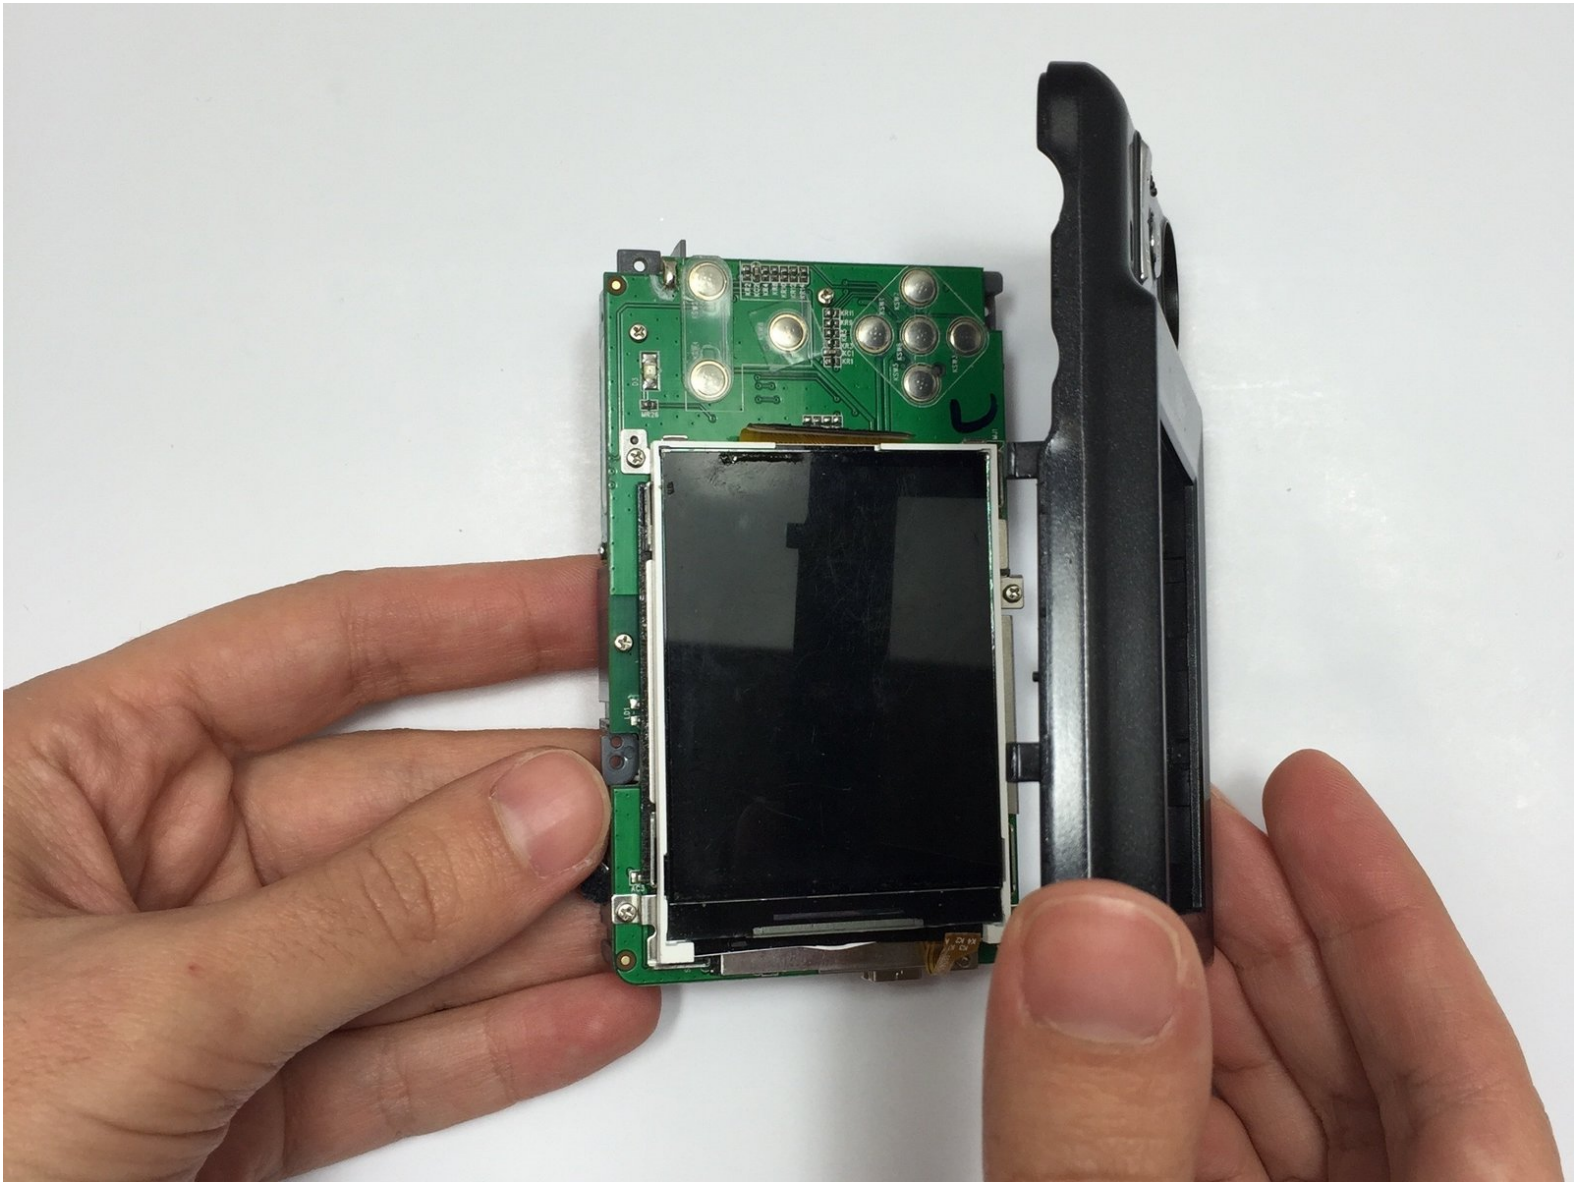

Vivitar Vivicam T027 Screen Replacement

Learn how to replace the screen of your Vivitar Vivicam T027.

Written By: Nicole Knoebel



INTRODUCTION

If the screen on your Vivitar Vivicam T027 isn't giving you the full picture because it's scratched, cracked or otherwise damaged, use this guide to replace the 320 x 240 pixel 2.7" TFT LCD Display screen.

Having a clear, fully functional screen helps you take and view the best pictures possible. Don't let a damaged screen come between you and great pictures.

Before using this guide, gather the tools you will need for the project and ensure you have a clean, clear work area. This will make it easy to keep track of all the parts and pieces you'll be working with. Using a small white towel will keep tiny screws from rolling away from you and make them easy to see.

Don't forget to remove the batteries from the camera before starting!



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Screen




- Remove the 3 mm screws on the sides of the camera, using a Phillips #00 screwdriver.

Step 2




- Remove the sticker on the top of the camera. This sticker covers a screw.
- Remove five screws on the sides of the camera, including the screw under the sticker.

Step 3

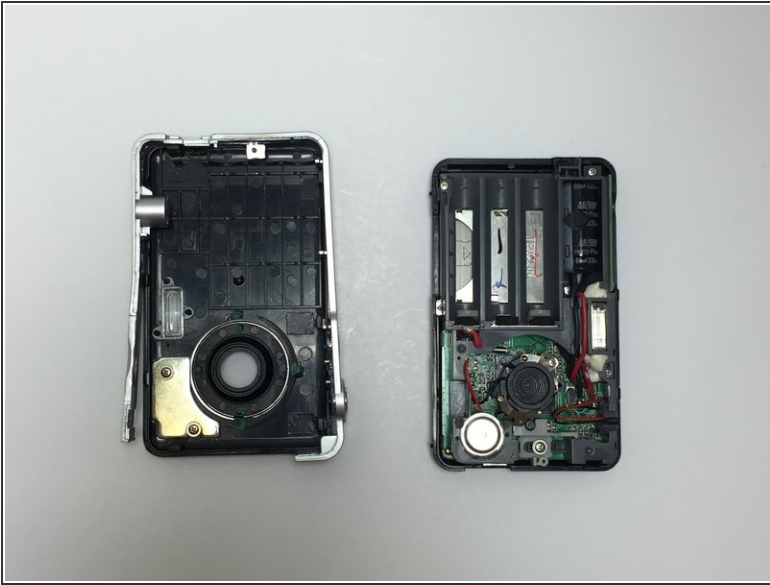


- Separate the front piece of the camera from the back to reveal the motherboard.

Step 4

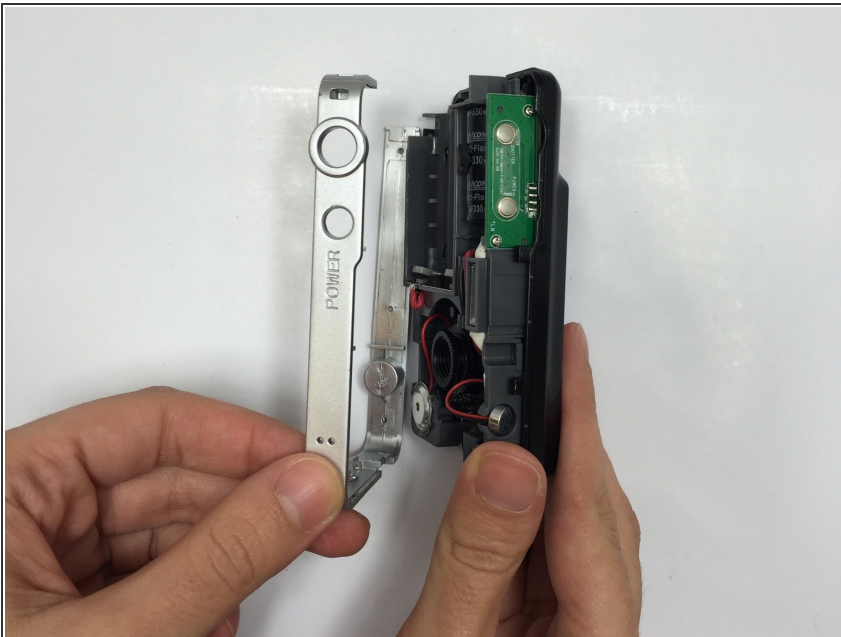


- Remove the plastic silver strip from the front case of the camera.

Step 5

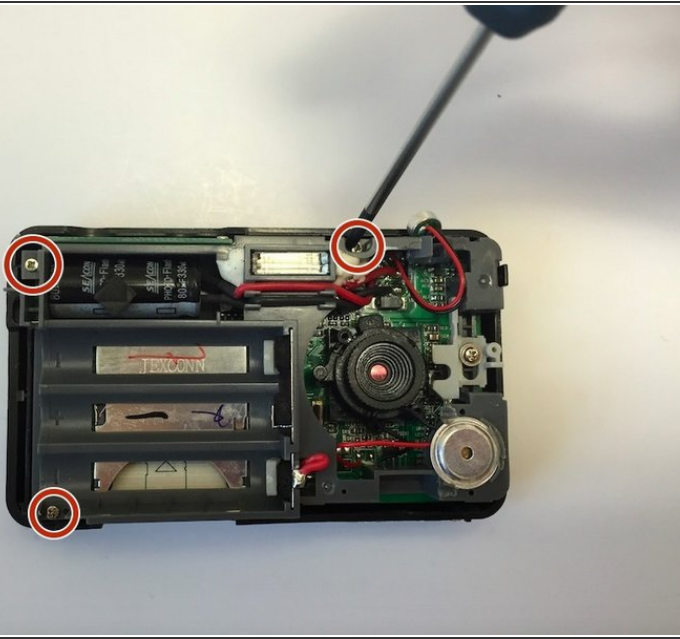



- Remove the three 2 mm screws holding in the gray plastic cover, using a Phillips #00 screwdriver.

Step 6

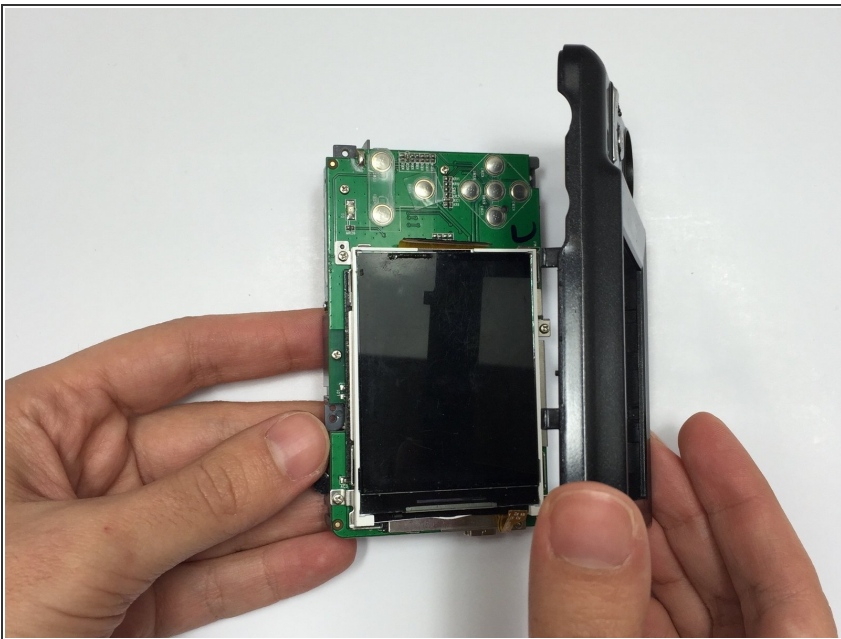

- Remove the black plastic cover to reveal the newly exposed screen.

Step 7

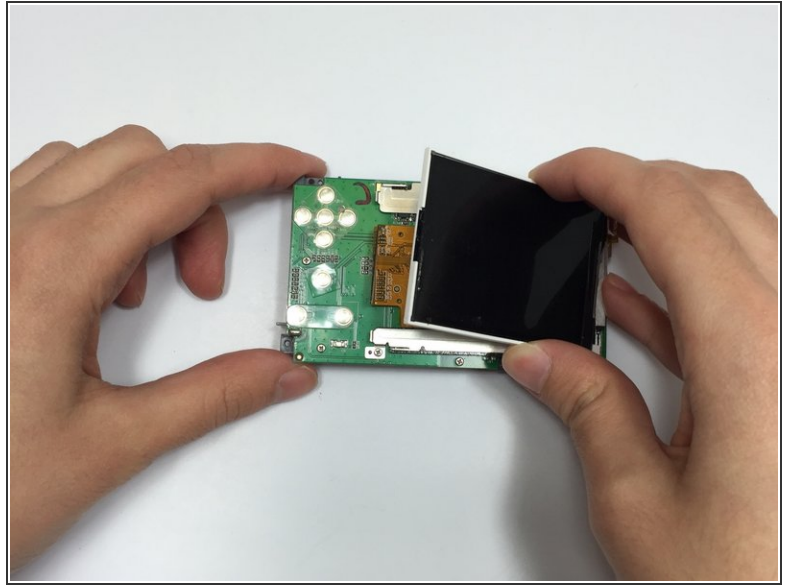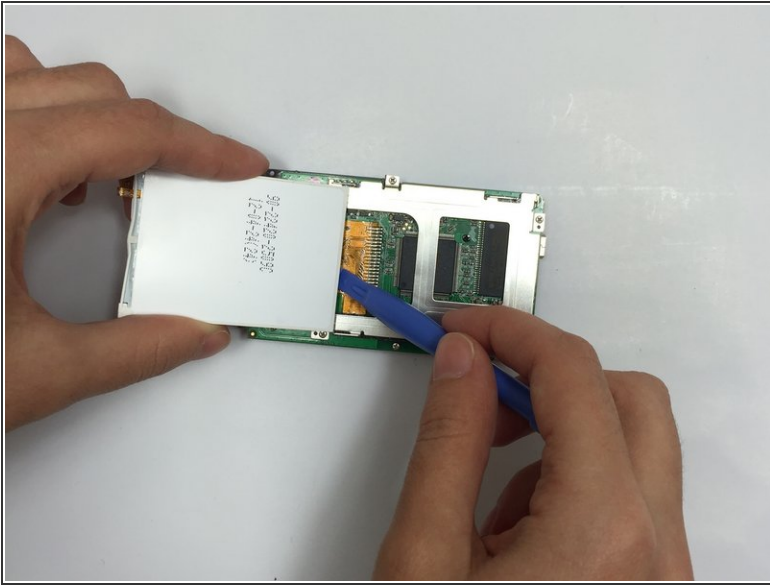

- Carefully remove the gold film from the screen with a plastic opening tool.
- Gently pull the screen off the camera.

To reassemble your device, follow these instructions in reverse order.