



Nextbook 8 Glass Replacement

This guide will show you how to replace the glass on the Nextbook 8 screen.

Written By: Dylan Wiese



INTRODUCTION

Did the glass on your Nextbook 8 screen break? Use this guide to replace the glass on the front screen.

TOOLS:


- [iFixit Opening Picks set of 6](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery




- Use the plastic opening tool to remove the back cover. Carefully slide the tool between the front glass and back cover.
- Slide the tool along the edge to work the back cover off.
- ⓘ It helps to have an extra tool to stick in the gap and keep the back cover separated from the glass as you slide the other tool.

Step 2

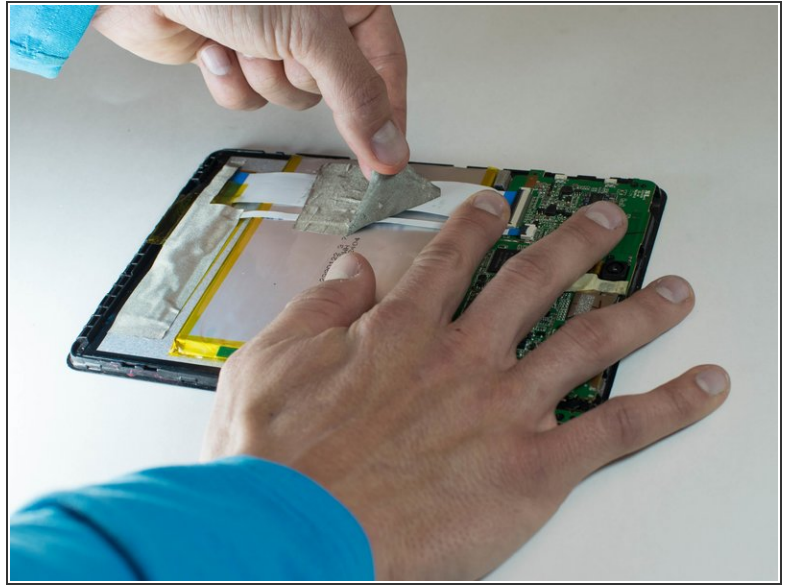

- Remove the tape covering the motherboard.
- Remove the silver tape holding the white ribbon cables to the battery.


Step 3

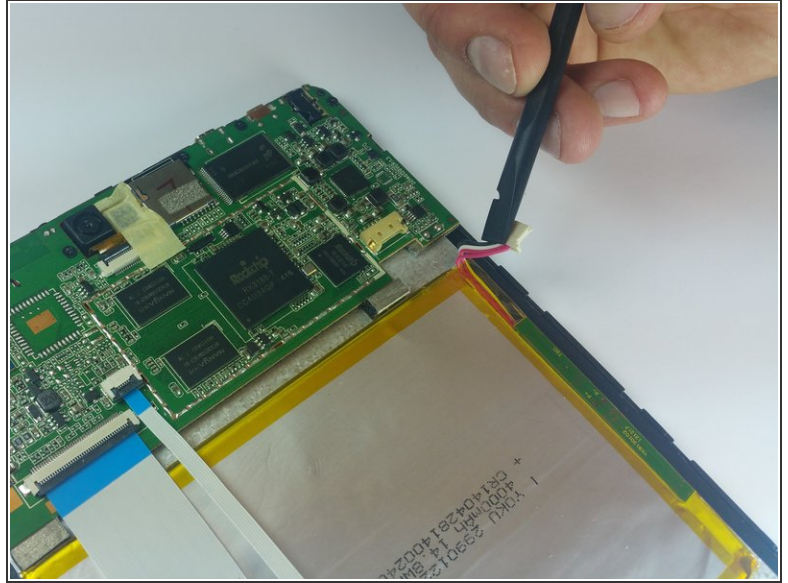

- Use a spudger to carefully disconnect the battery connector from the motherboard.


⚠ When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.

Step 4

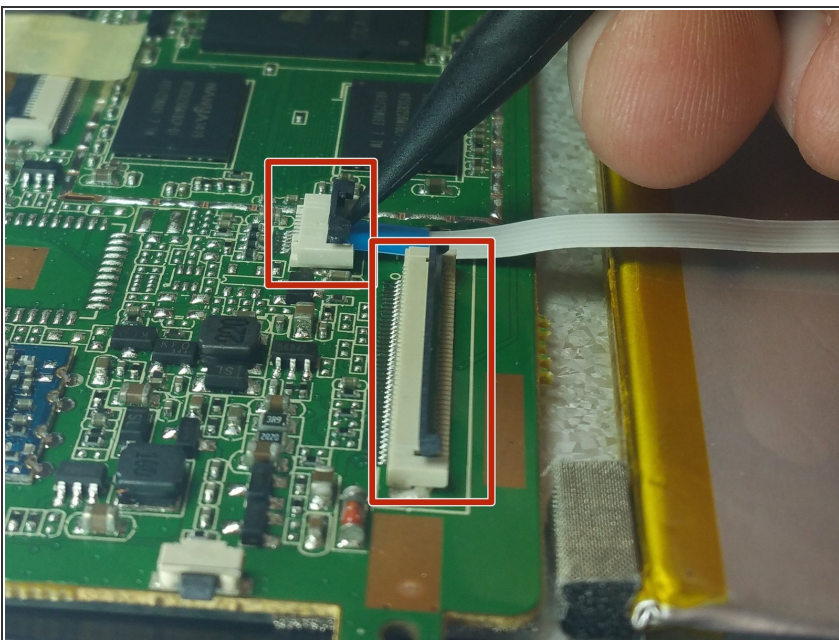

- Use a spudger to lift up the black bar on the two ZIF connectors located above the battery.
- Pull the ribbon cables out of the connectors with tweezers or two fingers.

Step 5

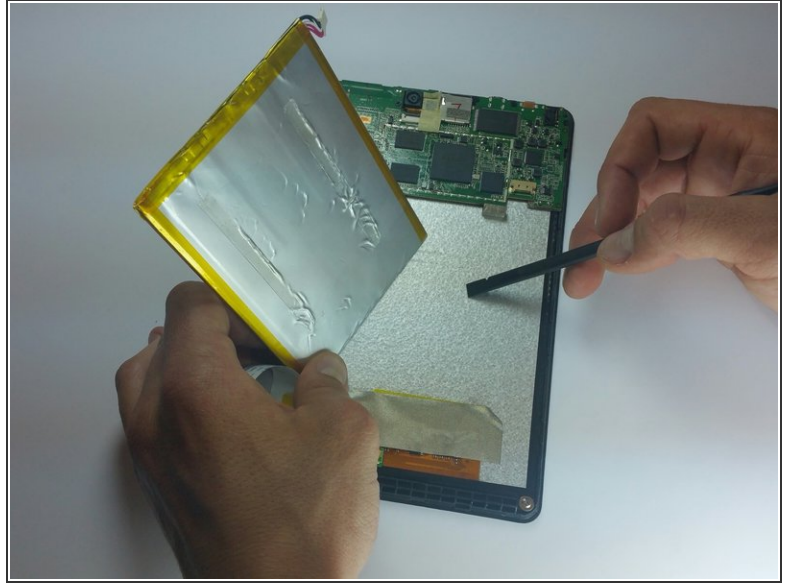



- Using the flat end of a spudger, carefully work the spudger under the battery, lifting it off of the device.
- ⓘ The battery is very malleable, so do not try to pull it off all at once.

Step 6 — Screen





- Remove the silver and gold sticker at the bottom of the device.
- ⓘ Hold the brown circuit board down with your finger while you remove the sticker

Step 7

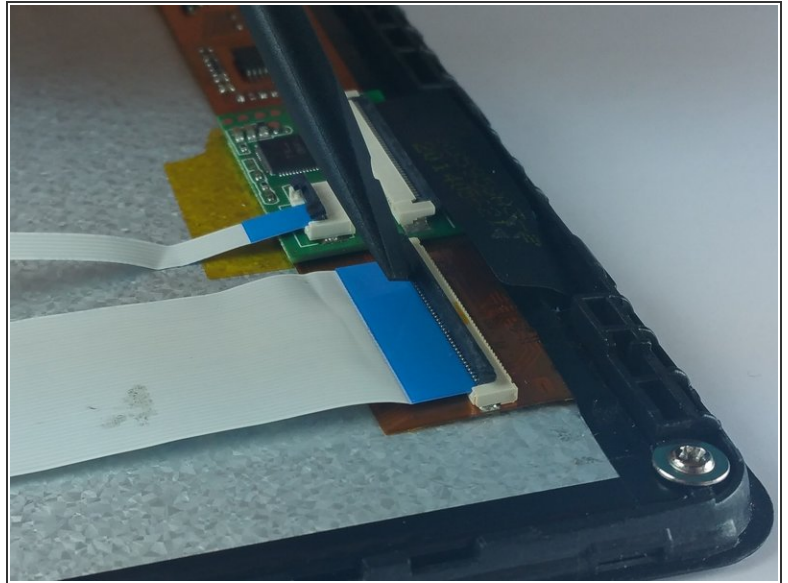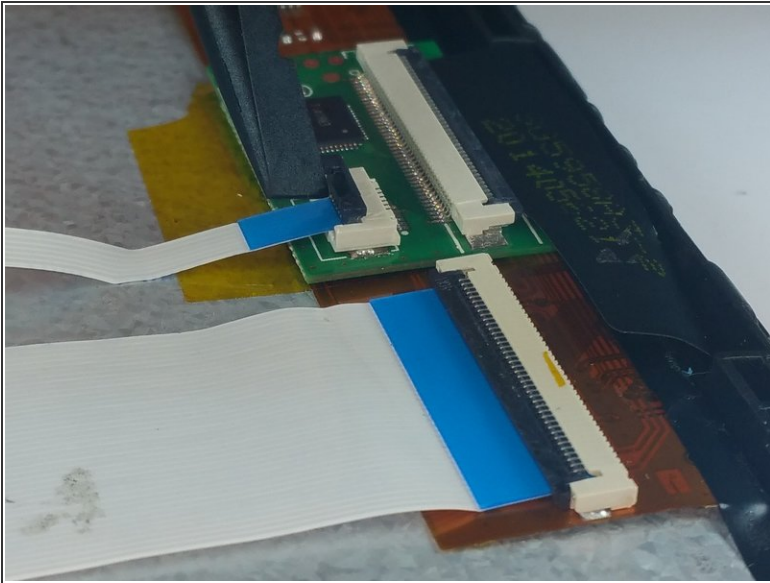



- Use a spudger to lift up the black tabs on the three ZIF connectors.
- Use ESD safe tweezers to pull the ribbon cables out of the three connectors.

Step 8

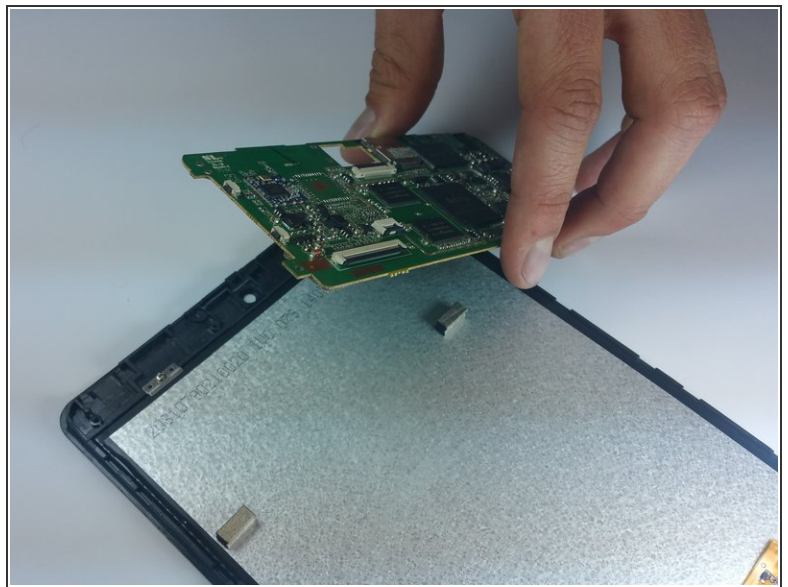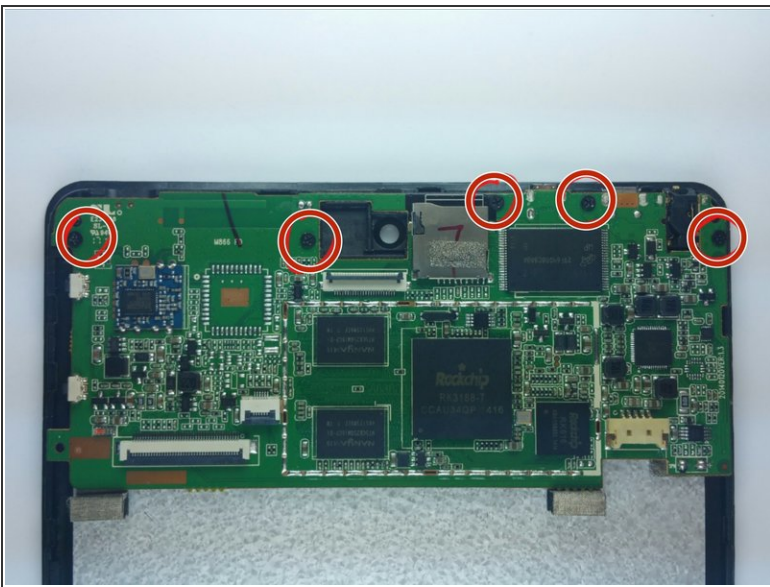


- Remove the 5 black screws on the motherboard.
- Carefully lift the motherboard off of the device and remove.

Step 9

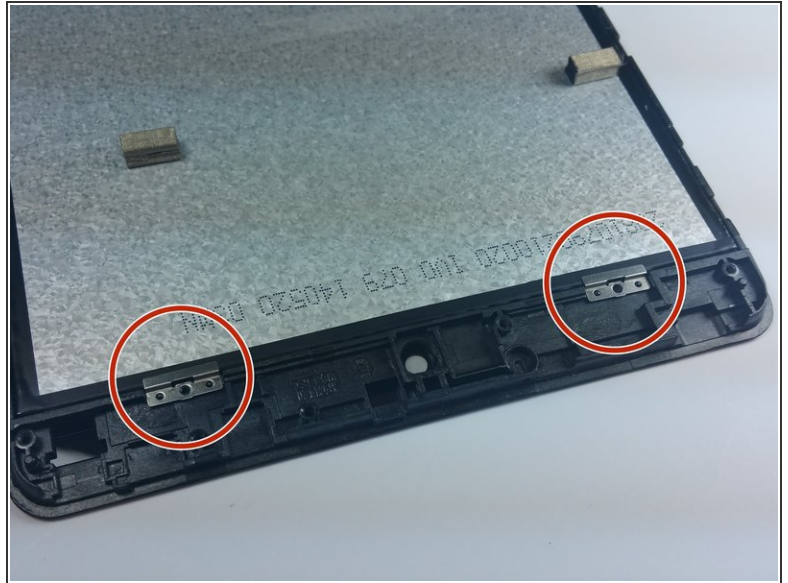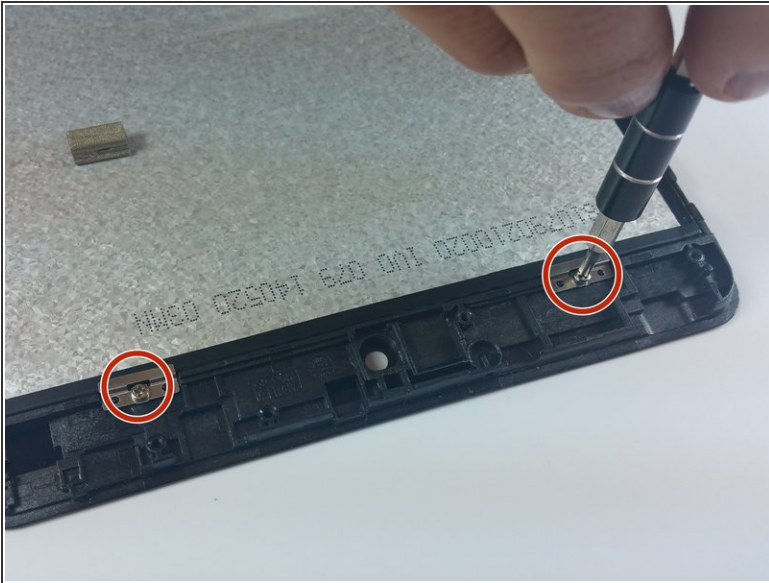

- Remove the two screws that hold the brackets in place.
- Remove the two silver brackets that hold the screen in place.

Step 10

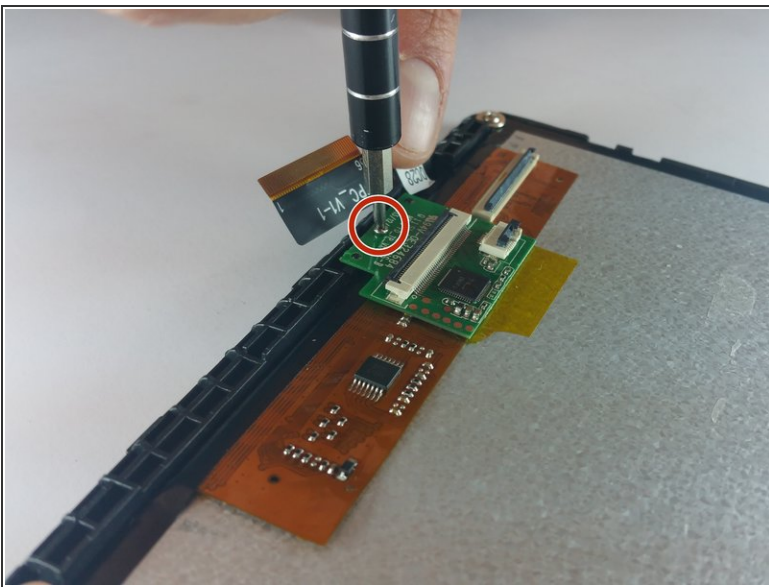


- Remove the one silver screw on the small green circuit board at the bottom of the device.
- Set aside the small circuit board for now.

Step 11



- Remove the two silver screws from the bottom of the device.

Step 12

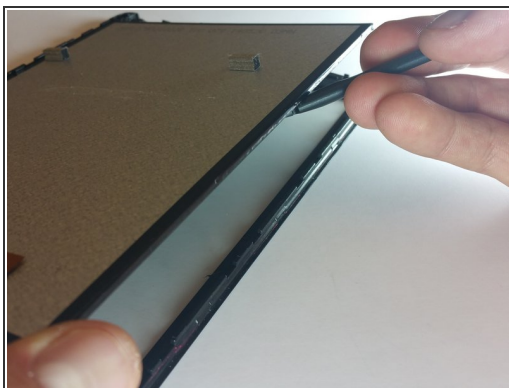

- With the device face down, use a spudger to lift the screen off of the glass from the right side.

Step 13 — Glass



- Separate the glass from the touch screen.

To reassemble your device, follow these instructions in reverse order.