


Nintendo DS Lite Lower LCD Assembly Replacement

Prerequisite guide of Nintendo DS Lite lower LCD assembly.

Written By: Matthew Newsom

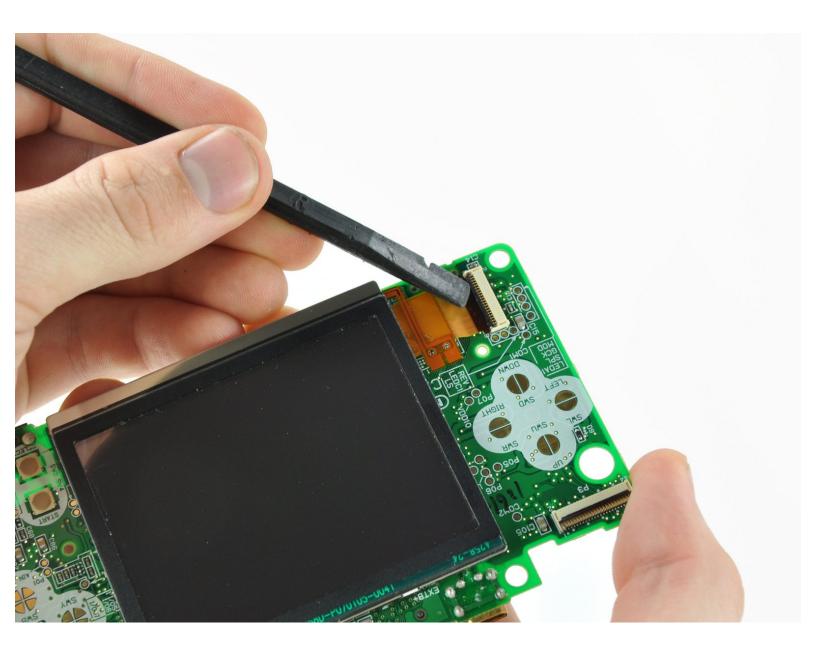

This document was generated on 2020-11-22 11:59:10 AM (MST).


INTRODUCTION

Prerequisite guide of Nintendo DS Lite lower LCD assembly.

TOOLS:Spudger (1)

This document was generated on 2020-11-22 11:59:10 AM (MST).

Step 1 — Lower LCD Assembly

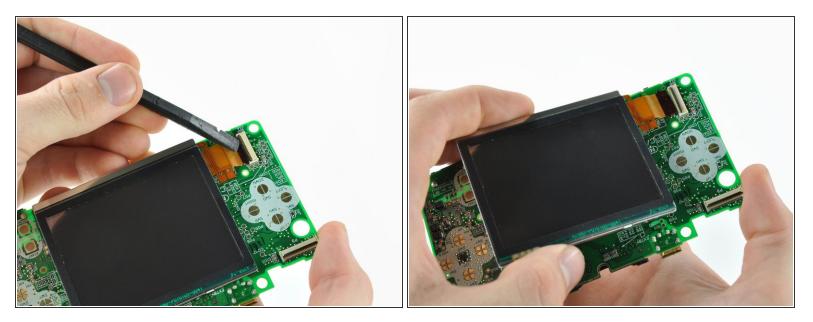

• Use your fingernail or the edge of a plastic opening tool to carefully flip up the lower LCD ribbon cable retaining flap.

Make sure you are flipping up the retaining flap, **not** the socket itself.

- Pull the lower LCD assembly straight away to separate the lower LCD ribbon cable from its socket on the motherboard.
- Remove the lower LCD assembly from the motherboard.
- Mhen reinstalling lower LCD, ensure it has insulation on the back to prevent a short circuit with the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-22 11:59:10 AM (MST).