



# Casio Watchband link replacement/repair

Do you have a Casio Edifice watch with a broken...

Written By: Zach Monroe



# INTRODUCTION

Do you have a Casio Edifice watch with a broken or ill-fitting band? Use this guide to fix or resize the watchband and return the watch to its former glory.


## TOOLS:

[Tweezers](#) (1)  
[SIM Card Eject Tool](#) (1)  
[Hammer](#) (1)

## PARTS:


[Spring Bar Pins](#) (1)

### Step 1 — Links

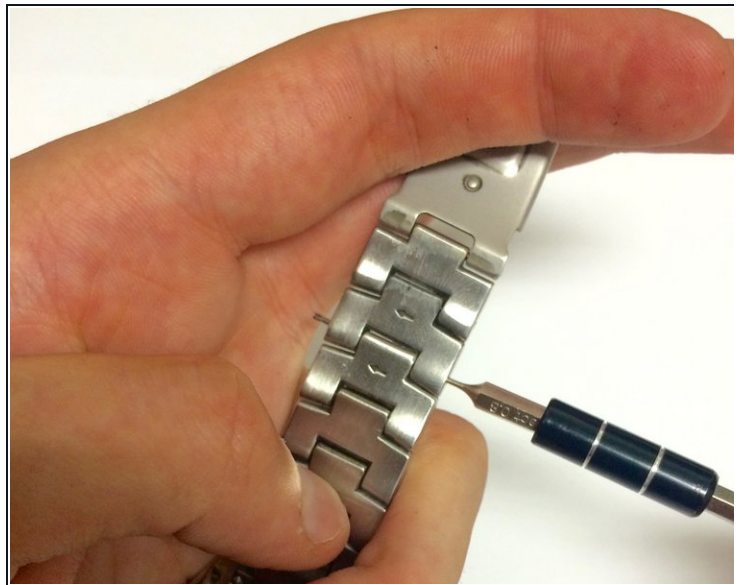


- Locate the hole for the pin you would like to remove.
- Insert the Sim Card Eject tool (a safety pin may work as well) in the hole. Make sure to insert in the hole on the back side of the arrow.

## Step 2

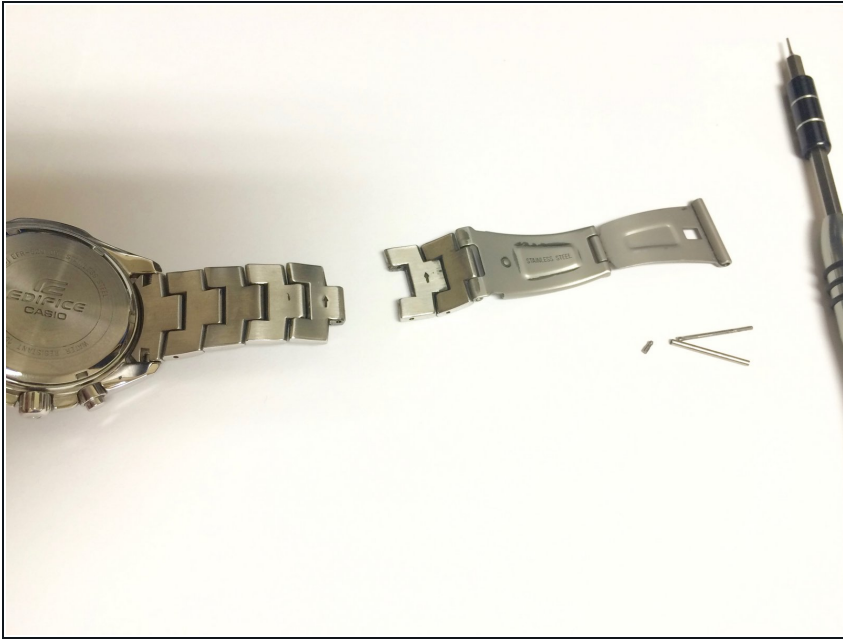

- Determine the desired amount of links you would like to add or remove.

## Step 3

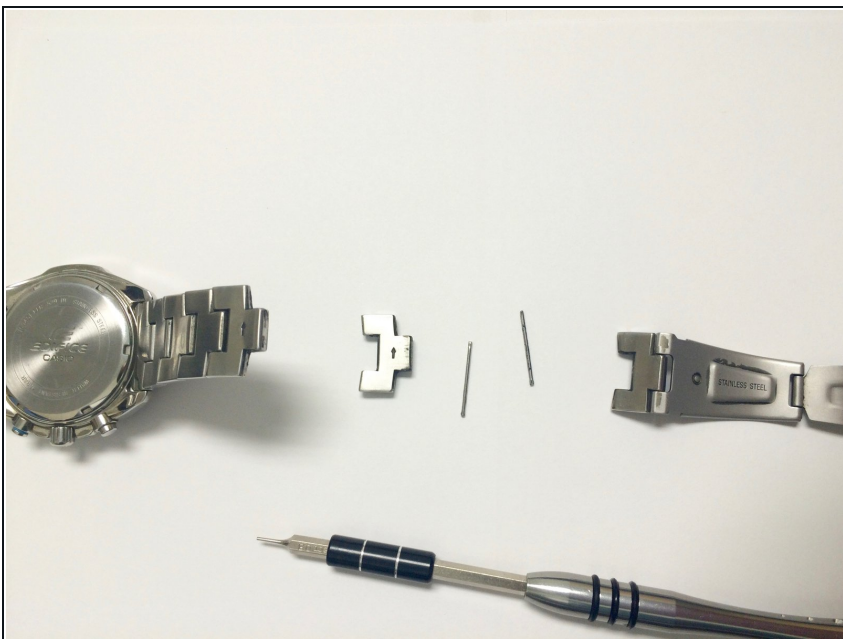

- To remove links:
  - Use the same process used in Step 2 to remove the second link pin.
  - The two link pins and the links should now be detached.




## Step 4




- To add links:
  - Push both link pins back into the watch. Make sure to insert the link pin on the front side of the arrow.
  - Lightly tap a hammer until pins are flush against both sides of the watchband.
- ❗ When adding links, be sure to insert the links at the same time as the link pins.

## Step 5

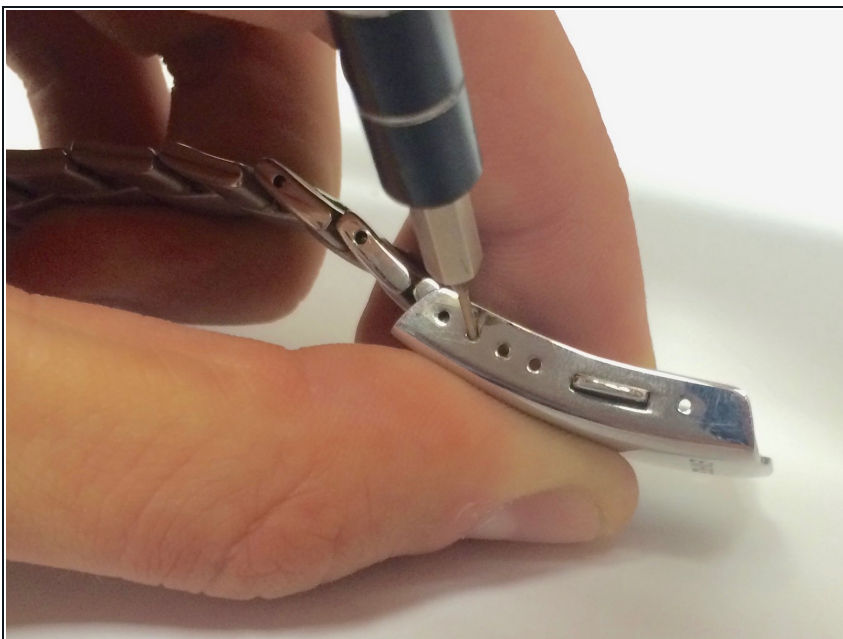


- For micro adjustments, push the Sim Card Eject tool into the adjustable side of the clasp. Carefully move pins to the correct fitting holes.
- ❗ Do your best to not let the pins slip outside the metal clasp as they are difficult to get back in.

## Step 6

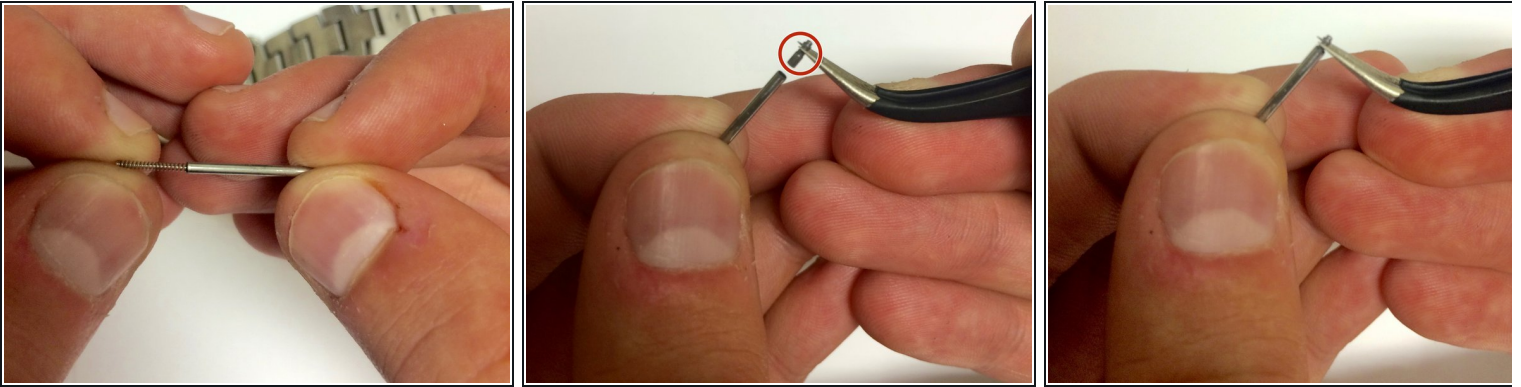


- Insert spring into the spring bar.
- Insert the spring bar pin on both sides of the spring in the spring bar.
- This is the spring bar pin.

## Step 7

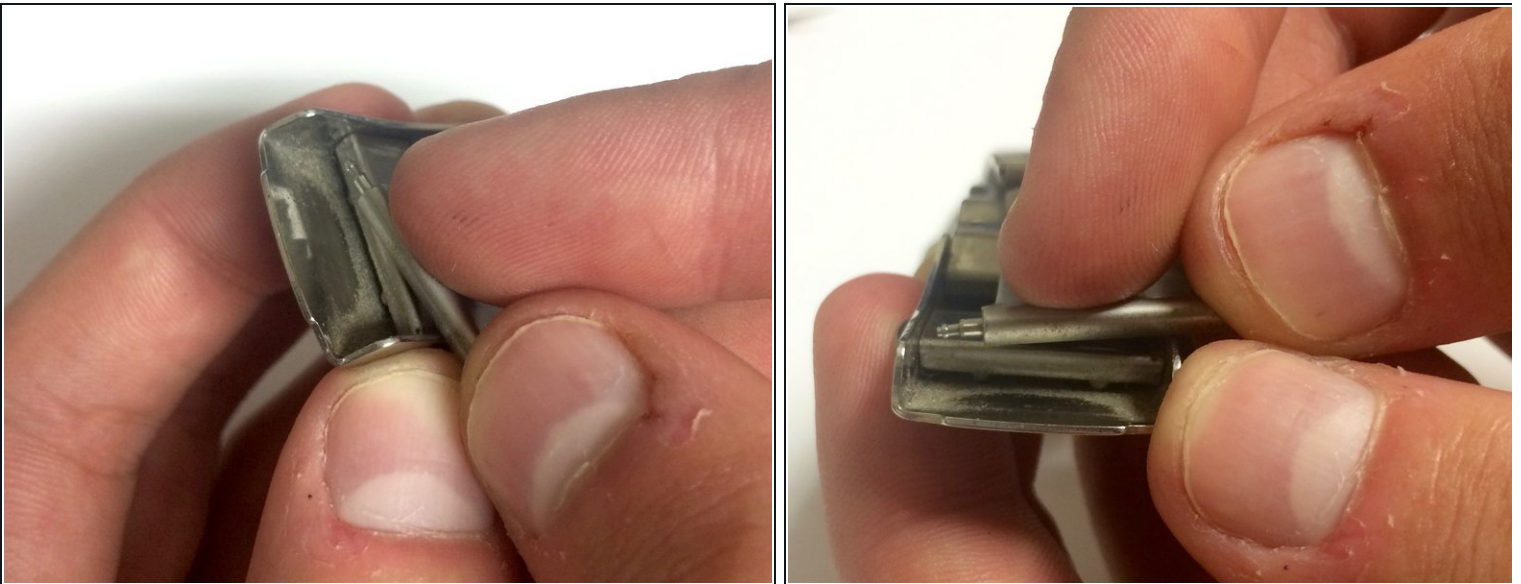

- Put the spring bar and spring bar pins through the end of the clasp.
- Guide one spring bar pin into the hole on the clasp shell. Hold your finger on the other side of the spring bar to keep the parts together.

## Step 8

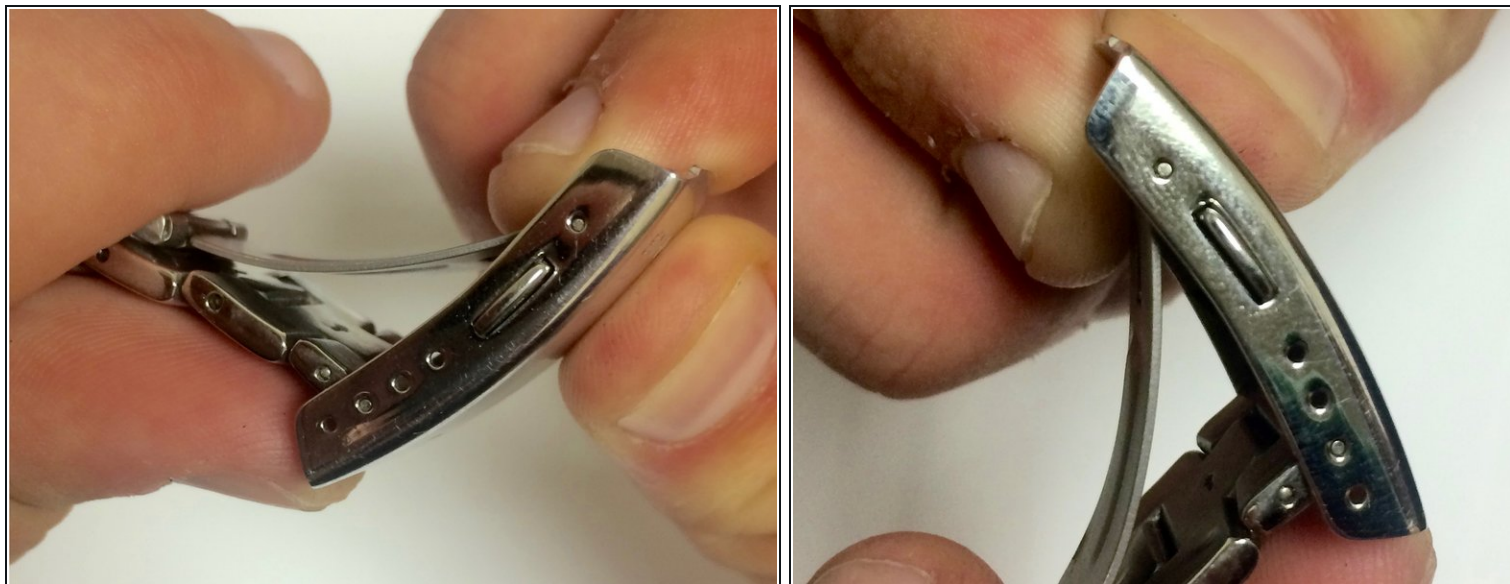

- Squeeze the spring bar so it fits within the metal sides of the clasp.
- Guide the other side of the spring bar into the other hole.

To disassemble the clasp, follow the last 3 steps in reverse order.