




VTech Baby's Learning Laptop Speaker Replacement

Replacing the speaker would add a crisp new sound to your device

Written By: Jordan Smith

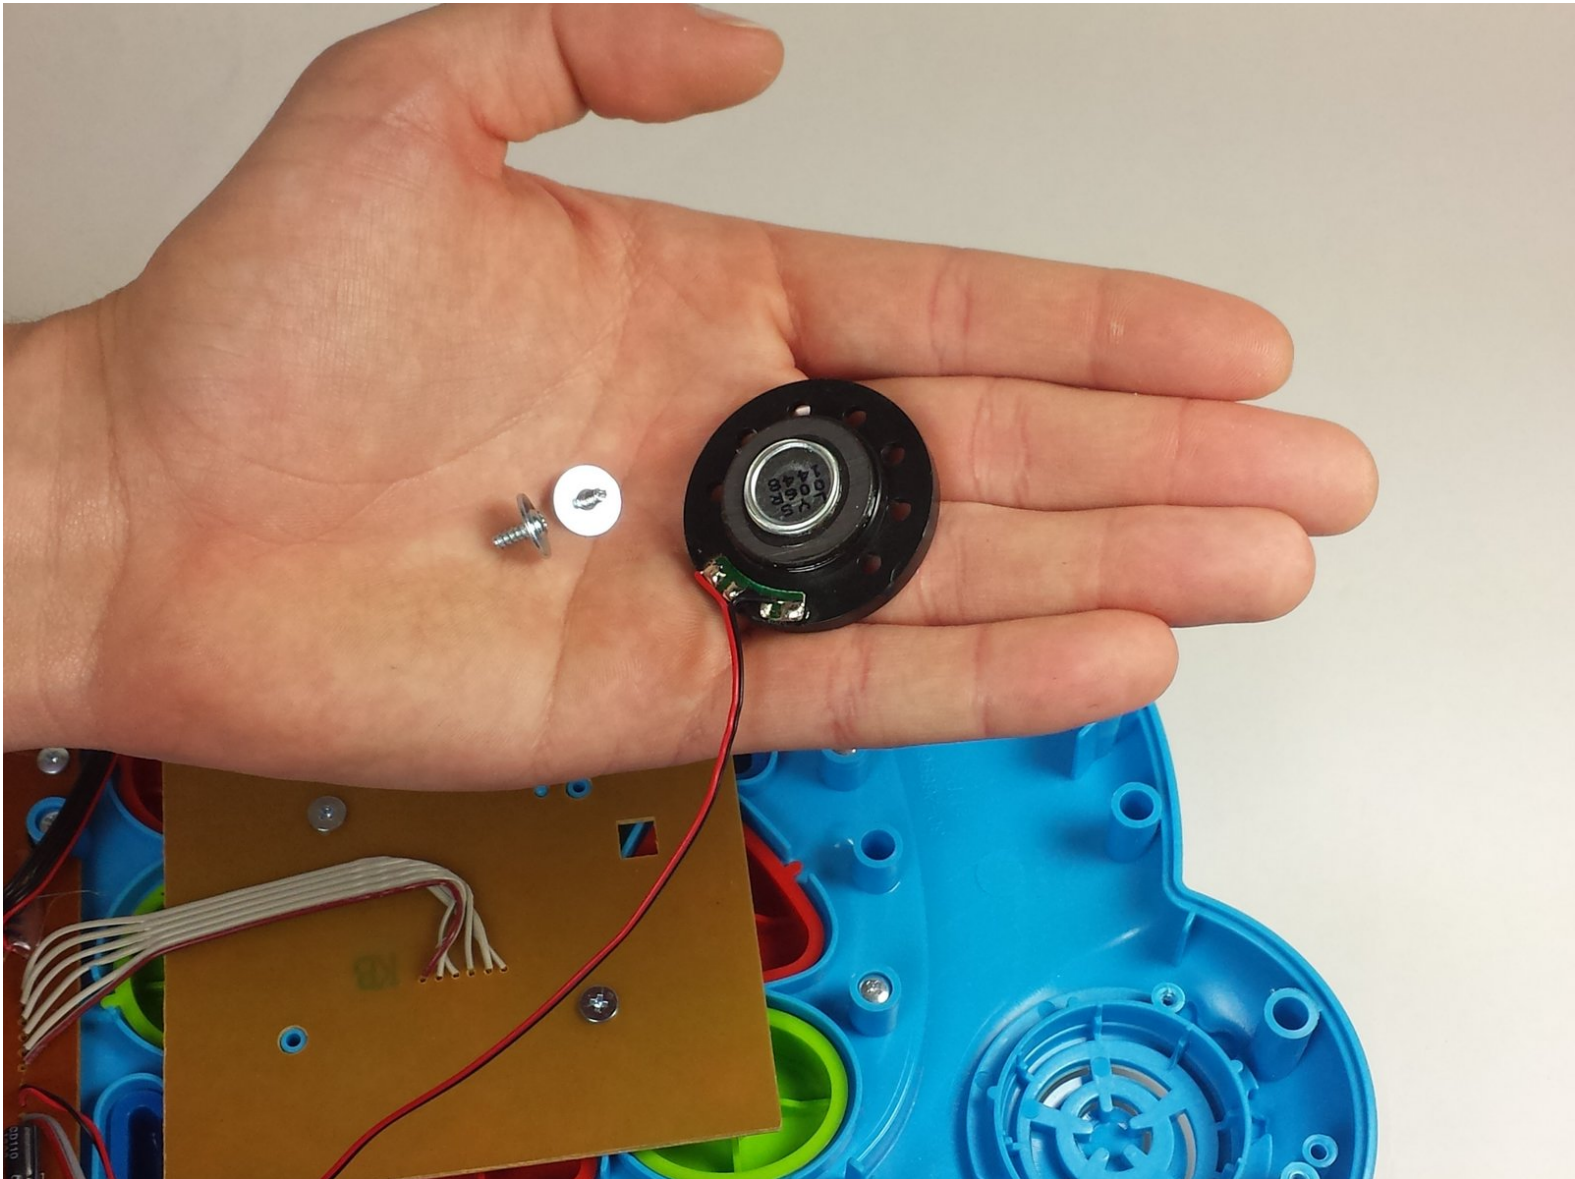

INTRODUCTION


Is the sound for your device distorted, crackling or nonexistent? This guide may be a solution to fix your problem.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Battery and Rear Panel

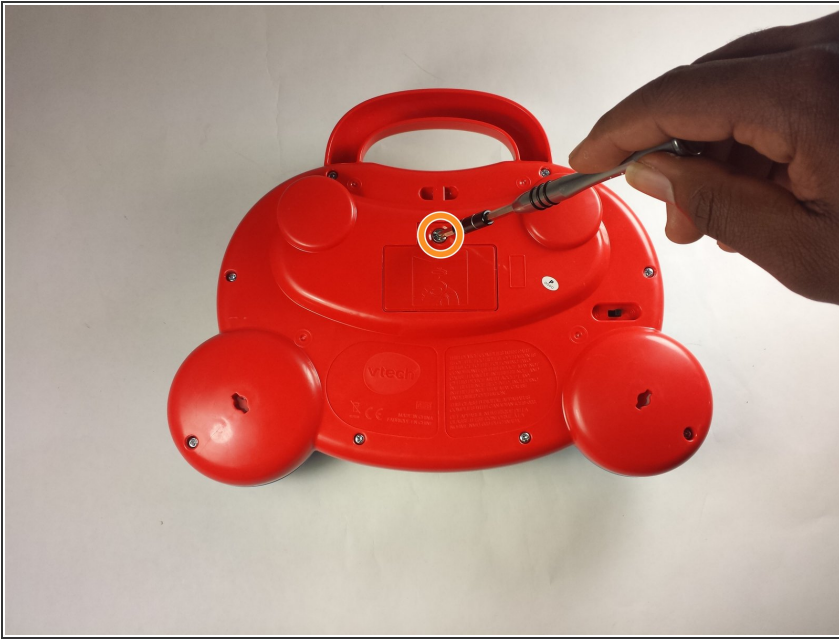


- To remove the battery door, loosen the screw shown using a Phillips #2 screwdriver.
- ⓘ A coin can also be used to loosen the screw.

Step 2

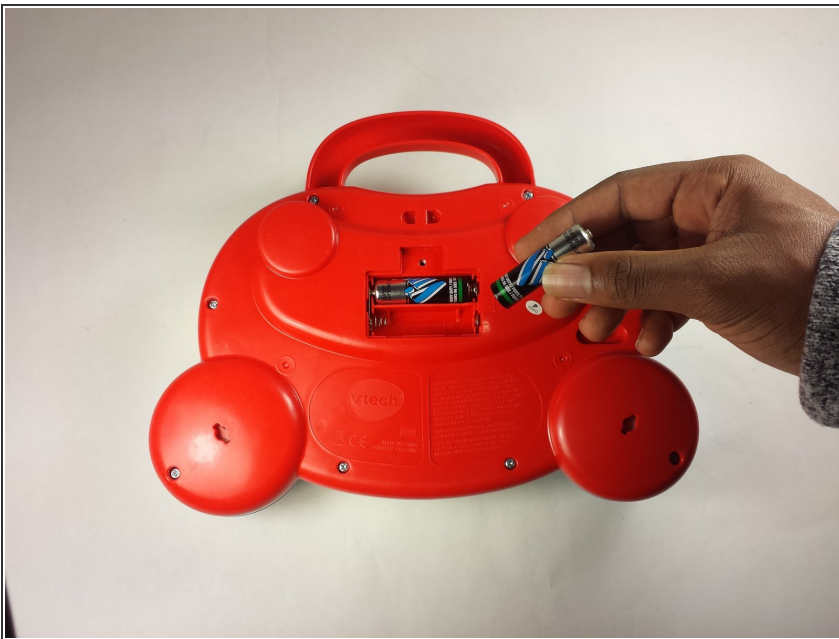


- Remove the battery door.
- Take out the batteries.

Step 3

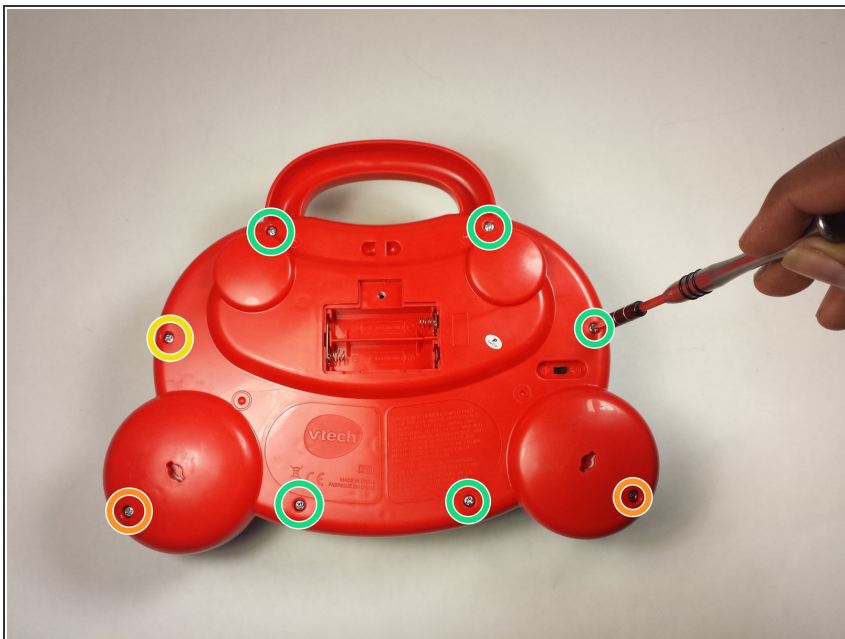



- Remove the rear panel screws using a Phillips #2 screwdriver.
- Two 21.6mm (Long)
- One 9.8mm (Short)
- Five 13.8mm (Medium)

Step 4

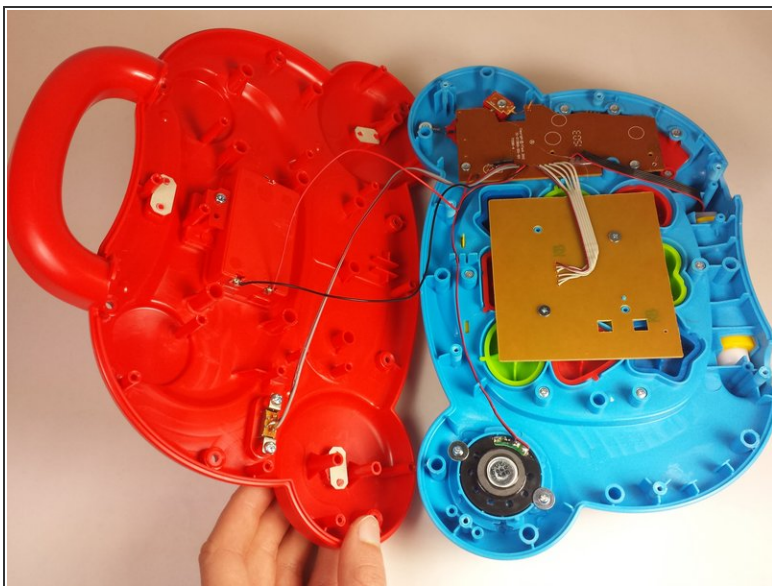



- Gently pull up on the rear panel.
- ⚠ Be careful not to pull on the wire connections.
- Rest the laptop open on the table.

Step 5 — Speaker

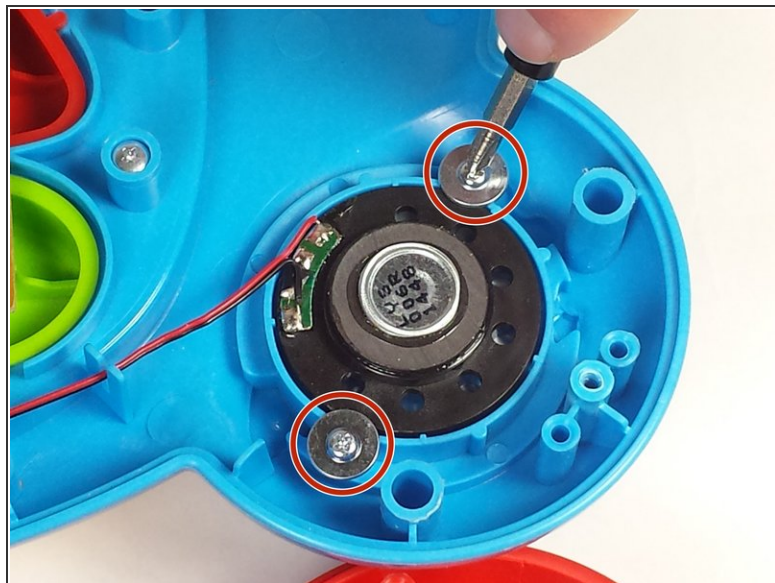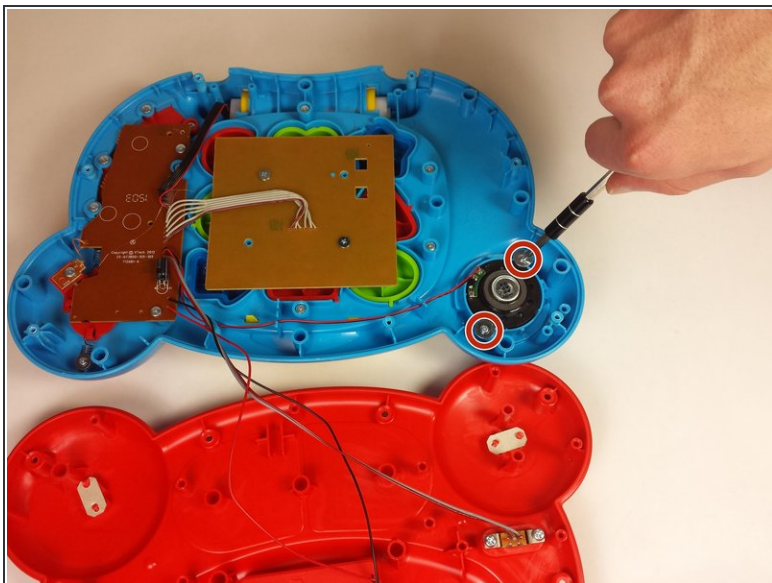

- Use a Phillips #0 screwdriver to unscrew the two 6.0 mm screws on the speaker.

Step 6

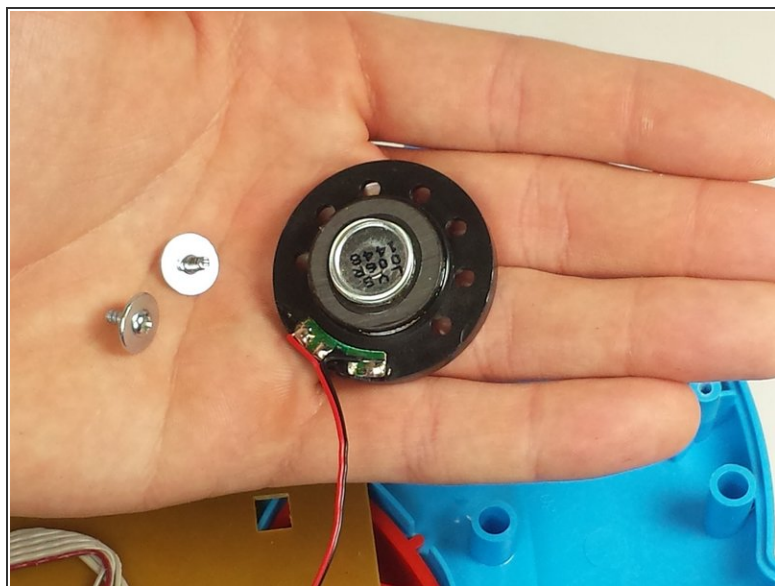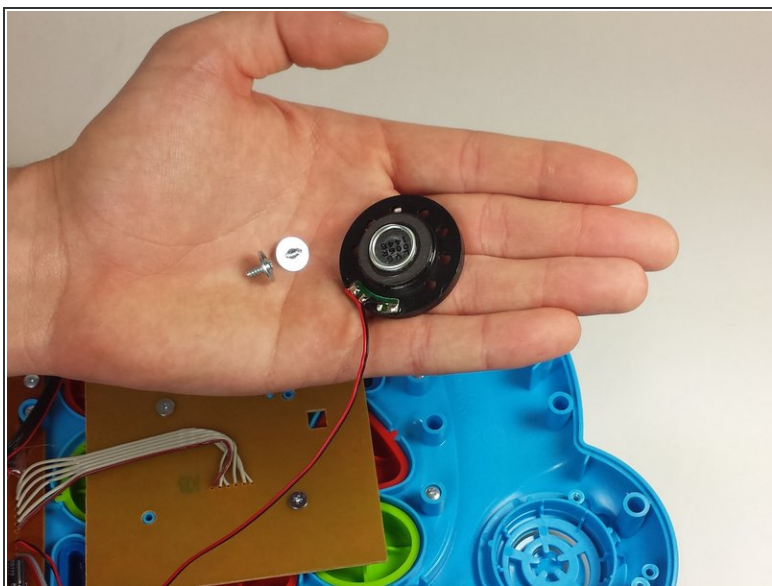

- Remove the two 6 mm screws from the device.
- Remove the speaker.

⚠ Be careful not to damage the wiring.

To reassemble your device, follow these instructions in reverse order.