



Nexus 5 Battery Replacement

Prerequisite for disconnecting the battery.

Written By: Geoff Wacker



INTRODUCTION


Prerequisite-only.



TOOLS:

- [Spudger](#) (1)
-

Step 1 — Battery

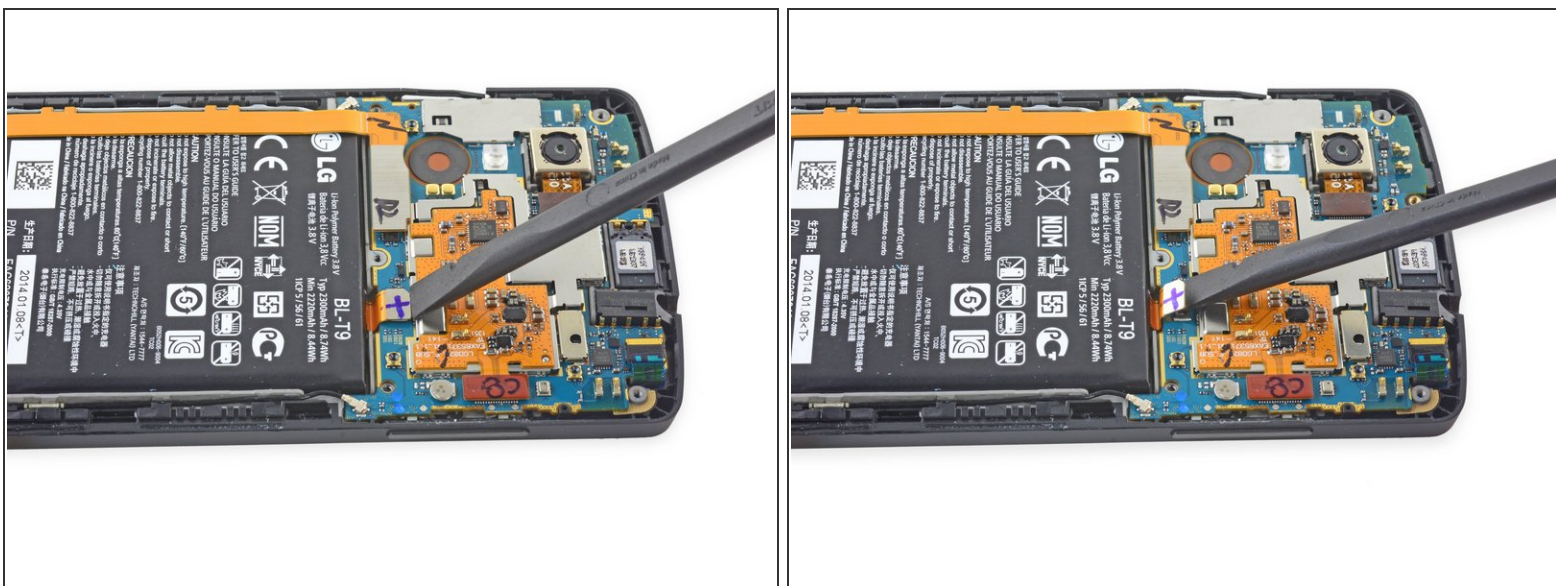

- Use the flat end of a spudger to disconnect the battery connector.

To reassemble your device, follow these instructions in reverse order.