


Astro Mixamp Panel Dial Replacement

Remove panel dials for cleaning or replacement when they stick or don't rotate properly.

Written By: Hope Burns

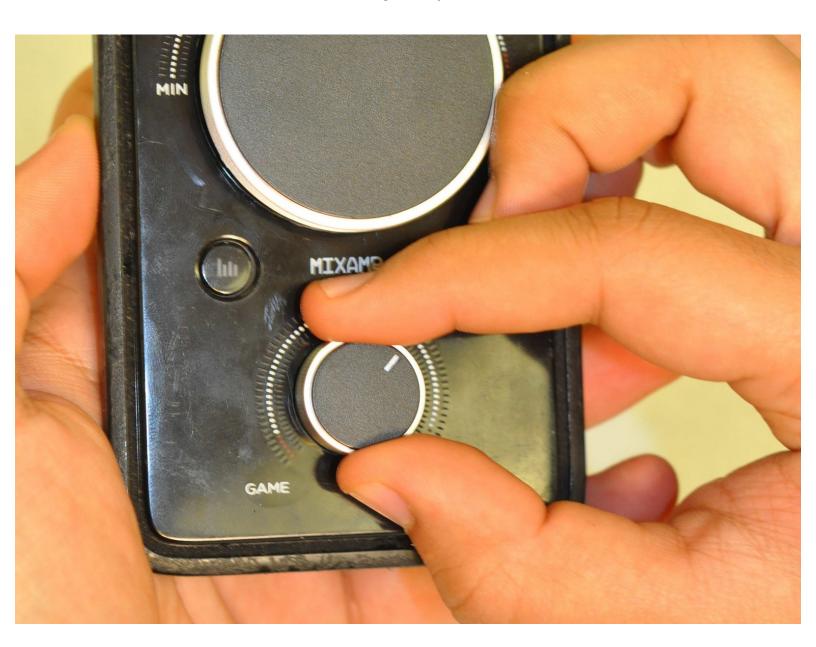

INTRODUCTION

Use this guide to remove the from panel dials from the device.



• Tweezers (1)

Step 1 — Panel Dial





- Grip the dial tightly and pull straight off the device.
- Repeat for the second dial

Step 2





Using tweezers, remove the spacer nuts and washers from each dial post.

To reassemble your device, follow these instructions in reverse order.