


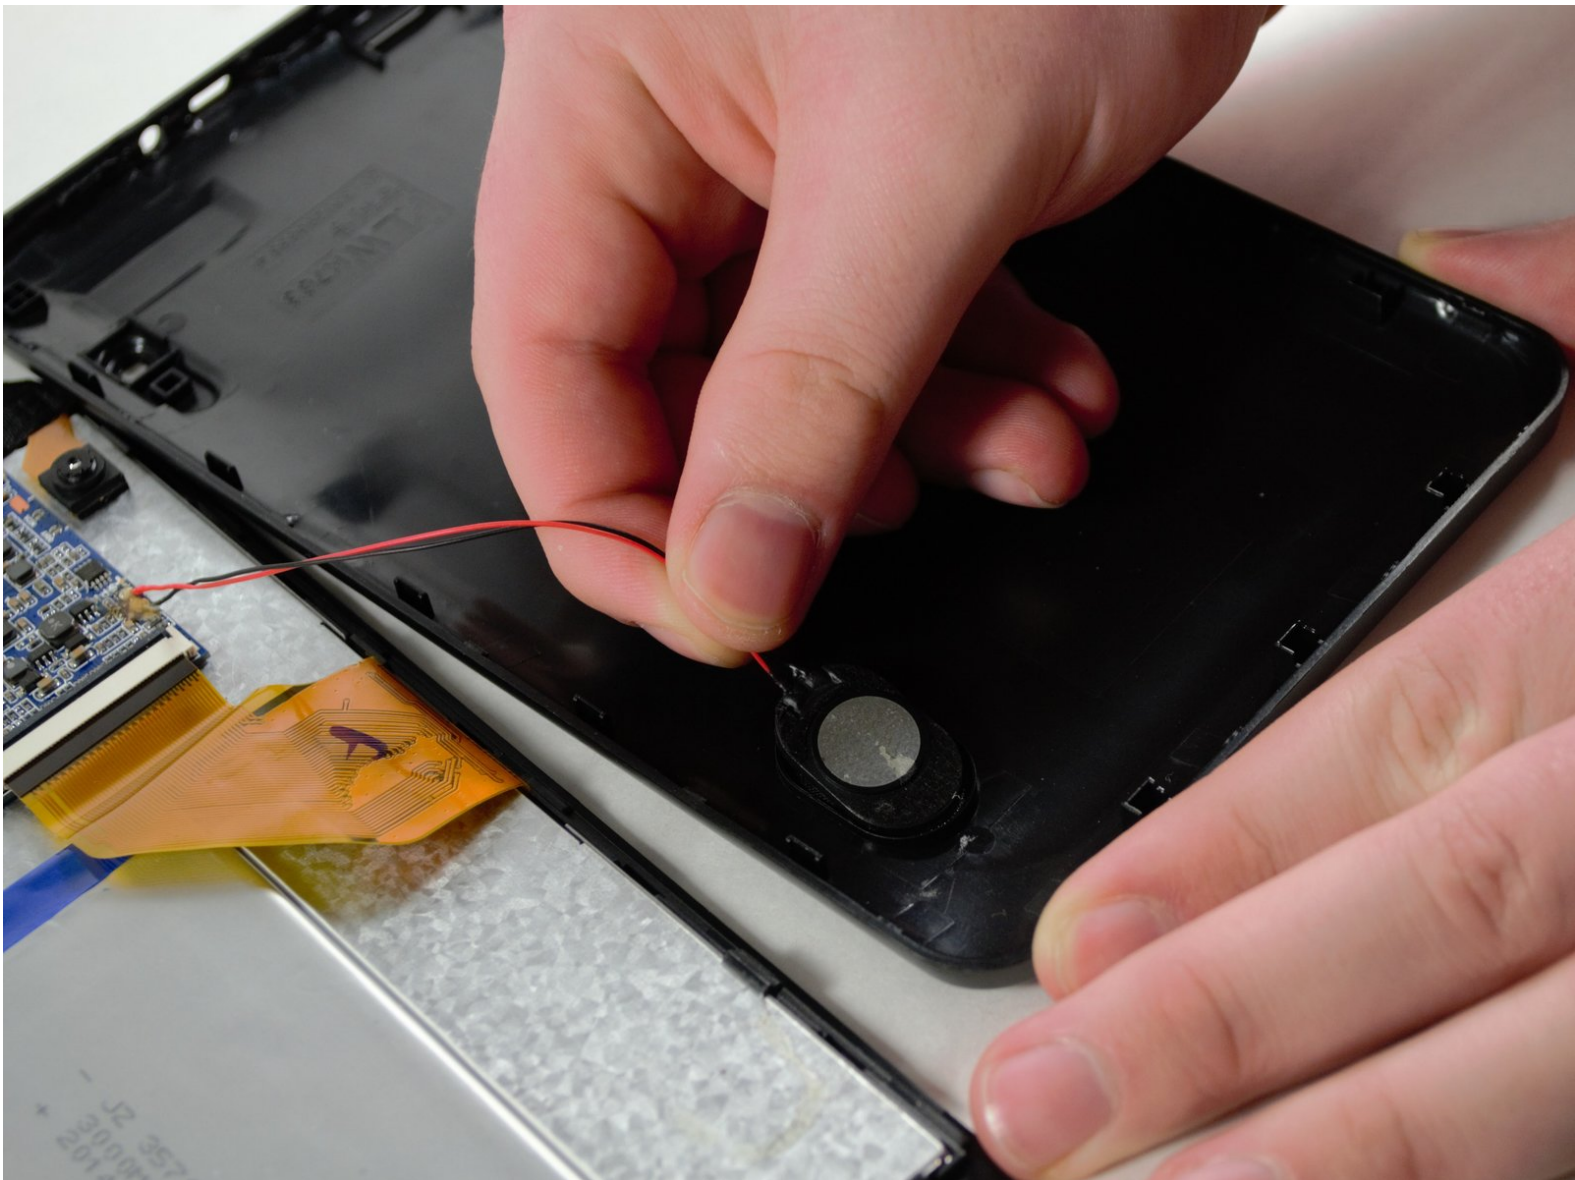

# Hott T725-8G Speaker Replacement

This guide will walk you through how to replace the speaker on your Hott T725-8G.

Written By: Emma Carroll



# INTRODUCTION

This guide will walk you through step by step how to replace the speaker in the Hott T725-8G.

You will need this [Prerequisite Guide](#) before you begin.



## TOOLS:


- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)



## PARTS:


- [Android Replacement Speaker](#) (1)

## Step 1 — Speaker

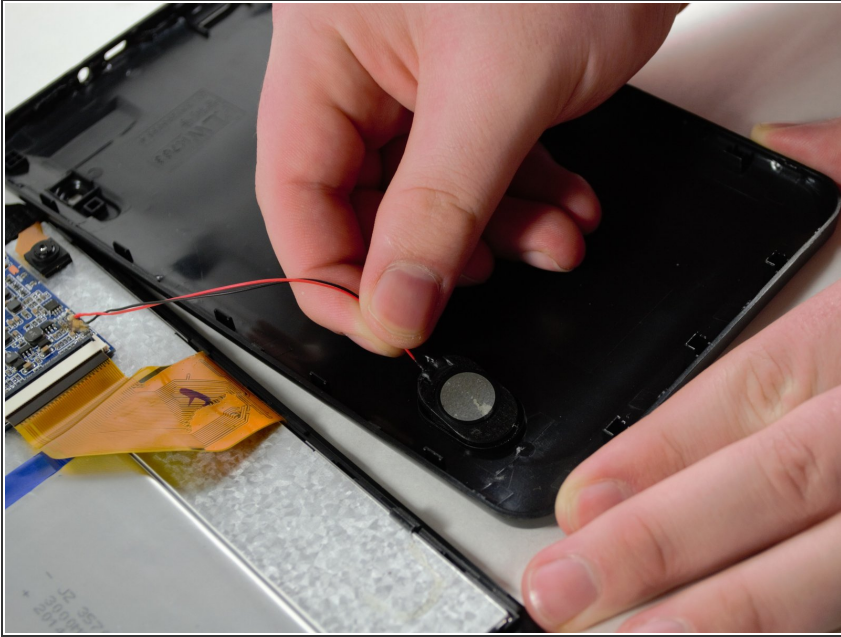

- Gently dislodge the speaker from the back panel so that it is only connected to the motherboard.

## Step 2

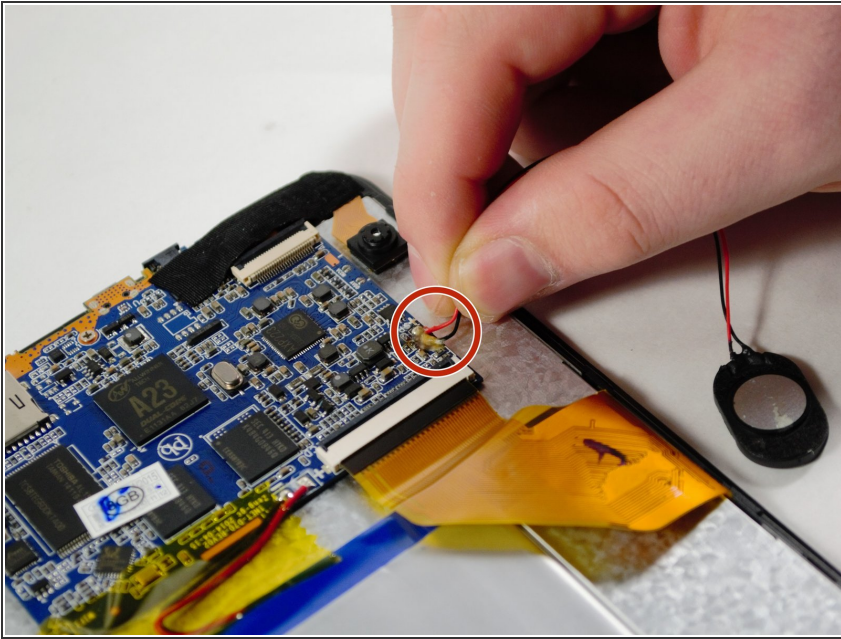

- You can check the connection point between the speaker and the motherboard to see if it is firmly connected (which it should be) using the plastic Spudger.
- Detach the wires using the plastic Spudger to replace the speaker.

To reassemble your device, follow these instructions in reverse order.