



Hott T725-8G Back Panel Replacement

Prerequisite only

Written By: Emma Carroll



INTRODUCTION

This guide will walk you through how to remove the back panel of the Hott T725-8G.

Caution: The speaker is attached to both the front and back panels, so be careful when separating the halves.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel




- Remove the back of the device using the Plastic Opening tool by placing it between the front and back panel and gently prying them apart.

Step 2



- Once the Plastic Opening tool has separated the halves, use your hands to pull them completely apart.
- Be careful when doing this - the speaker is attached to the back panel and has wires running to the motherboard in the front panel.

Step 3

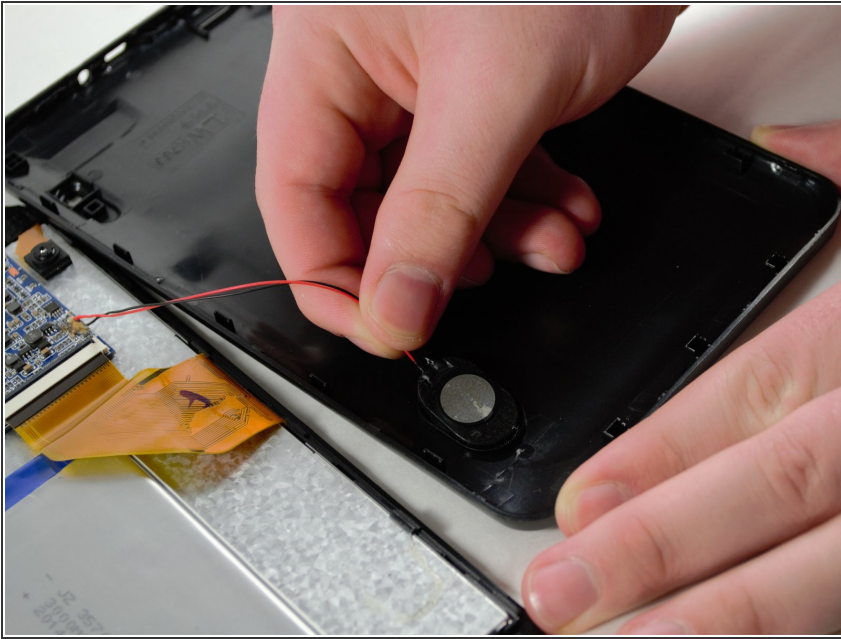

- Carefully dislodge the speaker from the back panel.

To reassemble your device, follow these instructions in reverse order.