



Acer Aspire 5742G Memory stick Replacement

Just as simple as it gets! to work on a laptop,...

Written By: Petter Berget



INTRODUCTION

Just as simple as it gets! to work on a laptop, well there you have the Acer Aspire 5742G and the easiest job to change memory sticks!

[video: <https://www.youtube.com/watch?v=UglJyKlznKk>]



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Memory stick



- Make sure your computer is off and remove the battery with the security tabs shown in the picture

Step 2

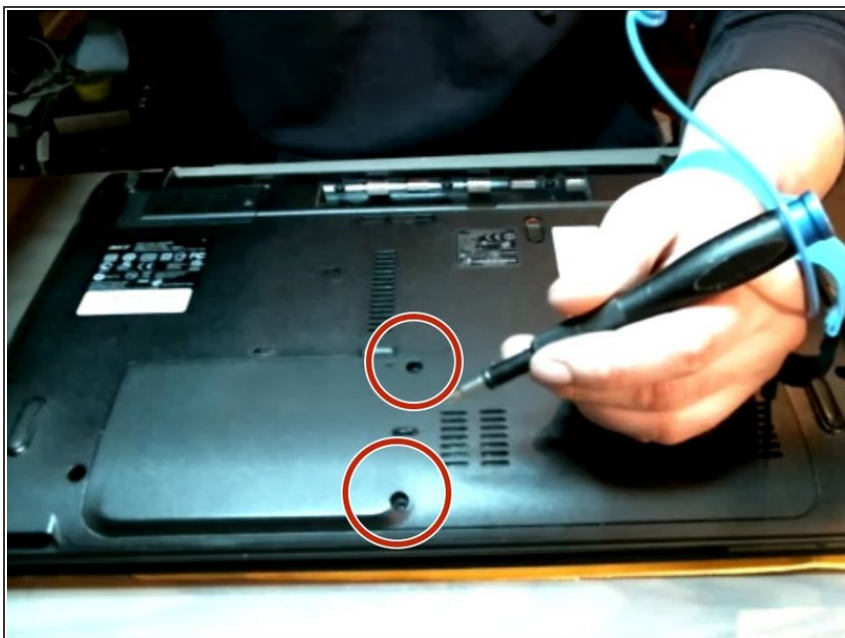

- Remove these philips screws, only two :)

Step 3



- Then from the dented tab, either your finger, card or spudger will work, and start prying GENTLY!
- Easily work your way around.


⚠ WARNING! PLASTIC TABS! be careful not to break them!

Step 4



- ⓘ Now you've removed the cover, you will get access to your Antenna, HDD, and RAM
- Please remove both tabs with the memory stick at the same time

Step 5

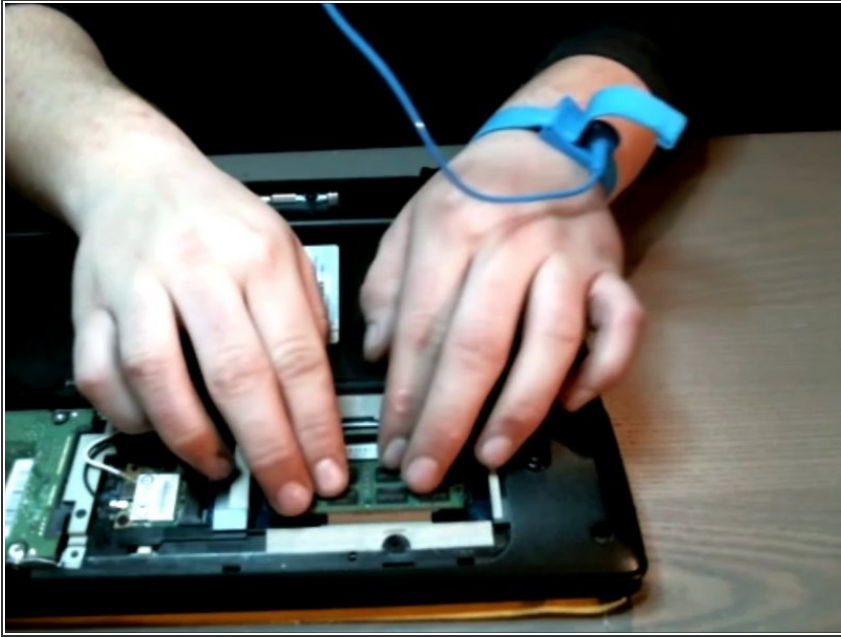

- Now put the new memory stick in!
- When it is in, then gently push it downwards to lock it in place!

⚠ Be aware you have to line up the stick with a pin in the socket!!

To reassemble your device, follow these instructions in reverse order.