



# Technostar Sandwich Toaster Thermal Fuse Replacement

This guide will show you how to replace a thermal fuse of a Technostar Sandwich Toaster.

Written By: charlottevisser63



## INTRODUCTION

A toaster's fuse will often fail over time. This guide will show you how to fix your Technostar Sandwich Toaster.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Pincers](#) (1)
- [Spring Clamps](#) (1)



### PARTS:


- [Thermal fuse 10A 250V Tf225C](#) (1)

## Step 1 — Thermal Fuse




- Open the toaster.
- Remove the four screws which attach the mold.

## Step 2

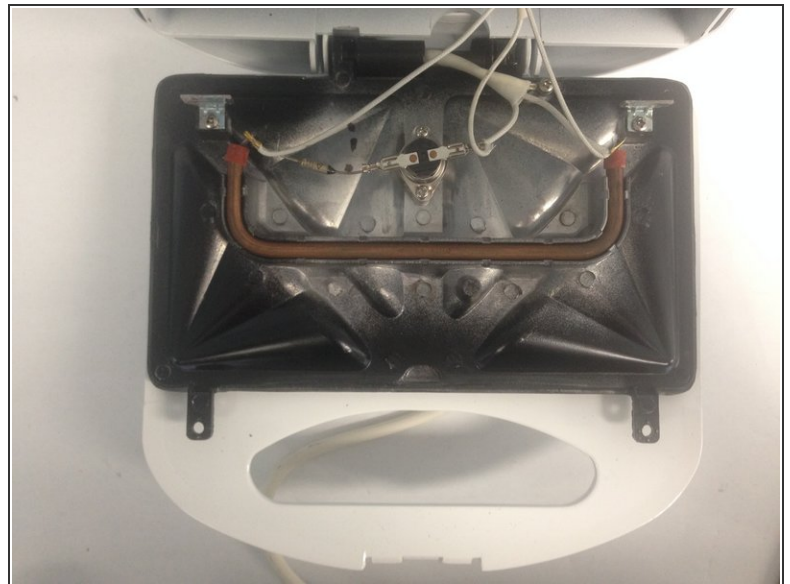



- Remove the mold to get access to the heating coil.

### Step 3

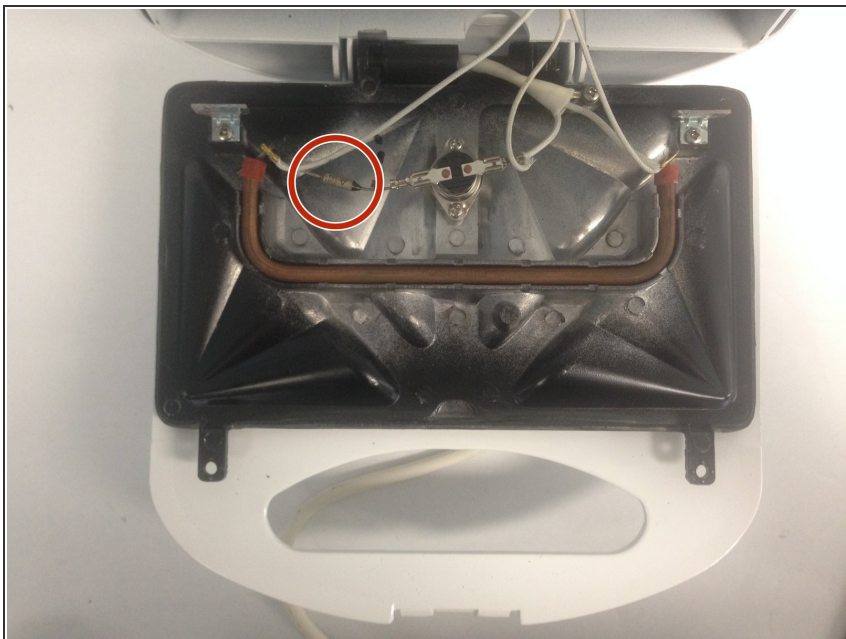



- Find the thermofuse.

### Step 4

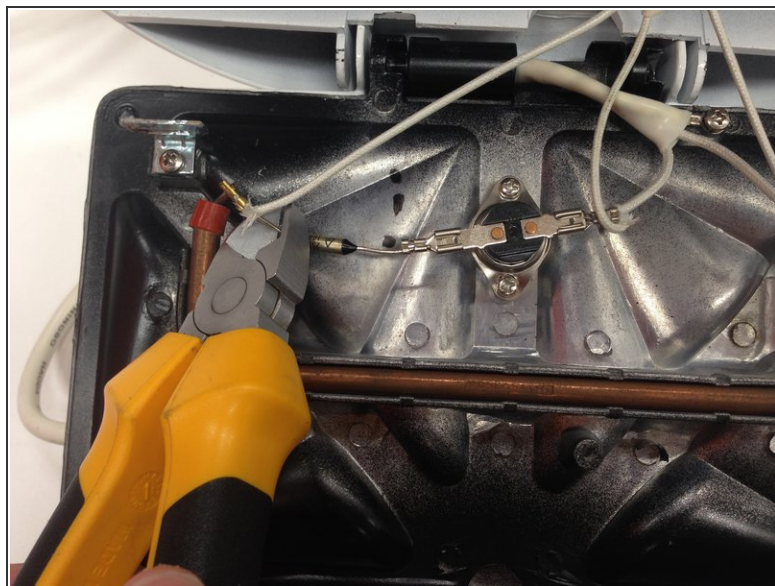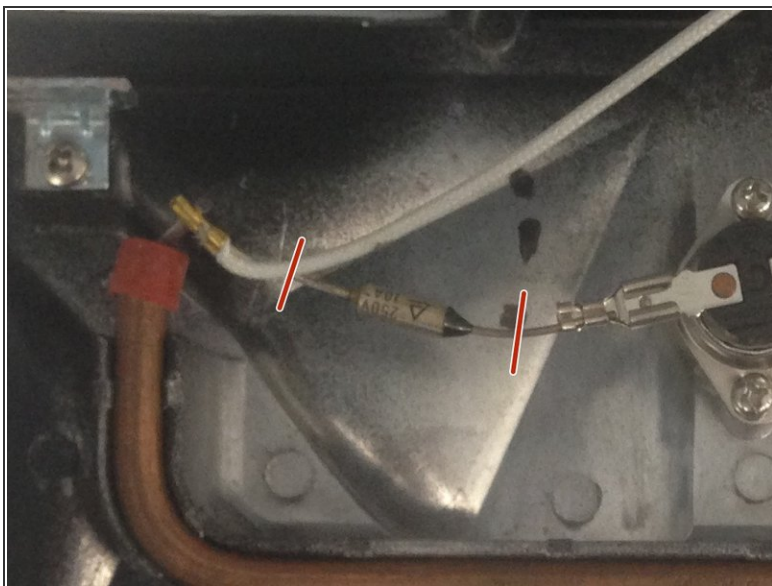

- Cut the two wires that connect to the thermal fuse.

## Step 5

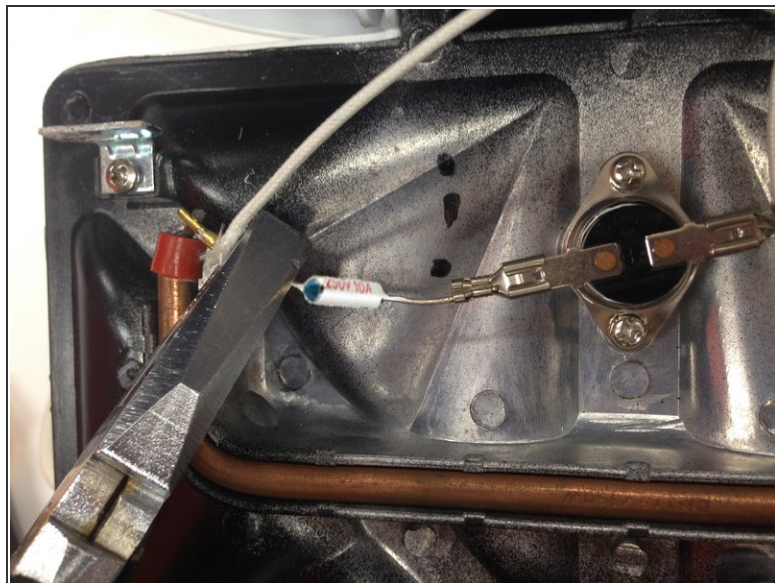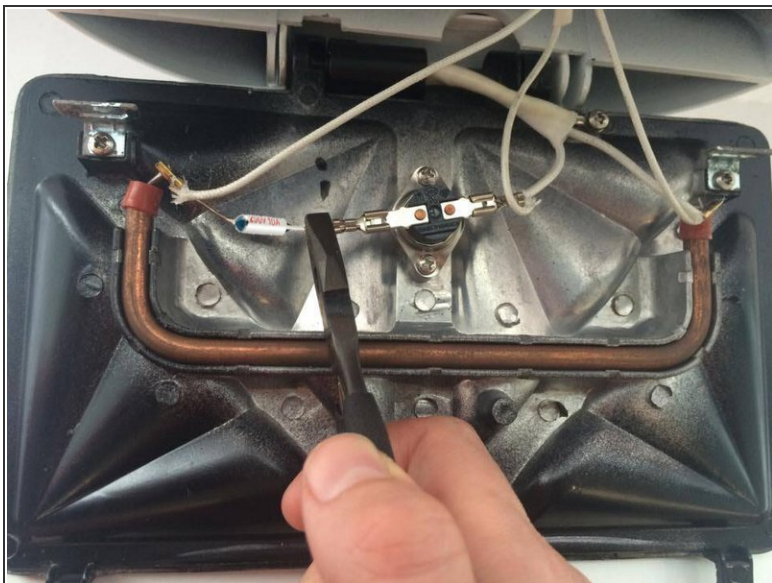

- Align the thermal fuse with the open wires.
- Put the spade connectors over the wires.
- Using pliers, clamp the wires together.

## Step 6



- Replace the molds.
- Replace the four screws which attach the mold.

