


iPad 3 4G SIM Board Ribbon Cable Replacement

Written By: Walter Galan

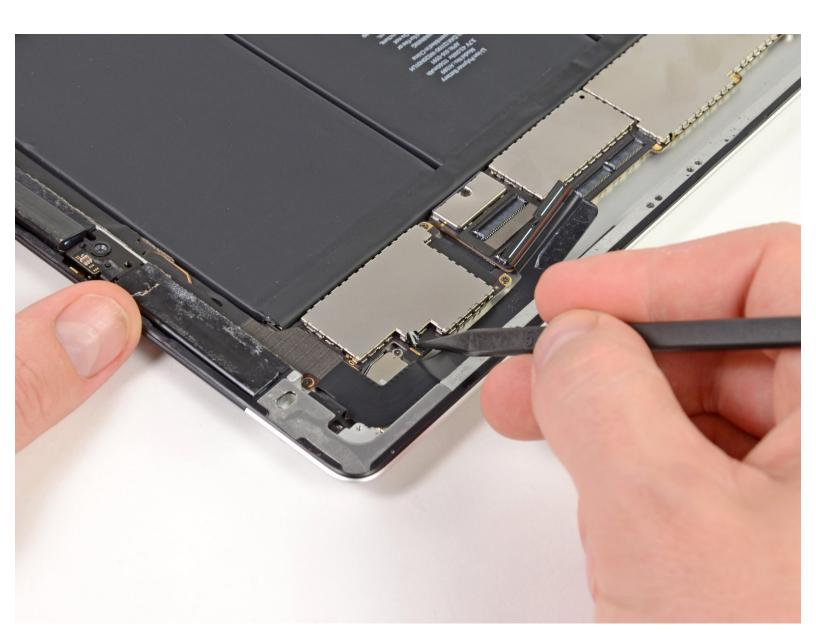

INTRODUCTION

Internal Prereq.



TOOLS:

• Spudger (1)

Step 1 — SIM Board Ribbon Cable



- Peel back and remove the piece of tape covering the SIM board cable ZIF connector.
- Flip up the retaining flap on the SIM board cable ZIF connector.
- Using the tip of a spudger, pull the SIM board cable straight out of its socket on the logic board.

To reassemble your device, follow these instructions in reverse order.