



Lenovo G70-80 Battery Replacement

We plan to teach you how to remove and replace...

Written By: Alexis Buford



INTRODUCTION

We plan to teach you how to remove and replace the battery on your Lenovo G70-80.

Step 1 — Battery




- Turn off the computer.
- Set the computer upside down with the back facing up.

Step 2



- ❗ Located directly below the bottom plate will be two switches near where the battery is located.
- With the battery facing you, slide the battery switch on the right side of the laptop towards the right.
- ❗ To ensure the switch on the right is unlocked, look for a red indicator next to the switch.

Step 3

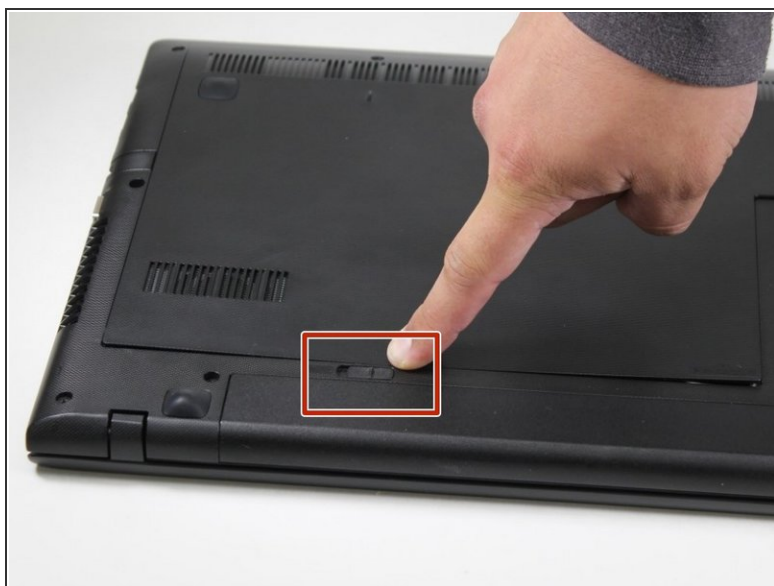

- Slide the left battery release switch to the left.
- While holding the switch to the left, lift the battery to remove it from the computer.

Step 4



- Remove the battery.

To reassemble your device, follow these instructions in reverse order.