


Dell Inspiron 910 Speaker Replacement

If your Dell Inspiron 910 is struggling with...

Written By: Kyle Beekman

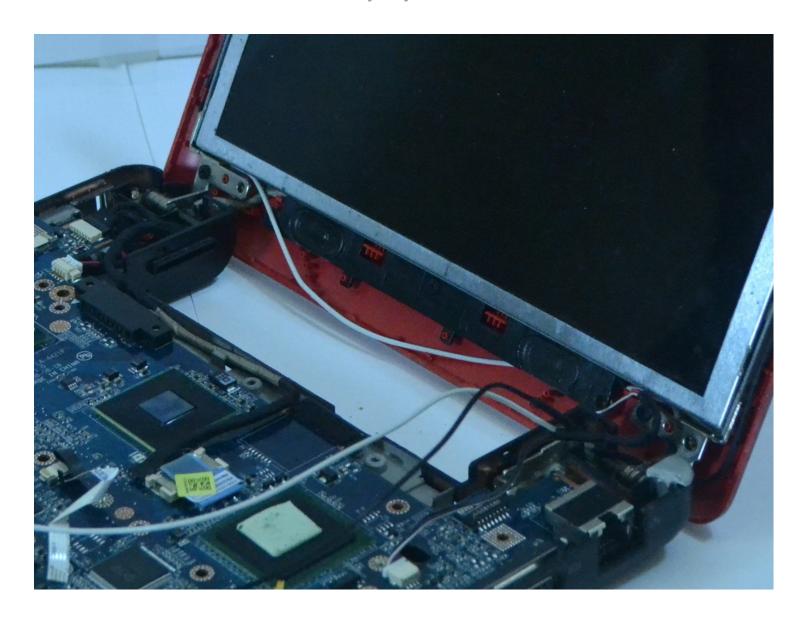

INTRODUCTION

If your Dell Inspiron 910 is struggling with audio issues or becomes silent, looking into a speaker replacement might be the solution. This repair targets sound-related problems, reviving your laptop's auditory experience.

TOOLS:

iFixit Opening Tool (1)
Phillips #00 Screwdriver (1)
Flathead 3/32" or 2.5 mm Screwdriver (1)

Step 1 — Battery



- Flip the laptop so the battery is facing upwards.
- Push the battery release tabs toward the center of the device.
- Remove the battery.

Step 2 — Keyboard




 Remove the two countersunk keyboard screws using the Phillips #00 screwdriver.

Step 3



- Lift up the keyboard using your fingers or a plastic opening tool.
- ↑ Potential for device damage: Do not tear the ribbon cable hidden behind the keyboard.
- Disconnect the cable by sliding the connector ears outward.

Step 4 — Speaker

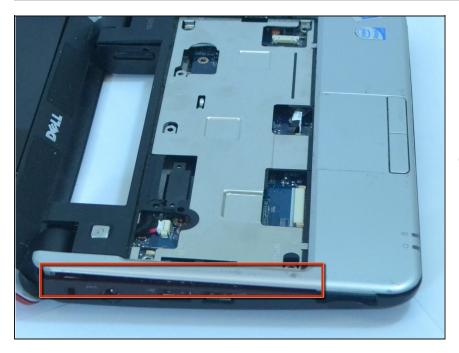


- After removing the keyboard, use the plastic opening tool or other form of leverage to remove the rest of the silver casing.
- i Depending on your model, there could still be some hidden screws on the bottom case of the laptop that hold the palm-rest in place.

Step 5




 Use a plastic tool to carefully pry the silver portion front of the top away from the colored portion.

Step 6

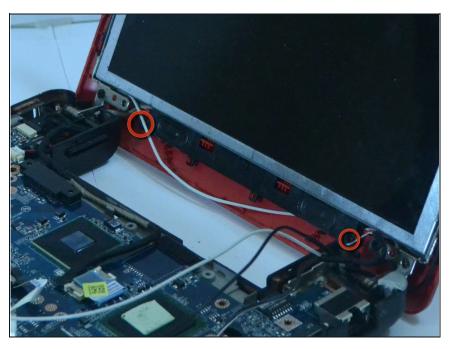

- Using the Phillips #00
 screwdriver, remove the two
 small screws at the bottom
 corners of the speaker assembly.
- (i) Keep track of where you put the screws after you remove them. Keep screws of the same size together and away from screws of different sizes.

Step 7

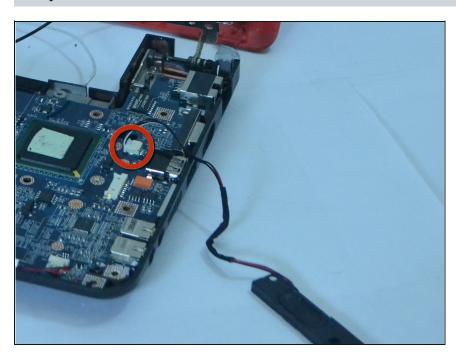

- Slide out the cables connected to the speakers and the base below the keyboard.
- Remove the speakers from the laptop.

To reassemble your device, follow these instructions in reverse order.