




Nokia 8265 Logic Board Replacement

How to take out and replace the Logic Board for...

Written By: Jack

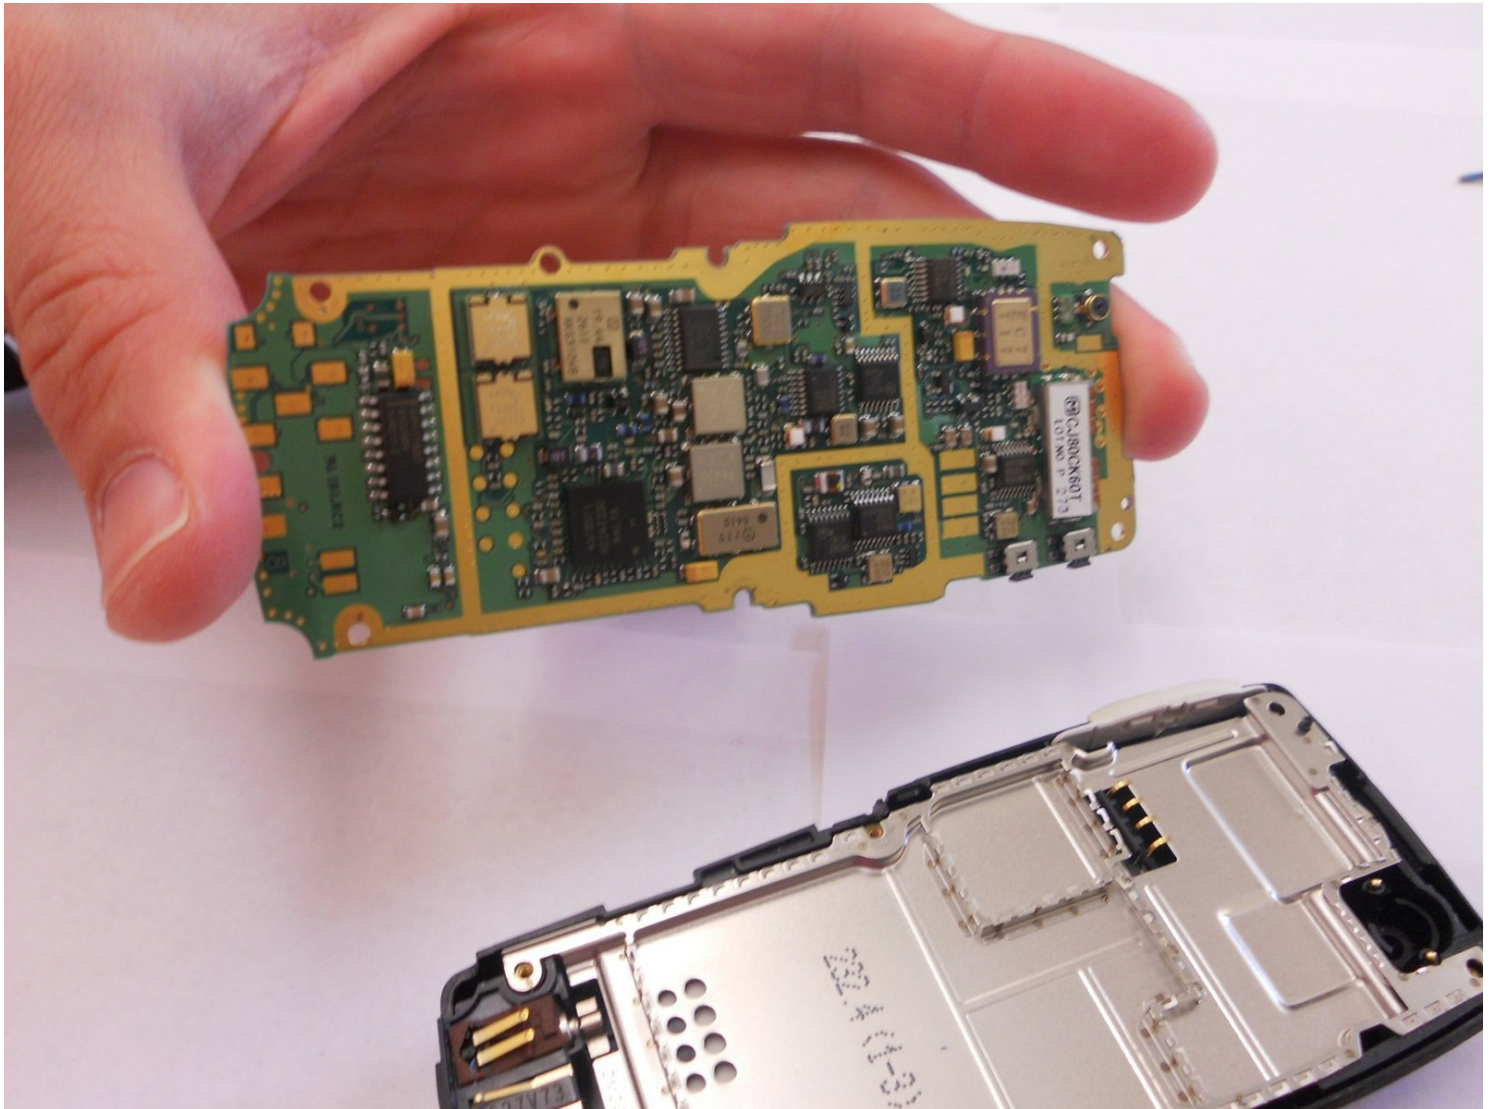

INTRODUCTION

How to take out and replace the Logic Board for the Nokia 8265 Cell Phone.

TOOLS:

[JIS Driver Set](#) (1)

[iFixit Opening Tool](#) (1)

[Replacement Logic Board](#) (1)

Step 1 — Logic Board



- Start by removing the face plate of the phone with a plastic tool.
- Once plastic tool is wedged into the side of the phone, twist and leverage the face plate off.

Step 2




- Once the face plate is off, you will have exposed the keypad.

Step 3



- Simply remove the keypad from on top of the phone, and place it off to the side, leaving just the phone itself remaining


Step 4

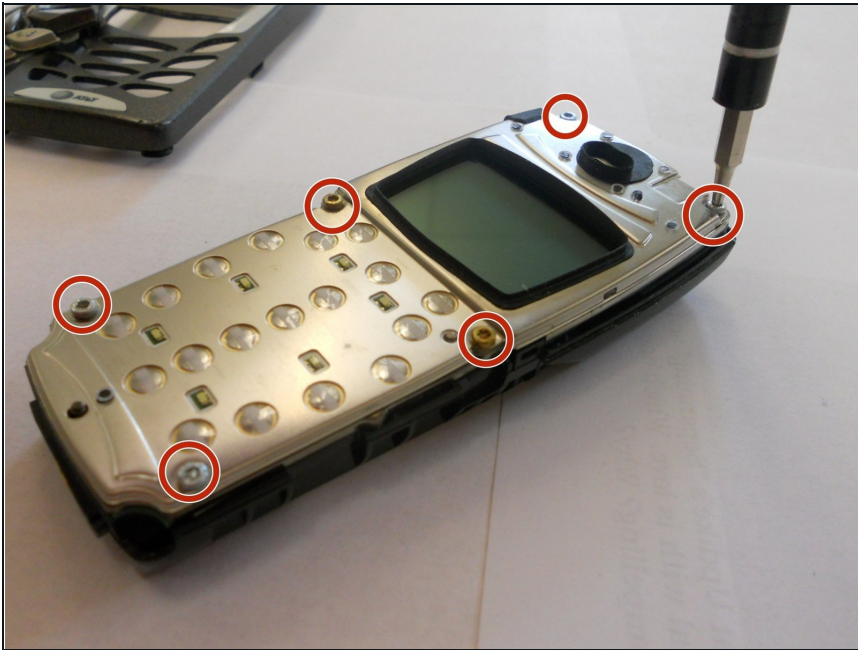

- Taking a very small screwdriver, carefully unscrew the six screws attaching the top layer of the screen from the body of the phone.

☑ Make sure to remember what screw goes where.


Step 5

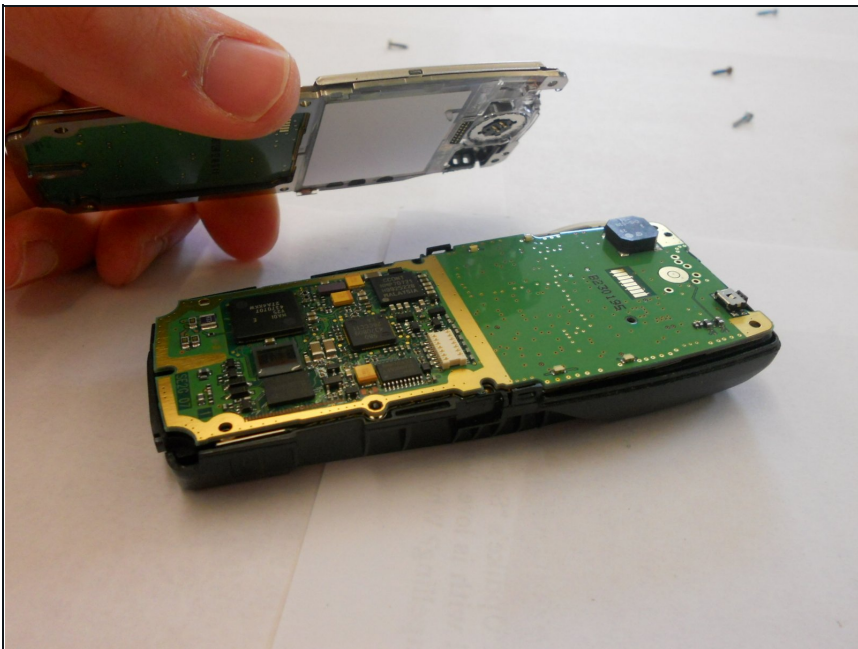

- Once the six screws are removed, you may take off the screen section of the phone, exposing the inner workings of the cell phone.

ⓘ The screen section will be able to be removed after Step 4 is finished.


Step 6

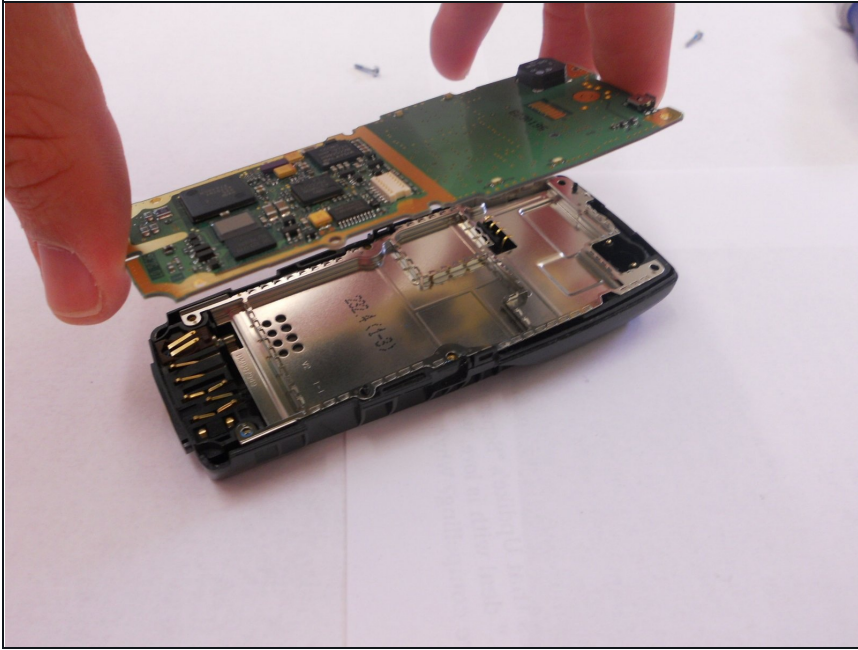

⚠ Be careful when removing the Logic Board from the body, lifting it with fingers on both sides to prevent damage of the Logic Board.


- Separate the Logic Board from the main body of the device.

Step 7

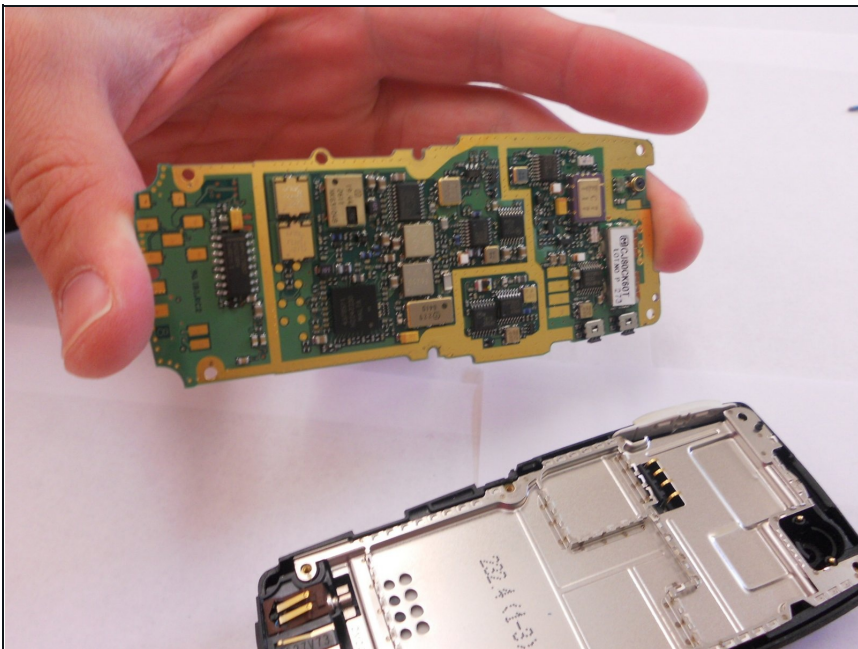

- Insert in the replacement Logic Board, setting the Logic Board carefully back into place.

Step 8

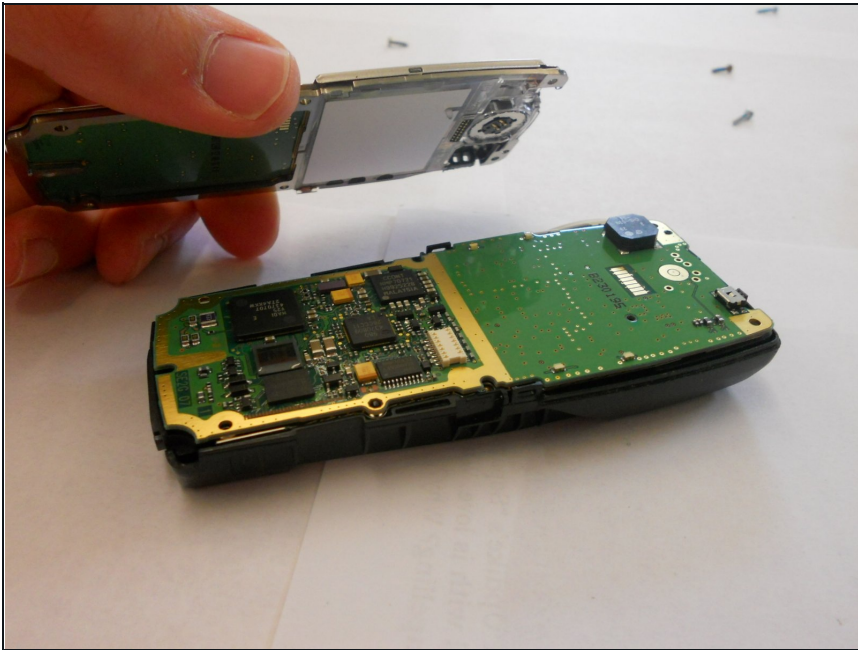

- Set the screen carefully over the body of the phone, avoiding any sliding on the Logic board

Step 9



- Replace screws in the corresponding slots, tightening them till they are not loose.

Step 10



- Replace keypad onto the device

Step 11



- Lastly, you can place the cover onto the phone. You will know when it is in place if you hear a click after placing it in.