



# Motorola 120c Keypad Replacement

This guide shows how to remove the keypad from the Motorola 120c.

Written By: Mitchell Nesheim



---

## INTRODUCTION

This process involves first removing the battery, outer case, and motherboard. After, the keypad can be easily removed.



### TOOLS:

- [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery




- Hold the phone and pull the back latch down towards the bottom.
- Remove the back panel by releasing the latch and lifting from the top.

## Step 2




- Remove the battery by pushing the bottom end towards the top, then lifting up.

## Step 3 — Motherboard

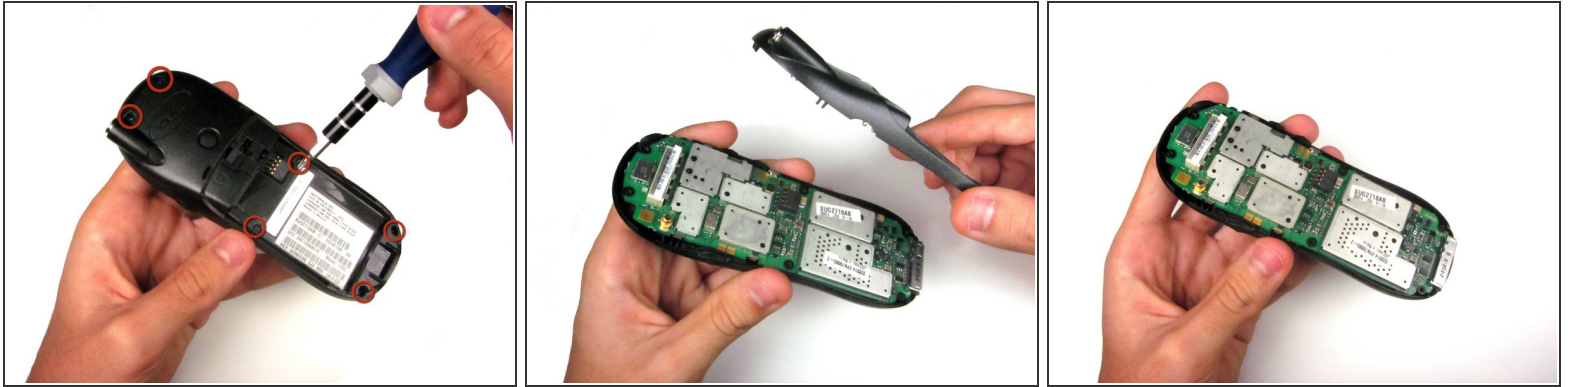

- Once the battery is out, unscrew the six 7.0 mm screws with T-6 screwdriver.
- Once the screws are removed, simply lift the back panel off

## Step 4

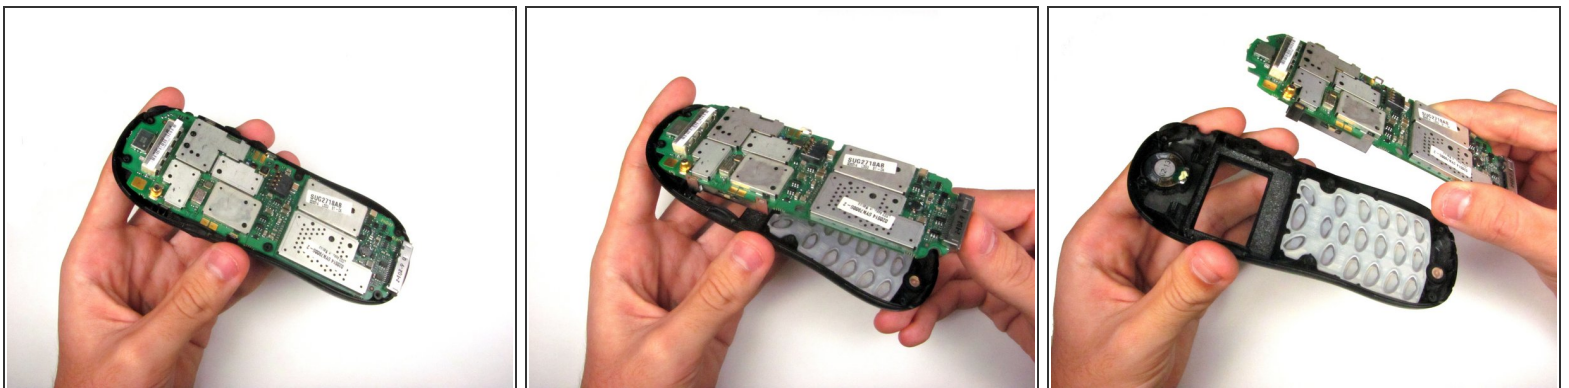

- Remove the motherboard by lifting it up and out.



## Step 5 — Keypad



- Peel the keypad from the front case.
- The keypad may be stuck either to the logic board, below the screen, or the phone case itself.

To reassemble your device, follow these instructions in reverse order.