

Samsung Galaxy S8 Plus Back Glass Replacement

Use this guide to replace the back panel glass...

Written By: Adam O'Camb



INTRODUCTION

Use this guide to replace the back panel glass on the Samsung Galaxy S8 Plus.

If your replacement part does not come with adhesive mounted on it, you will also need to purchase adhesive for the rear glass and the fingerprint reader. You can buy pre-cut adhesive, or thin high-bond tape.

PARTS: TOOLS: Spudger (1) Galaxy S8+ Rear Glass Panel/Cover (1) Galaxy S8+ Rear Glass Panel/Cover iOpener (1) Original (1) iFixit Opening Picks (Set of 6) (1) Galaxy S8+ Rear Cover Adhesive (1) Suction Handle (1) Galaxy S8+ Fingerprint Sensor (1) Tweezers (1) Tesa 61395 Double-Sided Tape (1) Thin, high-bond tape is required if the replacement part does not come with adhesive. Galaxy S8/S8+ Fingerprint Sensor Adhesive Gasket (1)

Step 1 — Back Glass



- Opening your phone will compromise its waterproof seals. Have replacement adhesive ready before you proceed, or take care to avoid liquid exposure if you reassemble your phone without replacing the adhesive.
- Prepare an iOpener and heat the back of the phone along its left edge for about two minutes. This will help soften the adhesive securing the back cover.
- i You may need to reheat and reapply the iOpener several times to get the phone warm enough. Follow the iOpener instructions to avoid overheating.
- ⚠ A hair dryer, heat gun, or hot plate may also be used, but be careful not to overheat the phone—the OLED display and internal battery are both susceptible to heat damage.





- In the following steps, you'll be cutting through the adhesive securing the back cover.
- i The adhesive is laid out as seen in the first image, which shows the inside of the cover after it has been removed.
- As seen from outside the phone, you'll be slicing through the adhesive in the areas shown:
 - Thick portions of adhesive
 - Thin areas of adhesive
 - Avoid prying or slicing in this area, to protect the fingerprint sensor flex cable.



- Secure a suction cup to the back cover, as close to the heated edge as possible.
- *i* The suction cup will not make a good seal on the curved portion of the glass, so avoid putting it on the very edge.
- (i) If the phone's back cover is cracked, the suction cup may not stick. <u>Try lifting it with strong tape</u>, or superglue the suction cup in place and allow it to cure so you can proceed.
- Lift the back cover's left edge with your suction cup, opening a slight gap between the back cover and the frame.
 - (i) This may require a significant amount of force, but you only need to open a very slight gap with the suction cup to insert your tool.
 - (i) If you have trouble, apply more heat to further soften the adhesive, and try again. The adhesive cools very fast, so you may need to heat it repeatedly.
 - ⚠ If you're using an iOpener, follow <u>instructions</u> to avoid overheating it, or the gel pack may burst.



- Insert an opening pick into the gap.
- \triangle The rear glass can break if you use too much force or attempt to pry with metal tools.
- (i) Optionally, once the pick is inserted, you can add a few drops of isopropyl alcohol into the gap to help weaken the adhesive in the following steps.



- Slide your opening pick along the left edge of the phone to slice through the adhesive securing the back cover.
- (i) Afterward, it may help to leave the pick in place and grab a second pick as you proceed to the next step. Leaving the pick inserted can help prevent the glue you just separated from re-adhering.



- Continue slicing through the adhesive along the bottom edge of the phone.
- (i) Re-heat the back cover as needed to prevent the glue from cooling and hardening.
- (i) The glued area is larger here, so you'll need to insert your pick farther into the phone to fully separate it.
- Again, it may help to leave the opening pick in place and grab another one for the following step.

Step 7



• Slice through the remaining adhesive along the top edge and right side.

⚠ You can damage the fingerprint sensor's flex cable if you insert your pick too far in this step. Work carefully and use the diagram in step 2 for guidance.



 \triangle Don't try to fully remove the back cover yet.

• Lift the back cover from its left edge and hinge it open slightly.


Step 9



• Use the point of a spudger to pry up and disconnect the fingerprint sensor flex cable.



- During reassembly, in order to reconnect the fingerprint sensor cable, first angle the back cover into position until the cable connector lines up perfectly over its socket.
- Then, use the flat end of your spudger to gently snap the connector into place by pressing it straight down.
 - (i) If you have slender hands, you may be able to press the connector into place with your finger. Just be careful not to strain the cable.
- (i) This takes patience and a bit of practice. Don't rush it or attempt to force the connector into place.

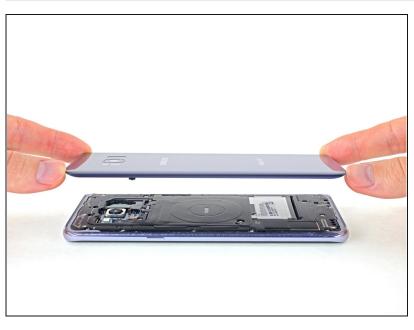


- Remove the back cover.
- To install a new back cover:
 - Use tweezers to peel away any remaining adhesive from the phone's chassis. Then clean the adhesion areas with high concentration isopropyl alcohol (at least 90%) and a lint-free cloth to prep the surface for the new adhesive.

- Peel the adhesive backing off of the new rear glass, carefully line up one edge of the glass against the phone chassis, and firmly press the glass onto the phone.
- To reinstall the back cover, or to install a back cover without pre-installed adhesive, <u>follow</u> this guide.
 - i Be sure to turn on your phone and test your repair before installing new adhesive and resealing the phone.
- if desired, you may reinstall the back cover without replacing the adhesive.


 Remove any large chunks of adhesive that might prevent the back cover from sitting down flush. After installation, heat the back cover and apply pressure to secure it. It won't be waterproof, but the glue is usually more than strong enough to hold.
- You may also need to transfer the camera bezel to your new part. If that's the case, follow our camera bezel replacement guide.

Step 12 — Back Glass



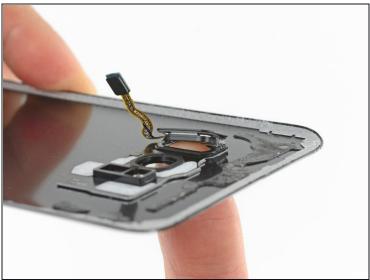

- If you're installing a new rear glass panel, you'll also need to transfer the fingerprint sensor to your new rear glass panel as follows:
 - Reheat an iOpener and apply it to the fingerprint sensor, in order to soften the adhesive securing it to the rear glass.
 - Push gently but firmly against the fingerprint sensor from the outward-facing side of the glass panel, until the adhesive securing it separates.
- (i) If you have trouble pushing the fingerprint sensor out, apply more heat, and/or carefully slide a pick along the edge of the sensor to cut some of the adhesive.

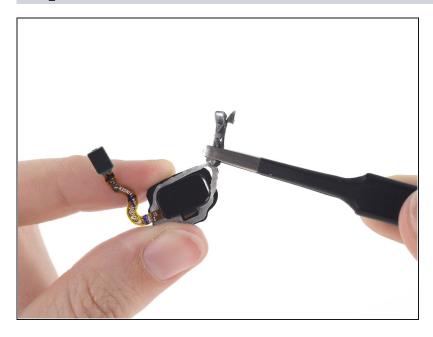

- If the fingerprint sensor adhesive is intact, it may be reused, but if damaged at all you should remove the old adhesive and apply replacements.
- After removing the old adhesive, clean the edges of the fingerprint sensor with high concentration isopropyl alcohol (at least 90%), then apply the new adhesive.

To reassemble your device, follow these instructions in reverse order.

After you've completed the repair, follow this guide to test your repair.