




PlayStation 2 Slimline Optical Drive Replacement

How to replace the optical drive of the PlayStation 2 Slimline

Written By: tloesner

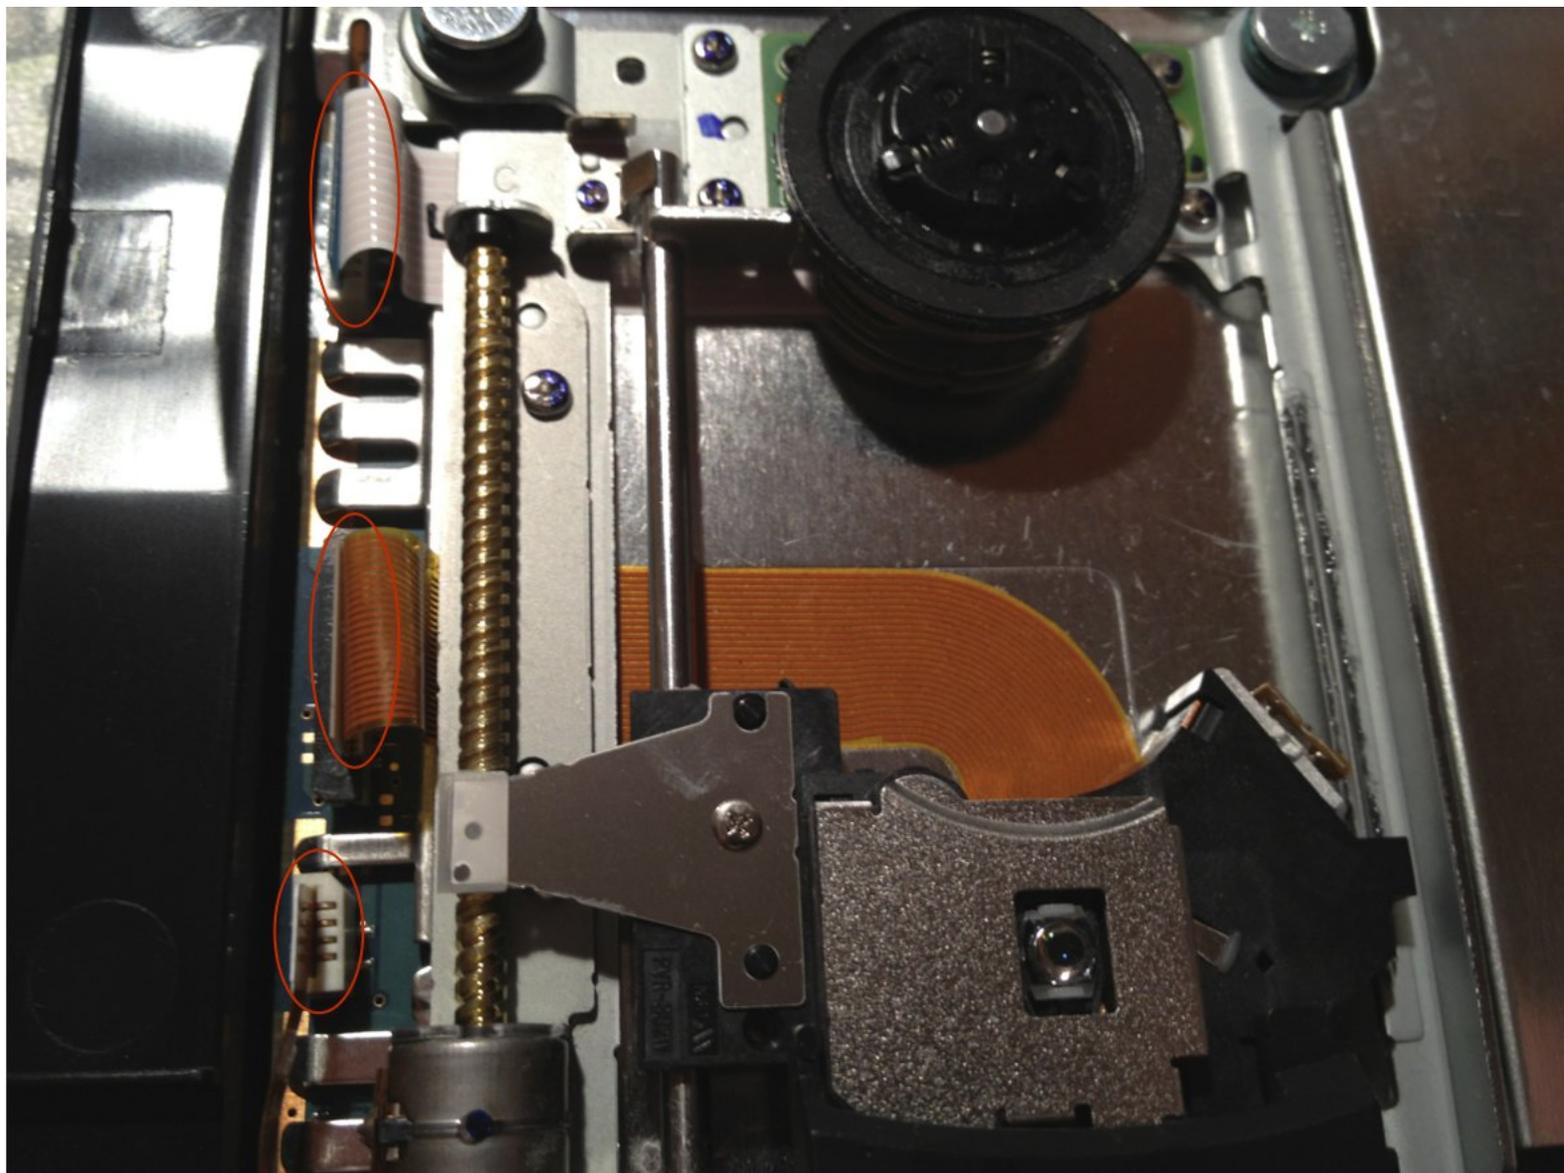


INTRODUCTION

If the optical drive of your PlayStation 2 Slimline is broken, this guide will provide a step-by-step process on how to access and remove the old optical drive for repairs or replacement.

TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-


Step 1 — Optical Drive

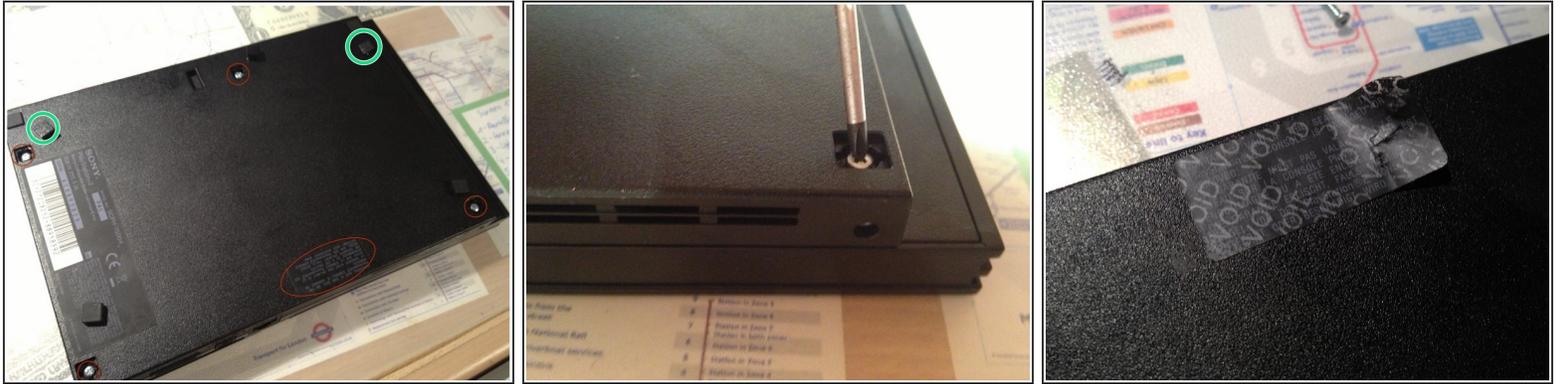

- Remove the rubber feet on two of the screw covers on the bottom of the console.
- Remove the screw covers and the screws themselves.


⚠ Caution: One of the screws is underneath the "Do not void" seal

Step 2

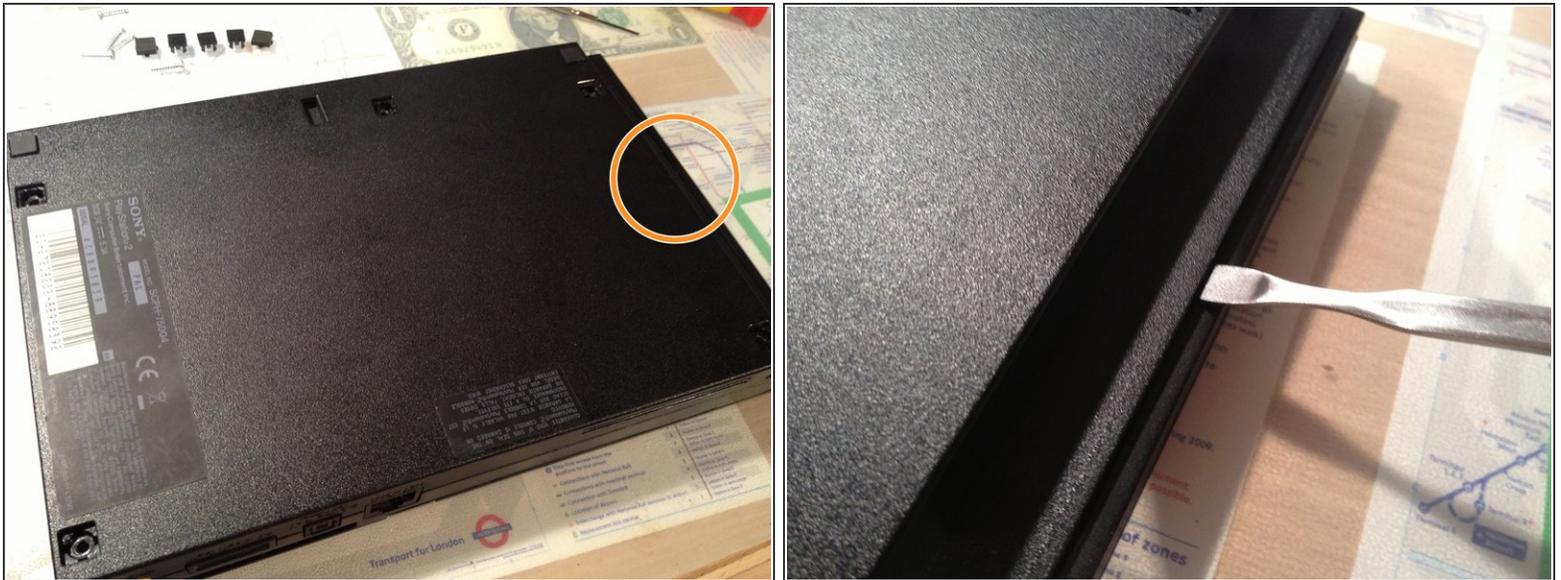

- ⓘ If all screws are removed.
- Use a metal spunger to open the chassis

Step 3

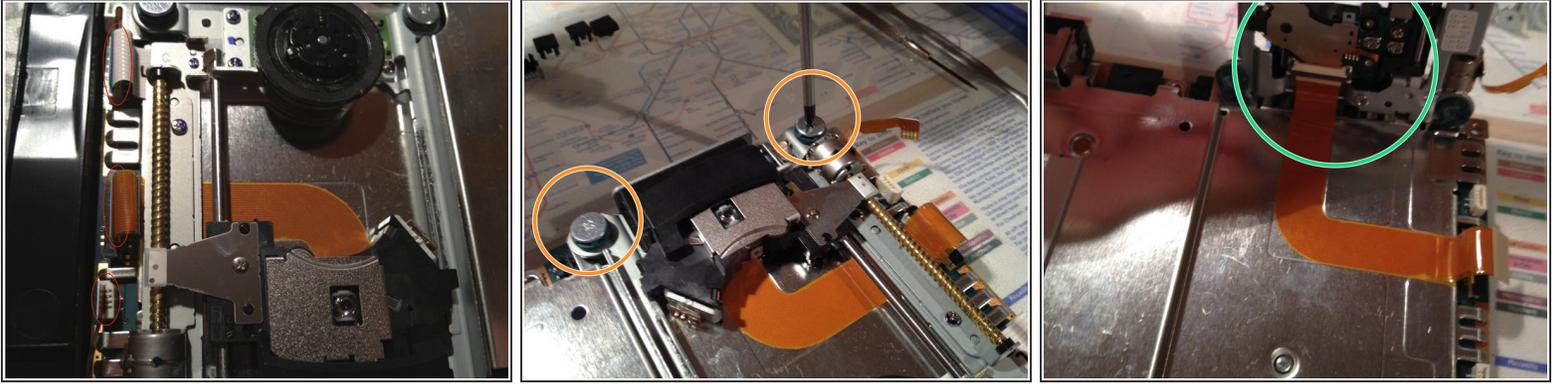

- Slip the three cables out of the sockets.
 - Use a PH01 screwdriver to remove the four screws securing the optical drive
 - Lift up the optical drive and remove the duct tape under the flex cable.
- i** Now the optical drive is free and ready for replacement

To reassemble your device, follow these instructions in reverse order.