




# Dell Inspiron 15-3558 Battery Replacement

Written By: Joseph Sctbunio

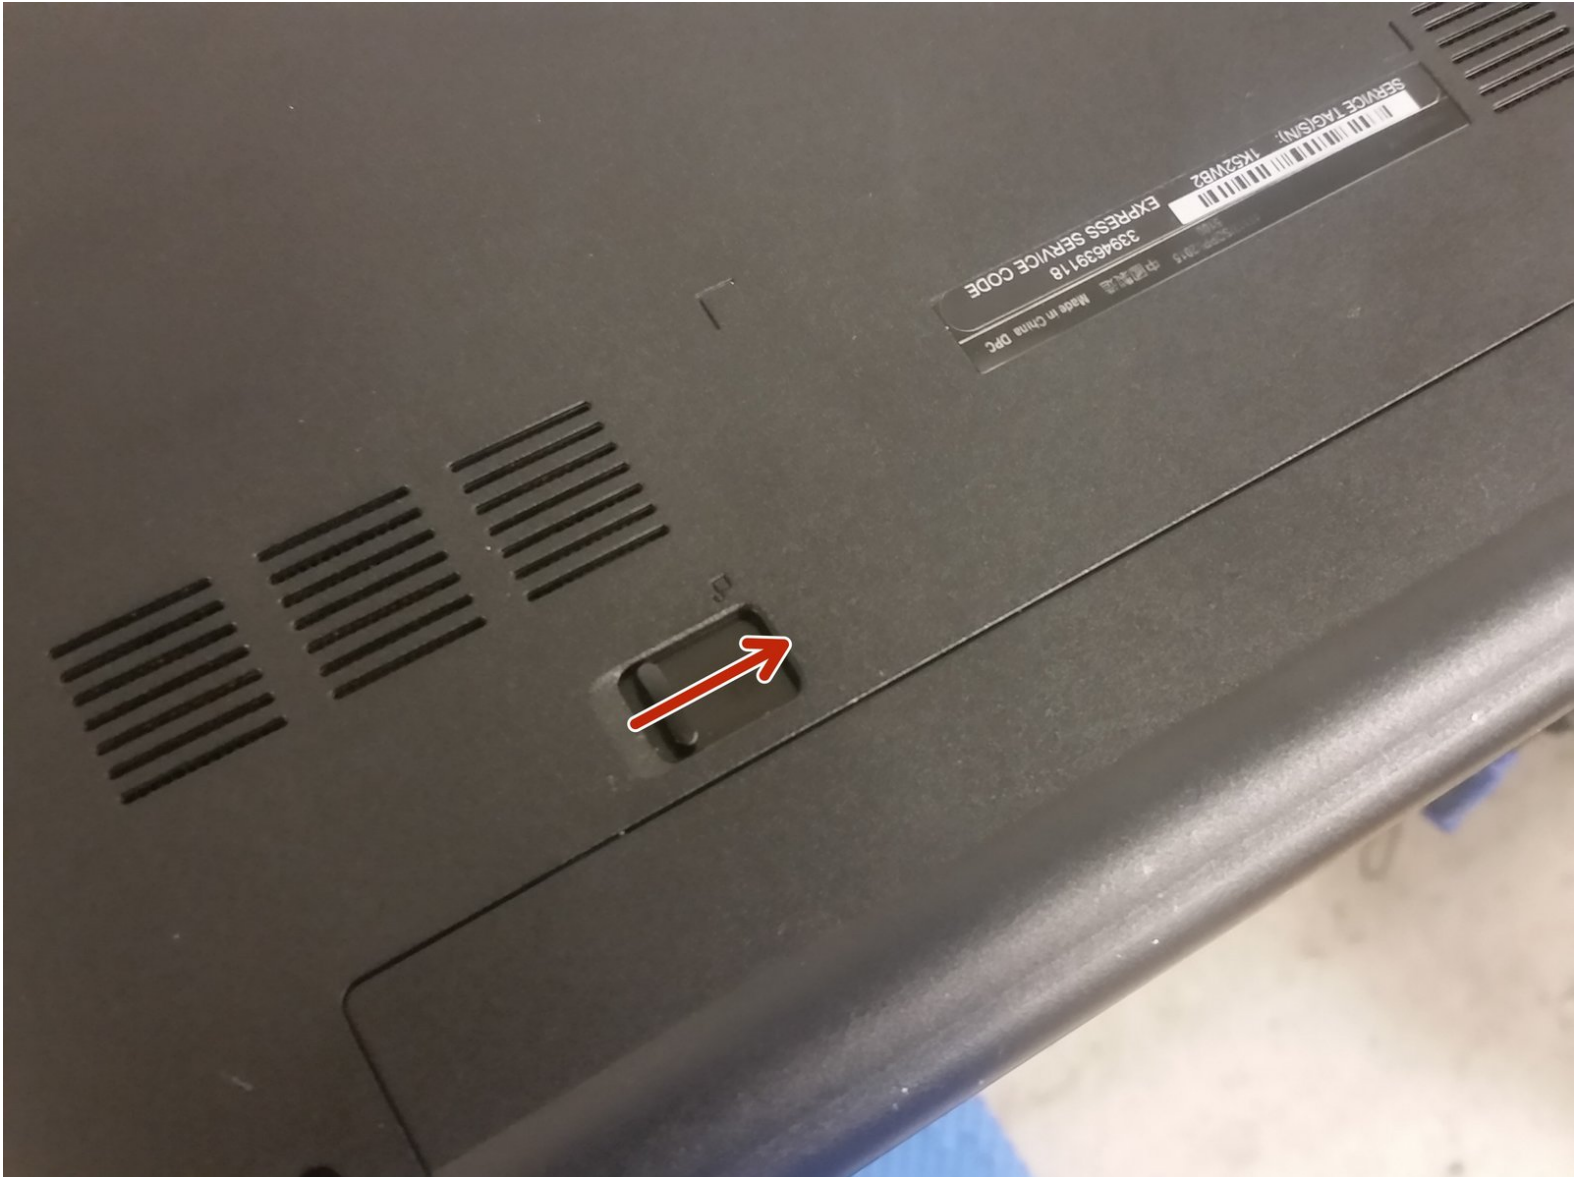

## Step 1 — Remove battery



- Flip the laptop over. With the battery side facing you, push the latch to the right.
- Lift the battery. You're done!

To reassemble your device, follow these instructions in reverse order.