


Dell Inspiron 13 N3010 Hard Drive Replacement

Written By: Terrence15

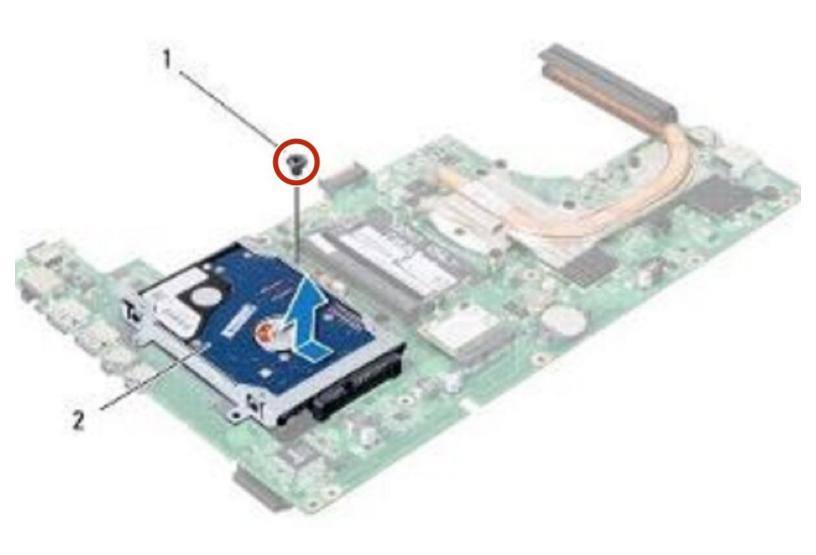


INTRODUCTION

In this guide, we will show you how to remove and replace the Hard Drive.


GB SSD (1)
GB SSD (1)
SSD (1)
SSD (1)

Step 1 — Remove the Screw

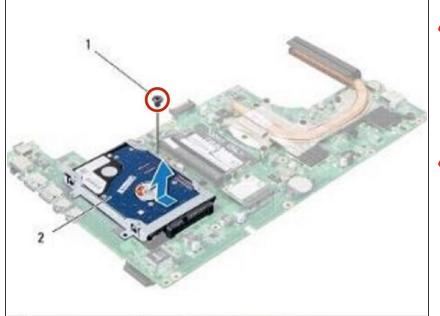


- WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in <u>Before You Begin.</u>
- A CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).
- CAUTION: Hard drives are extremely fragile. Exercise care when handling the hard drive.
- Remove the screw that secures the hard-drive assembly to the system board.

Step 2 — Disconnecting the Hard-Drive Assembly

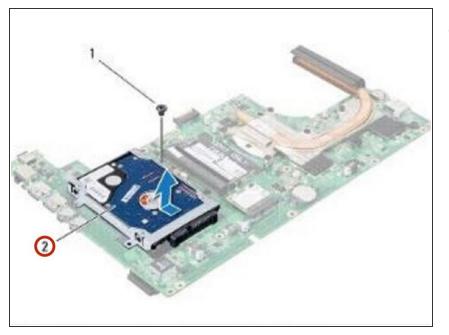

 Slide and disconnect the hard-drive assembly from the connector on the system board as indicated in the illustration.

Step 3 — Lifting the Hard-Drive Assembly

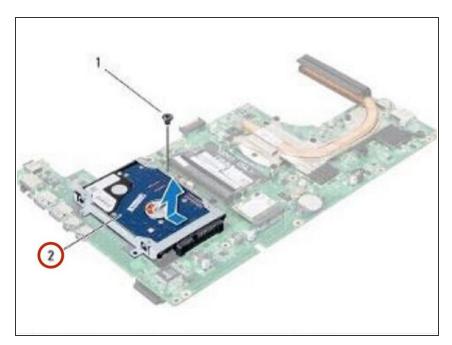

• Lift the hard-drive assembly off the system board.

Step 4 — Remove the Four Screws




 Remove the four screws that secure the hard-drive bracket to the hard drive.

Step 5 — Lifting the Hard-Drive Bracket



• Lift the hard-drive bracket away from the hard drive.

Step 6 — Placing the Hard-Drive

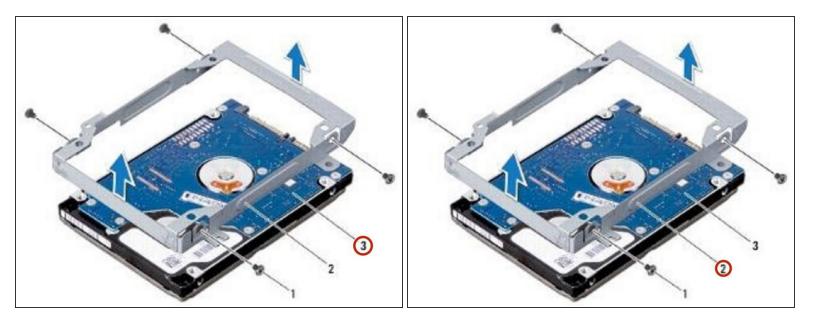


• Place the **NEW** hard drive in the hard-drive bracket.



Step 7 — Replace the Screws


 Replace the four screws that secure the hard-drive bracket to the hard drive.

Step 8 — Placing the Hard-Drive Assembly

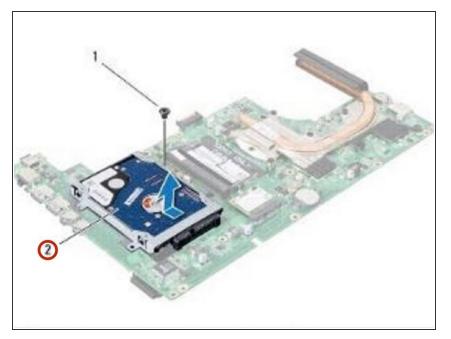


• Place the hard-drive assembly on the system board.

Step 9 — Connecting the Hard-Drive Assembly

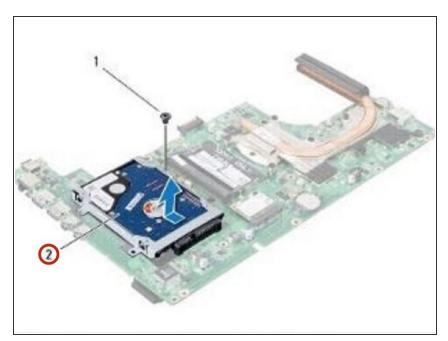


• Slide and connect the hard-drive assembly to the system board connector.

Step 10 — Replace the Screw

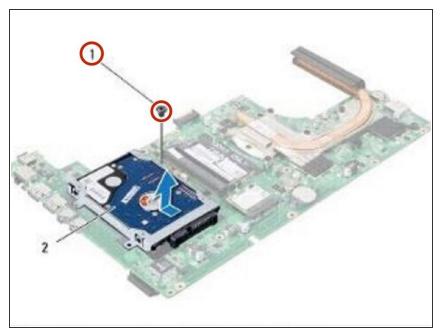

 Replace the screw that secures the hard-drive assembly to the system board.

Step 11 — Turn Over the System Board Assembly

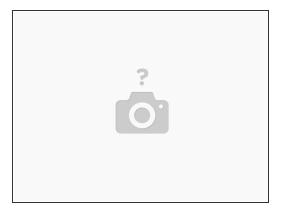

• Turn over the system board assembly.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2022-04-07 11:06:47 PM (MST).