


HP Stream 13-c110nr Display Replacement

The Display Assembly repair guide will assist...

Written By: Stacey Deel

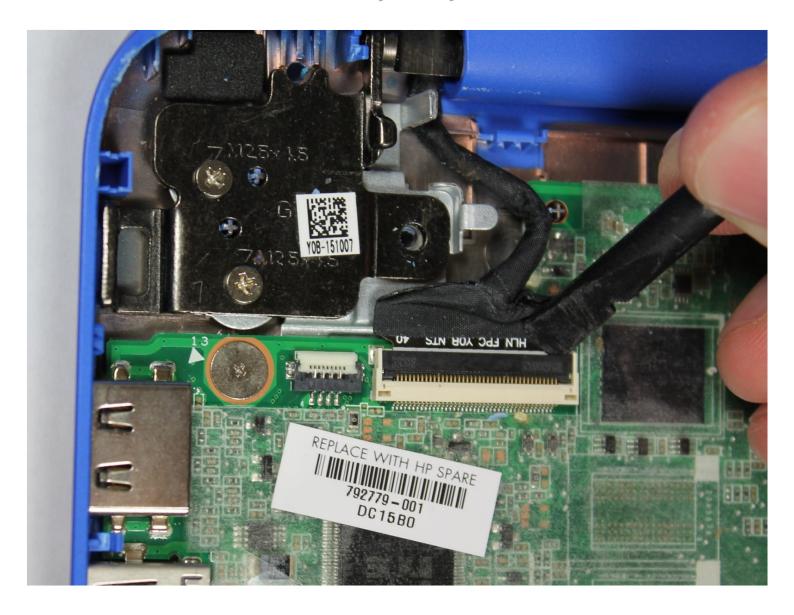

INTRODUCTION

The Display Assembly repair guide will assist users to repair the monitor of the HP Stream 13-c110nr. The guide will also provide steps to remove the WLAN and camera assembly.

TOOLS:

Phillips #0 Screwdriver (1)


Spudger (1)

Pick Tool (1)

Magnetic Project Mat (1)

Tweezers (1)


Step 1 — Keyboard Assembly

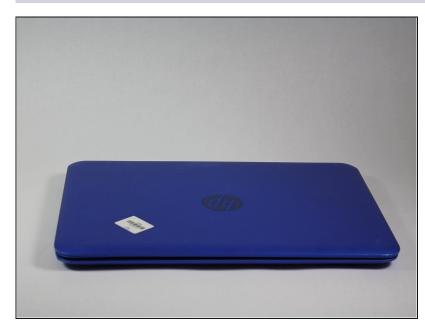

- Close the device.
- Remove AC adapter plug from electrical outlet.
- Remove AC adapter from device.
- Turn the device off.
- Unplug all external devices from device.
- i If you are unsure whether the computer is off or in hibernation mode, start the computer and then shutdown the operating system.



 Turn the device upside down with the back facing towards you.

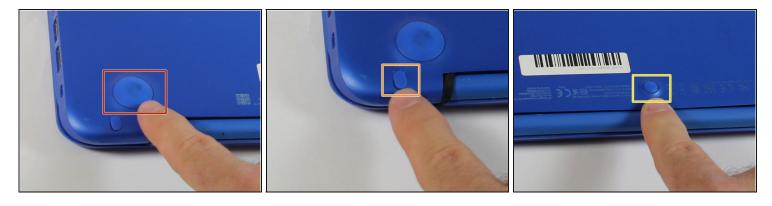

- Use a pick to remove the two (2) large computer feet along the back edge of the device.
- Use a pick to remove the two (2) small computer feet.
- Use a pick to remove the one (1) screw cover.
- Place rubber computer feet in safe place for reassembly.



- Remove the thirteen (13) Phillips P0 PM2.5x6.0 mm screws.
- Place the thirteen (13) screws on <u>magnetic mat</u> for reassembly.




- Turn the device over with the front facing towards you.
- Open the device as shown.




- Insert the Spudger between the Top Cover and Bottom Cover to lift the front edge until it separates from the Bottom Cover.
- *i* Do not completely remove the Keyboard/Top cover from the Bottom cover yet.

Step 7

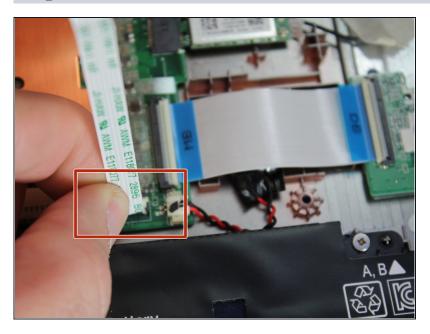


Disconnect the Touchpad cable.

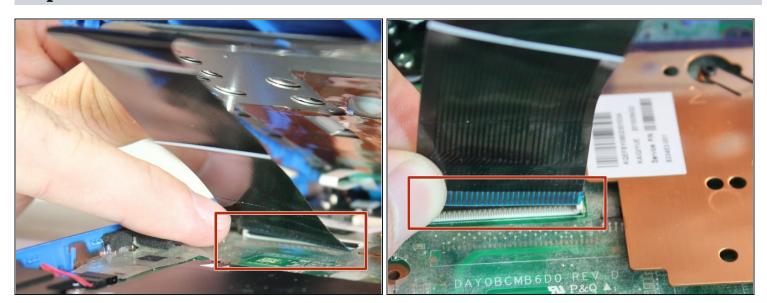

Disconnect the Keyboard Cable.

Step 9

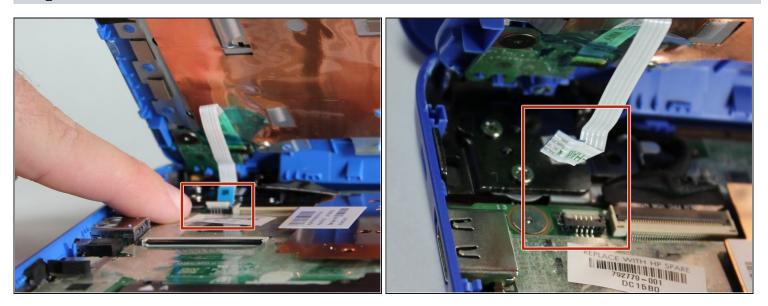


Disconnect the Power connector cable.




• Remove the Keyboard/Top Cover from the device.

Step 11 — Display Assembly

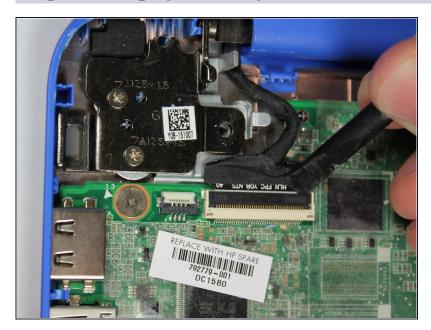

 Disconnect the Display Cable from the System Board.

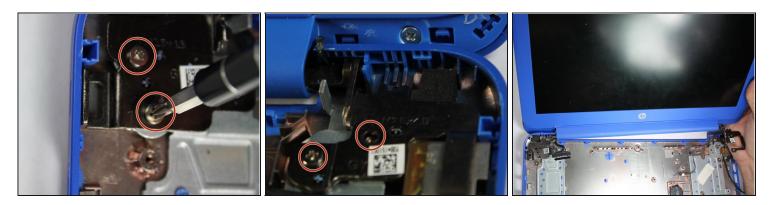


- Remove the four (4) Phillips P0 PM2.5x4.5 mm screws from the screen retaining brackets.
- Place the four (4) screws on the magnetic mat for reassembly.



- Peel off two (2) stickers located at the bottom corners of the display assembly.
- Place two (2) stickers in safe place for reassembly.





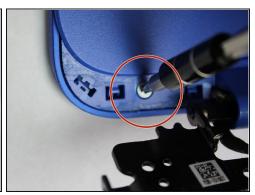

- Remove the two (2) Phillips P0 PM2.5x2.0 mm screws.
- Place the two (2) screws on the magnetic mat for reassembly.

Step 15



• Use a pick to pry off the display cover from the display.



• Remove the Display Assembly.





- Remove the four (4) Phillips P0 PM2.5x4.5 mm screws.
 - Place four (4) screws on magnetic mat for reassembly.
- Remove the two (2) Phillips P0 PM2.5x3.0 mm screws.
- Place two (2) screws on magnetic mat for reassembly.



Separate display from back cover

To reassemble your device, follow these instructions in reverse order.