




# Hover-1 Maverick Foot Mats Replacement

How to replace the foot mats on the Hover-1 Maverick.

Written By: Piper Feldman

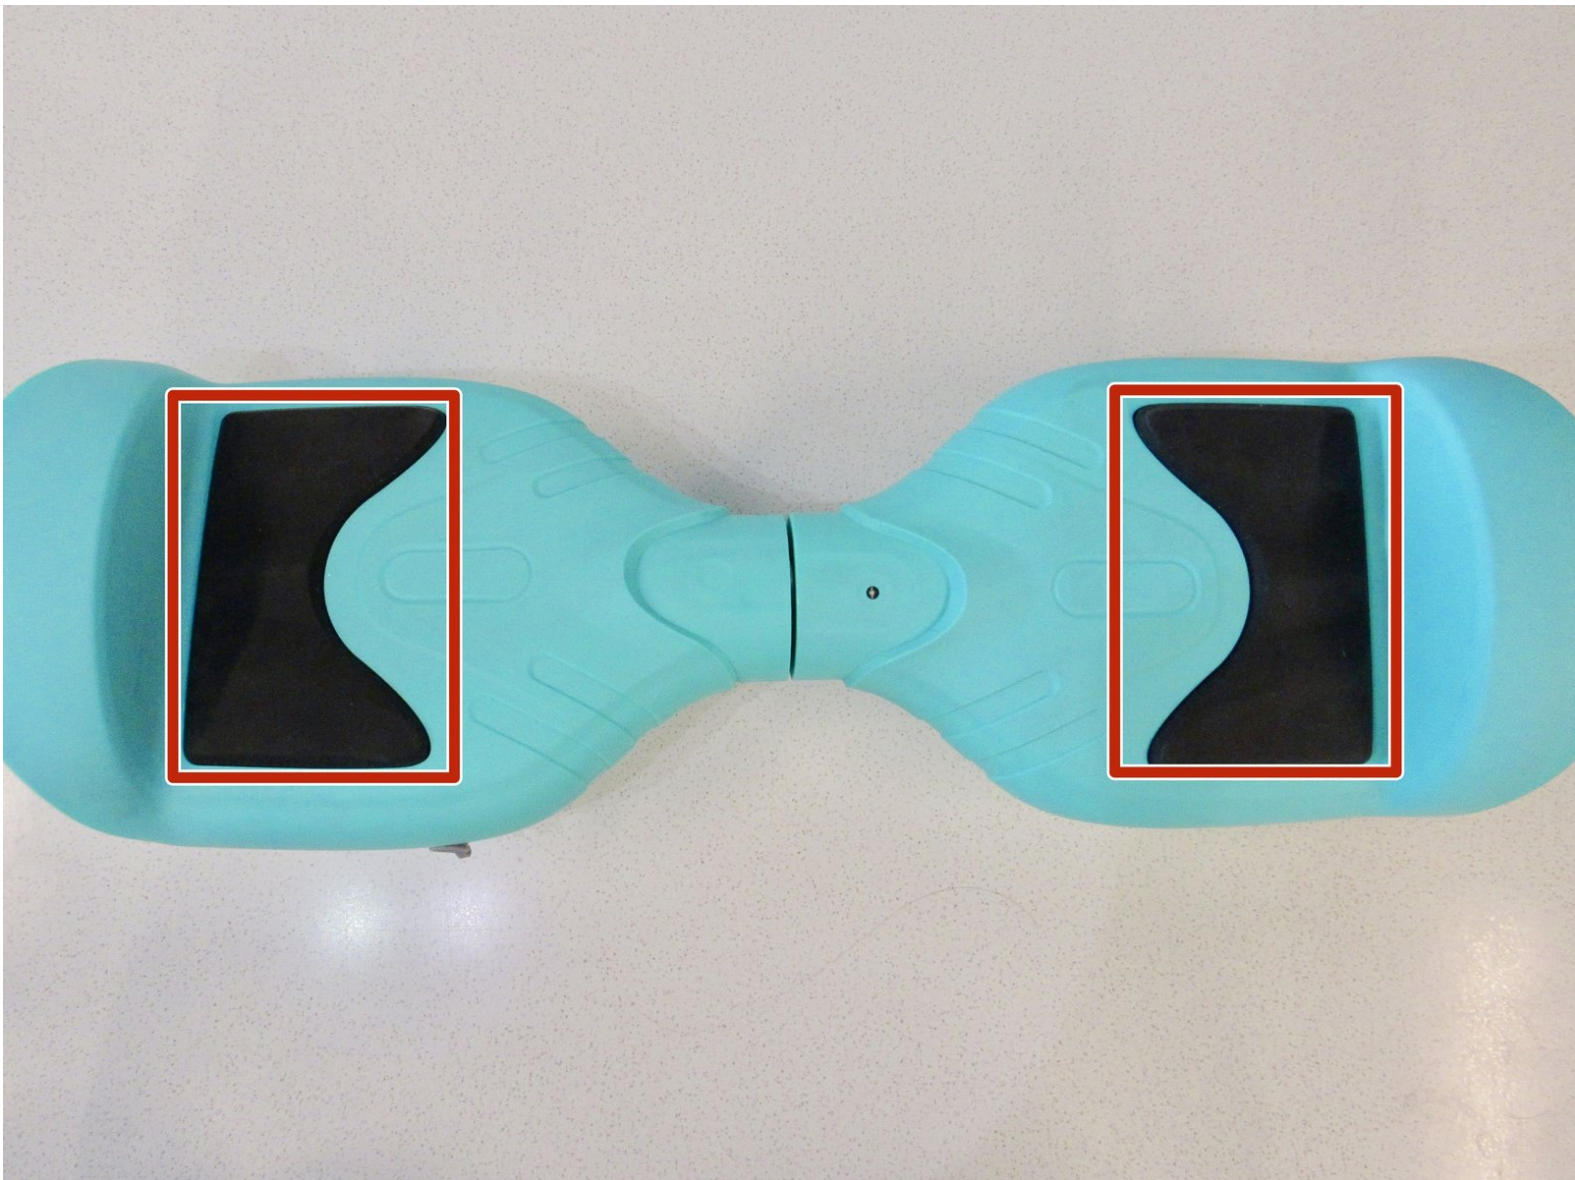

---

## INTRODUCTION

This guide for the Hover-1 Maverick guides users in replacing the foot mats on their device. The foot mats are crucial in allowing the hoverboard to balance and communicate movement to the rest of the device. A symptom of having faulty foot mats would be if the hoverboard is unable to balance.


---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-




## Step 1 — Motherboard

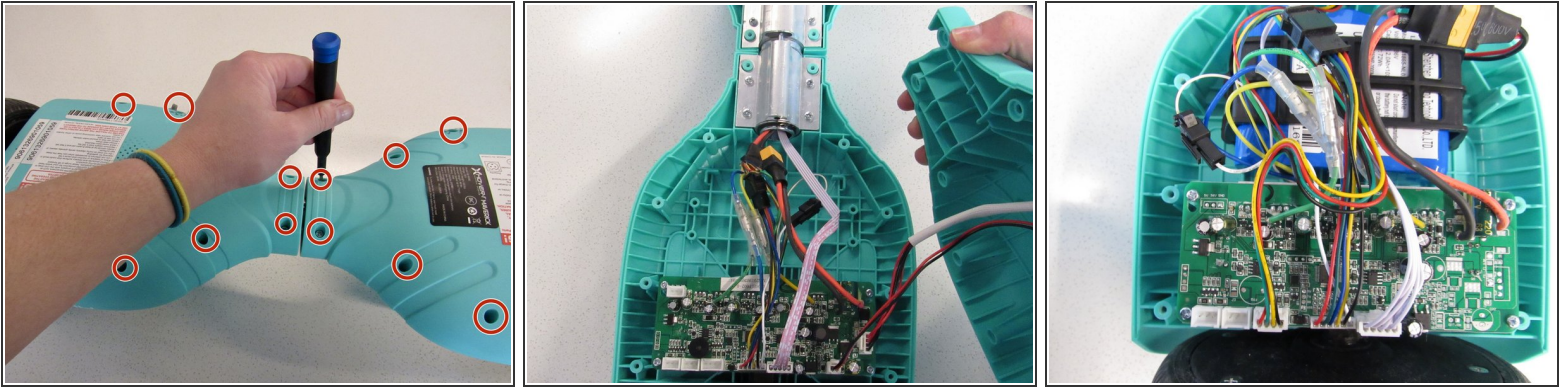

- Remove the twenty 15mm Phillips #1 screws from the shell of the hoverboard.
- Open the shell.
- ⓘ There is one motherboard on each side of the device located near the wheels.



## Step 2

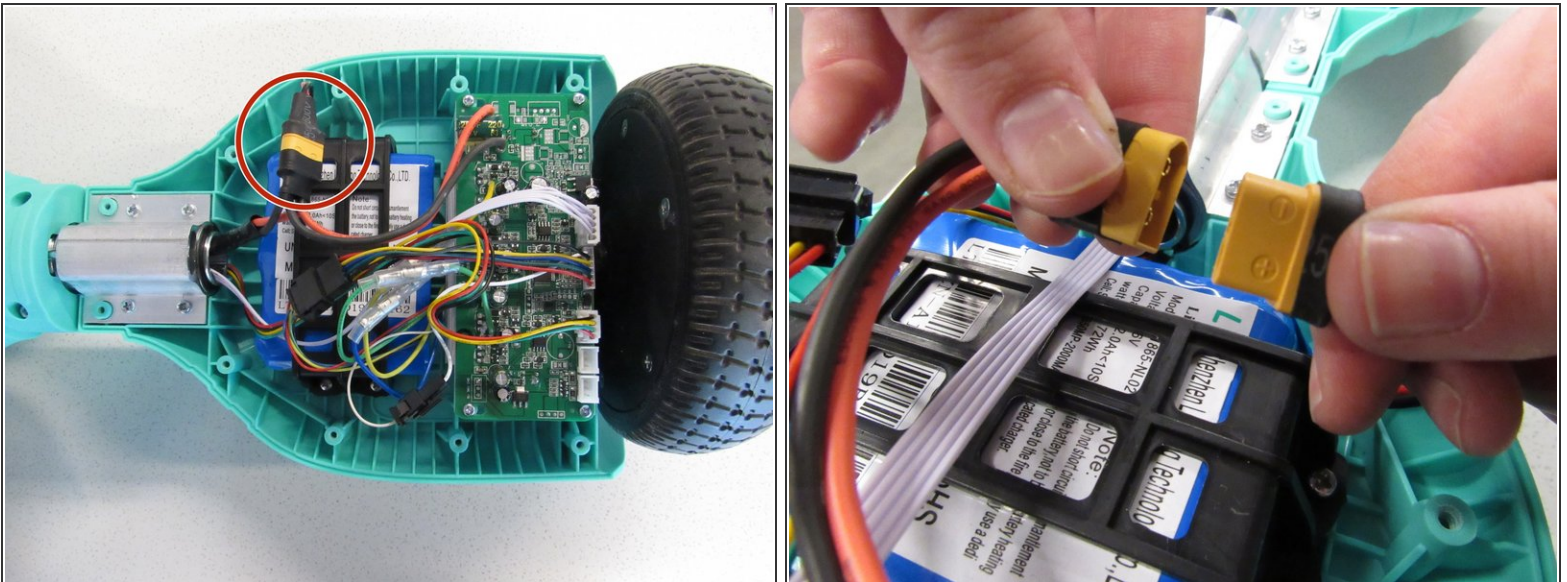

- Disconnect the battery to prevent any electrical currents from coming through the wires.





### Step 3

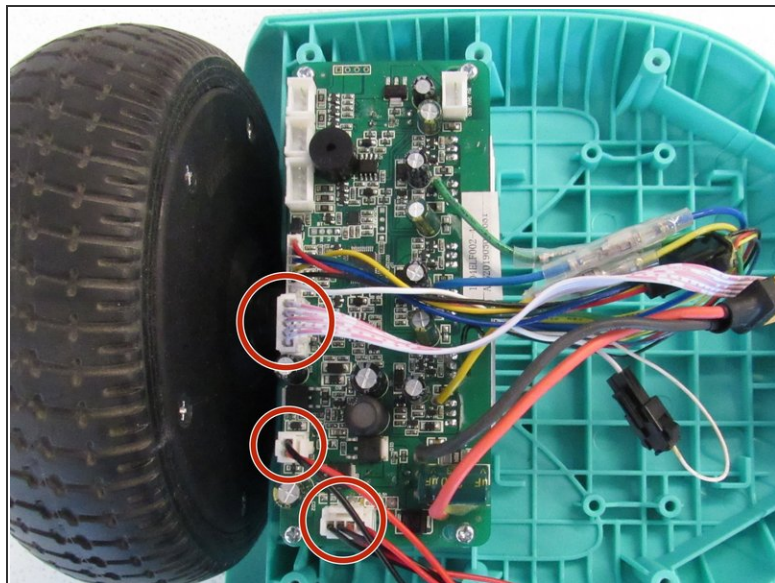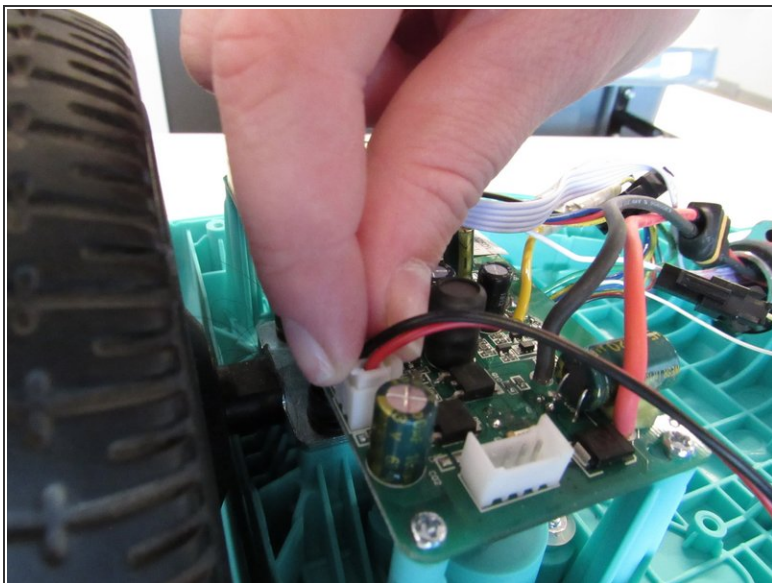

- Squeeze and pull on the wires to detach them from the motherboard.



### Step 4

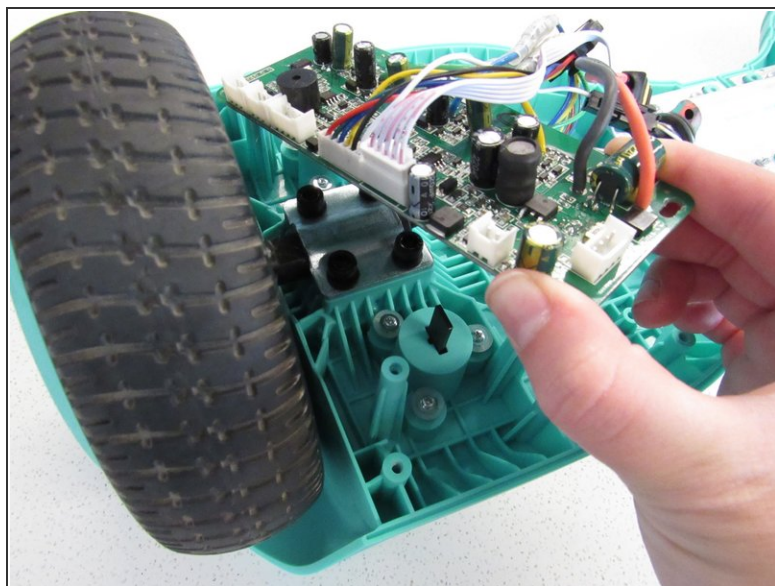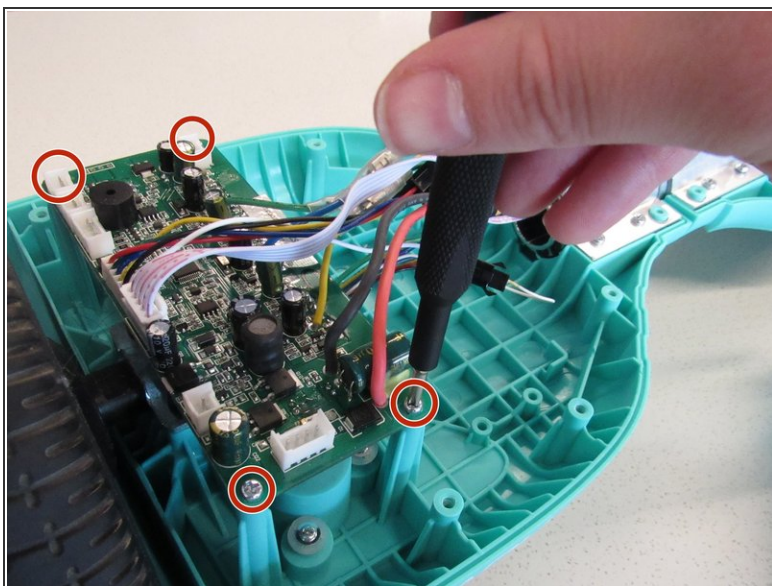

- Remove the four 8mm Phillips #1 screws.
- Remove the motherboard from the device.
- Repeat for the other motherboard.




## Step 5 — Foot Mats

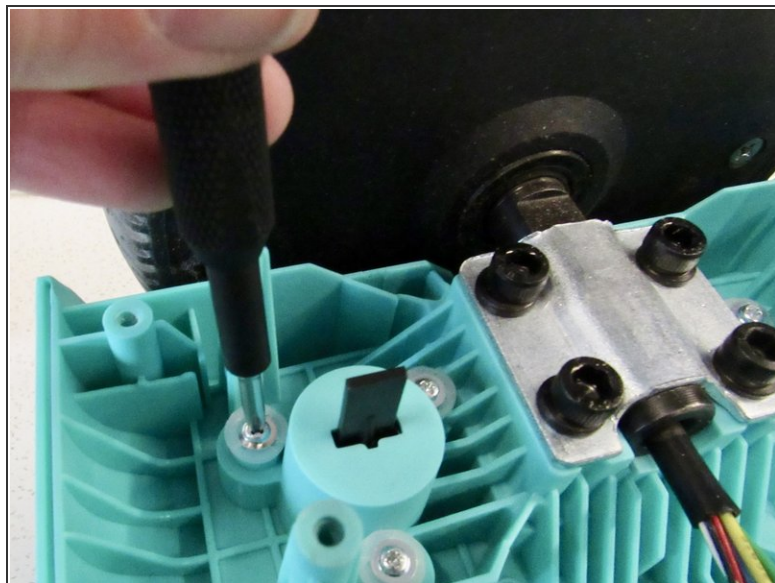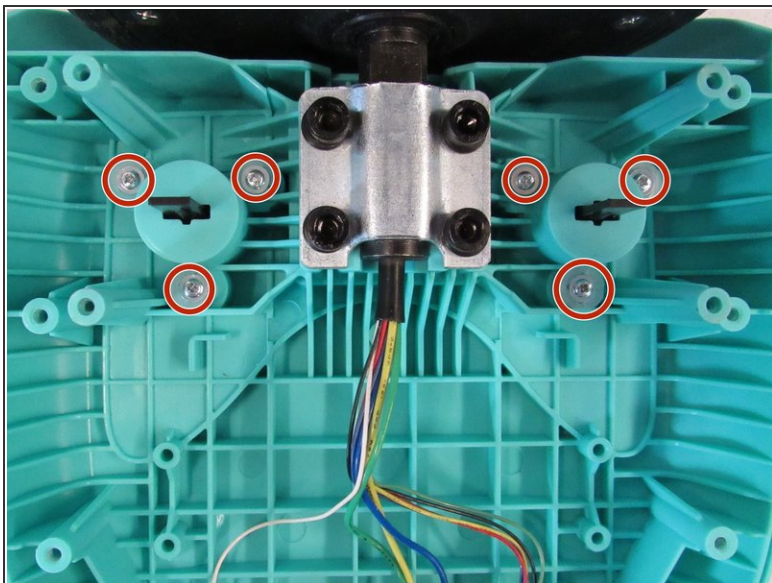

- Remove six 1mm Phillips #1 screws.

## Step 6

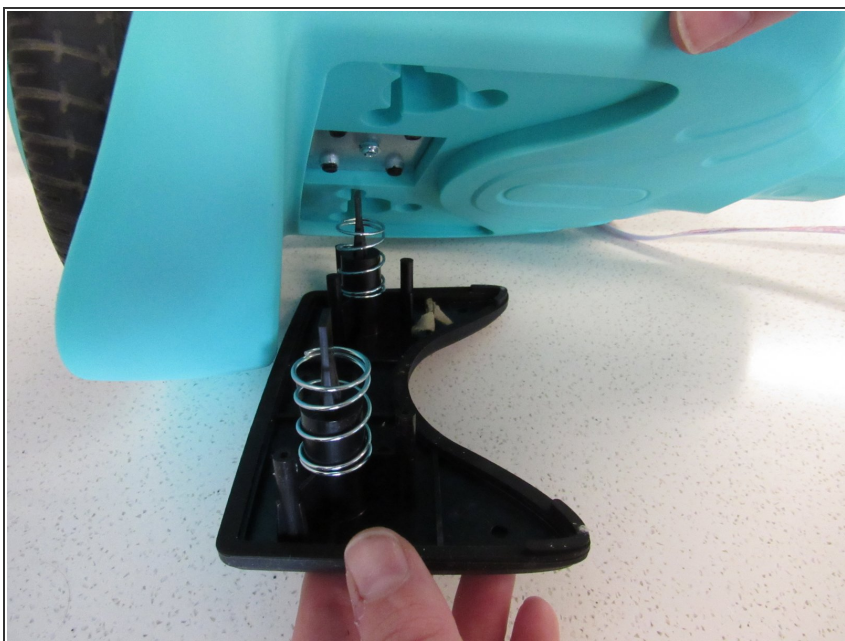

- Remove the foot mats from the top of the board, which is facing down right now.

To reassemble your device, follow these instructions in reverse order.