




Lenovo Yoga 710-11ISK RAM Replacement

This guide shows how to replace the RAM for the...

Written By: Richard

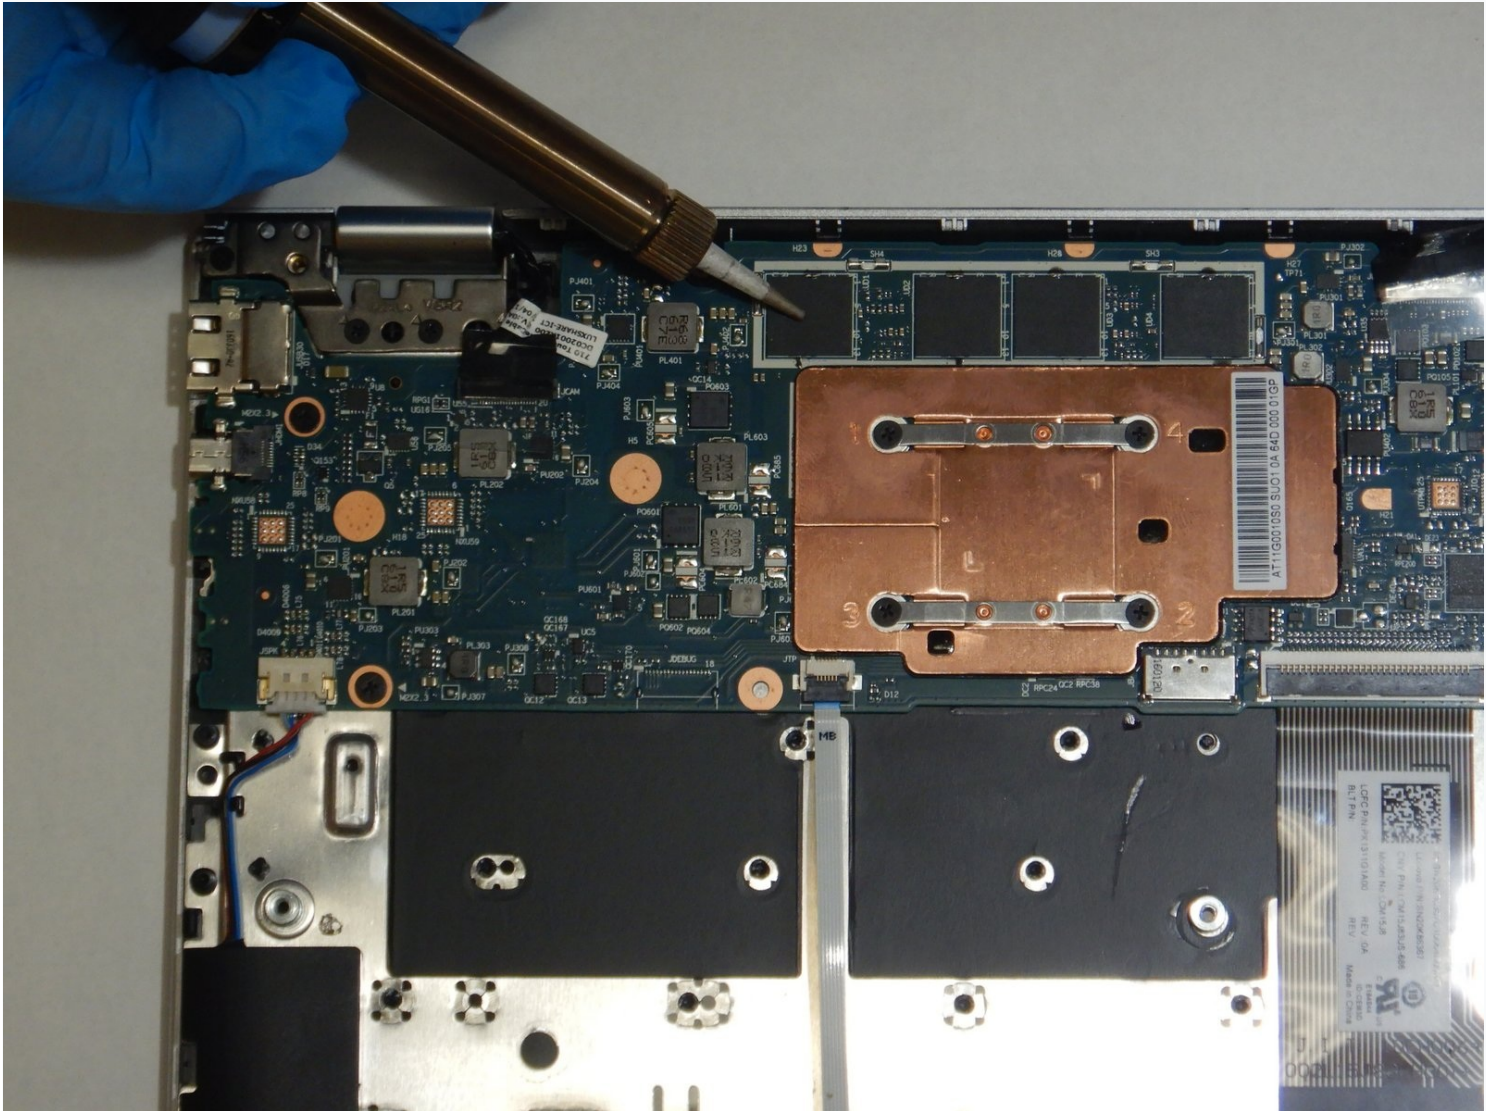

INTRODUCTION

This guide shows how to replace the RAM for the Lenovo Yoga 710-11ISK. This will need to be done if you notice Apps are running slowly and you have frequent crashes.


In order to complete this guide, you'll need to know how to solder connections and joints. Please follow the [How to Solder and Desolder Connections guide](#) for more information on soldering.

TOOLS:

T5 Torx Screwdriver (1)

Soldering Iron (1)

Step 1 — Back Panel

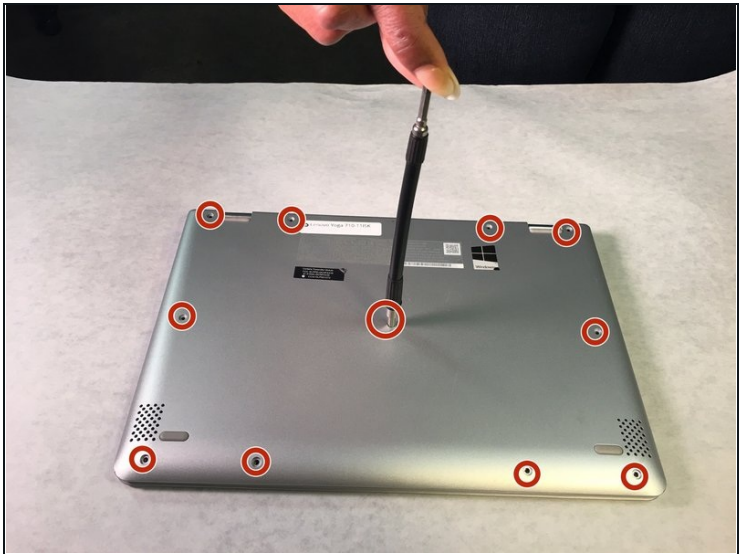


- Make sure back panel is facing up.
- Remove eleven 5mm screws with the T5 Torx Screwdriver.

Step 2



- Lift back panel carefully.
- ✦ You can now replace back cover, making sure to match screw holes and placement of the original.

Step 3 — RAM

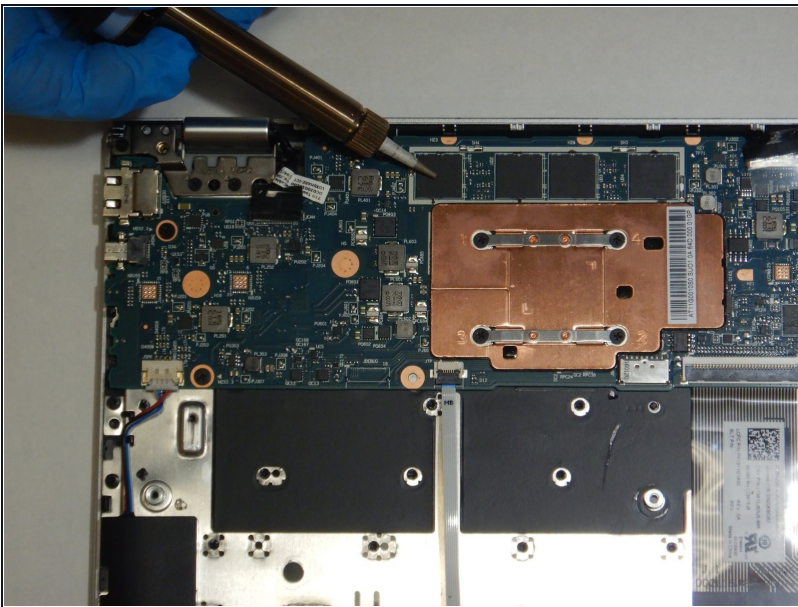

- Using a soldering iron, unsolder the joints connecting the RAM.
- ❗ For more information on soldering, please visit the [How to Solder and Desolder Connections guide](#).
- Remove the RAM from the device.

To reassemble your device, follow these instructions in reverse order.