



Lenovo Yoga 2 11" 20428 Battery Replacement

This guide will show how to properly remove and...

Written By: Joshua Thomas Tyler



INTRODUCTION

This guide will show how to properly remove and replace the battery component. The safe disconnection of the battery is a key so that you do not shock yourself or any of the other components within the laptop.



TOOLS:

T4 Torx Screwdriver (1)
Phillips #00 Screwdriver (1)

PARTS:

Lenovo Yoga 2 11 Tablet Laptop
Battery (1)

Step 1 — Back Panel

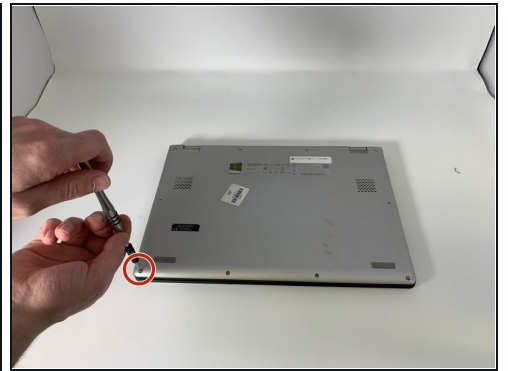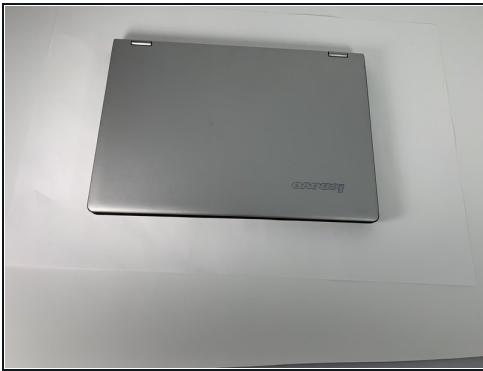

- Flip the computer over so the bottom is facing up.
- Remove the **ten** 6mm screws with a T5 Torx security screwdriver.


Step 2



- Carefully remove the back panel by gently separating the panel from front to back.

⚠ Take care not to pull any wires or crack the outer shell.

Step 3 — Battery

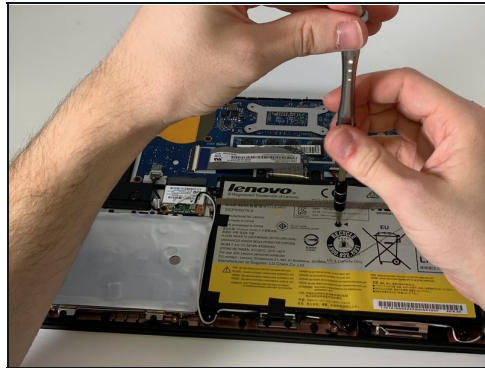



- Use the Phillips #000 screwdriver to remove the **six** 3.3 mm screws around the perimeter of the battery.
- Use the Phillips #000 screwdriver to remove the **single** 6.75 mm screw from the center of the battery.

Step 4



- Gently remove the **three** pieces of tape securing the Bluetooth/Wi-Fi antenna.


Step 5

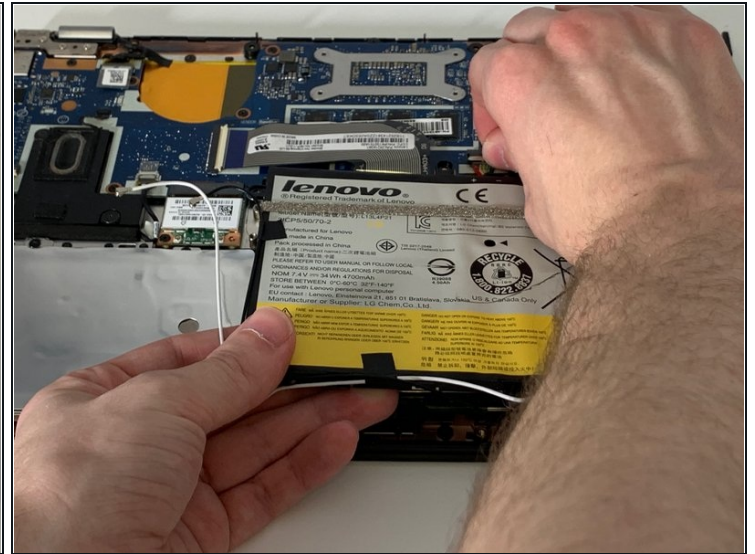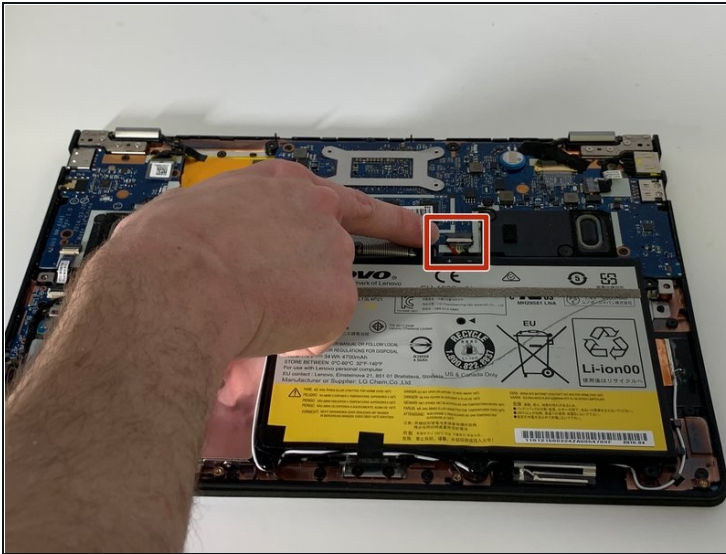

- Grip the base of the connector with your fingers or pliers, and gently pull the connector straight back towards you to remove it.

⚠ If possible, do not to pull the connector out by the wires, as this can damage the connector.

Step 6

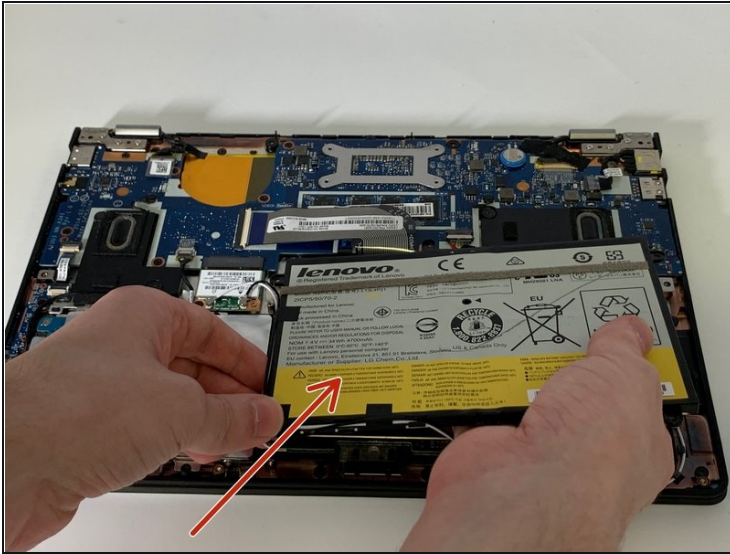

- Carefully remove the battery from the laptop.
- ⚠ Take care not to pull out the Bluetooth antenna while removing the battery.

To reassemble your device, follow these instructions in reverse order.