




# Lenovo Yoga 2 11" 20428 Speaker Replacement

This guide will show the step-by-step process...

Written By: Joshua Thomas Tyler

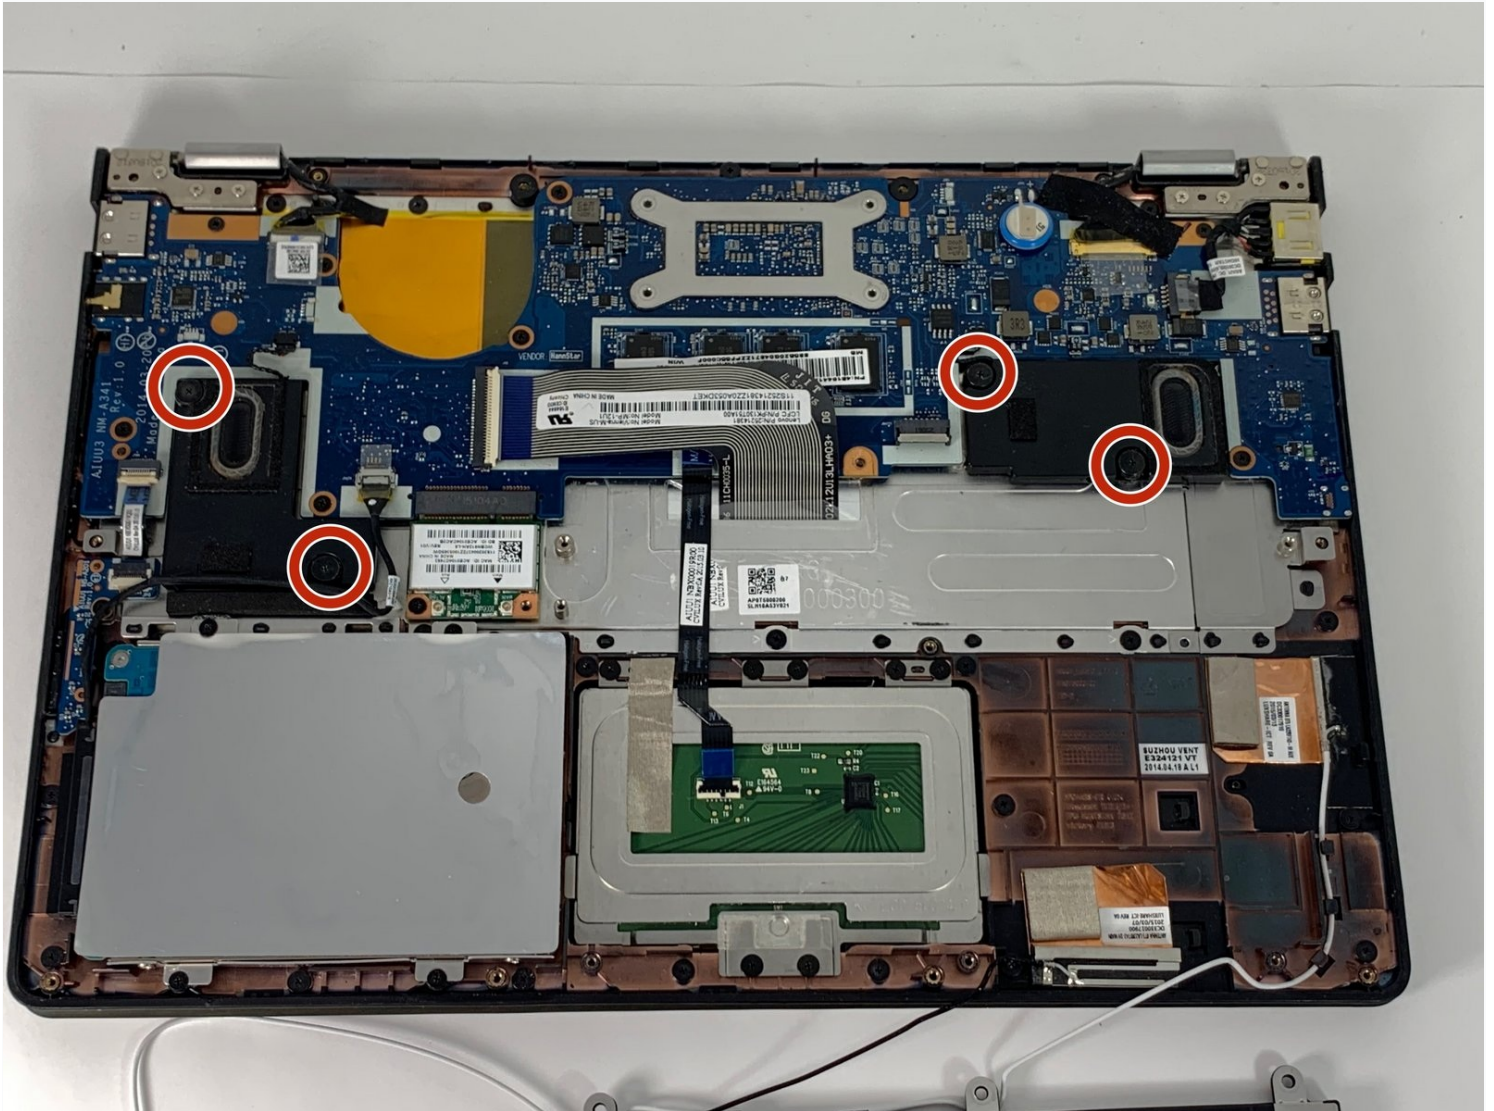

# INTRODUCTION

This guide will show the step-by-step process of removing and/or replacing the speakers in the Lenovo Yoga 11" 20428. This guide can be used to replace broken speakers and remove speakers for repair. When removing your speakers, make sure to remove the battery before beginning the speaker removal process.


## TOOLS:

T4 Torx Screwdriver (1)  
Phillips #00 Screwdriver (1)

## PARTS:


90204930 - Lenovo Yoga 2 11" Speaker Replacement (1)

## Step 1 — Back Panel

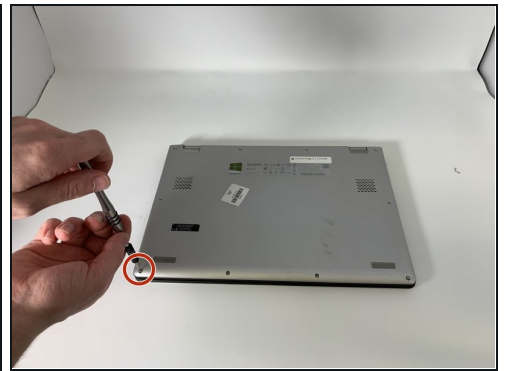

- Flip the computer over so the bottom is facing up.
- Remove the **ten** 6mm screws with a T5 Torx security screwdriver.


## Step 2

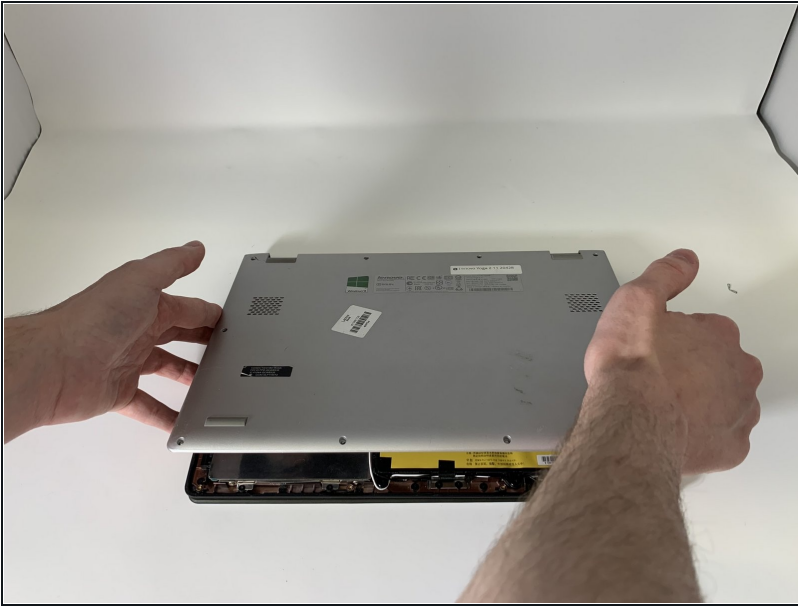

- Carefully remove the back panel by gently separating the panel from front to back.

⚠ Take care not to pull any wires or crack the outer shell.

## Step 3 — Battery

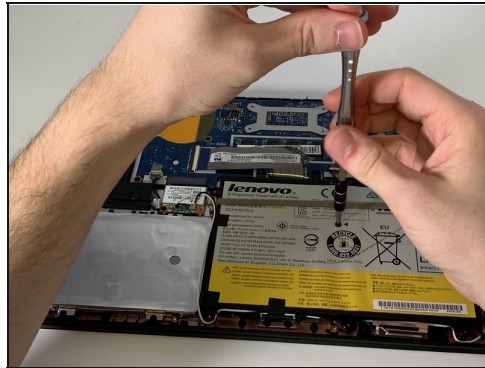

- Use the Phillips #000 screwdriver to remove the **six** 3.3 mm screws around the perimeter of the battery.
- Use the Phillips #000 screwdriver to remove the **single** 6.75 mm screw from the center of the battery.





## Step 4



- Gently remove the **three** pieces of tape securing the Bluetooth/Wi-Fi antenna.


## Step 5

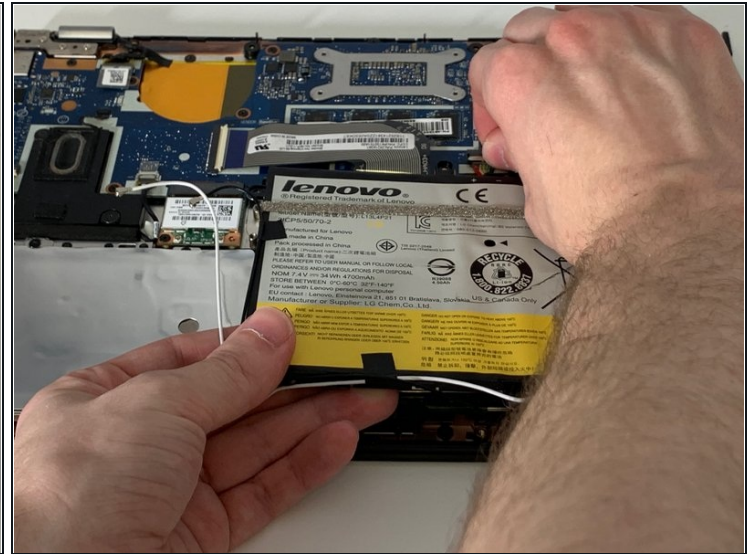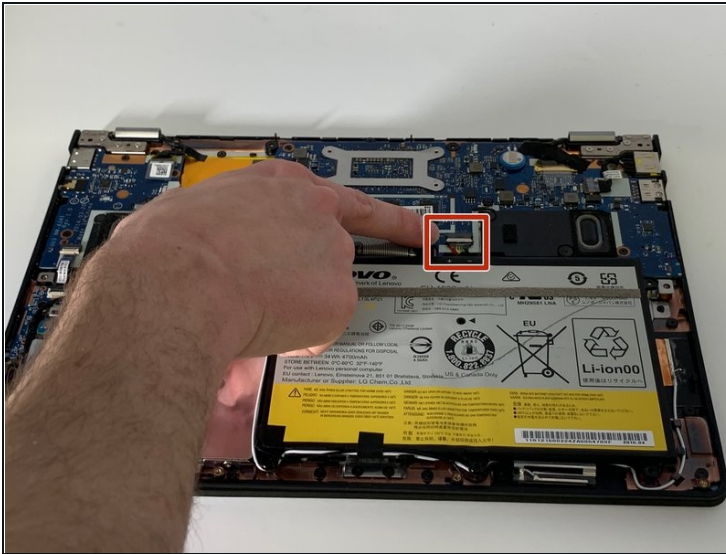

- Grip the base of the connector with your fingers or pliers, and gently pull the connector straight back towards you to remove it.


⚠ If possible, do not pull the connector out by the wires, as this can damage the connector.

## Step 6

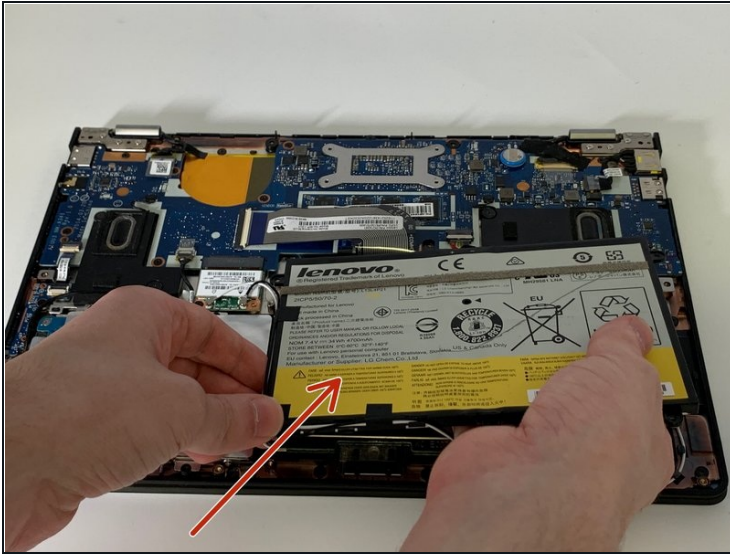

- Carefully remove the battery from the laptop.
- ⚠ Take care not to pull out the Bluetooth antenna while removing the battery.


## Step 7 — Speaker

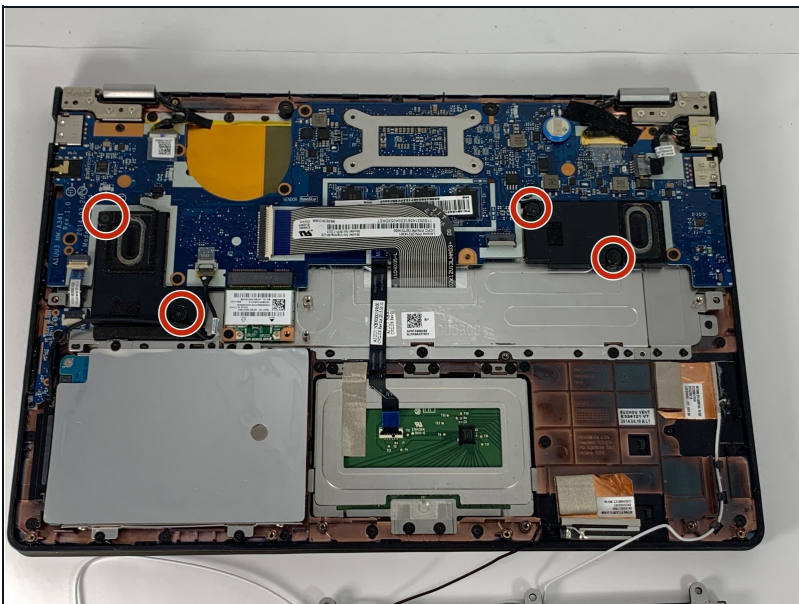

- Use the Phillips #000 screwdriver to unscrew the **four** 1.7 mm screws.



## Step 8

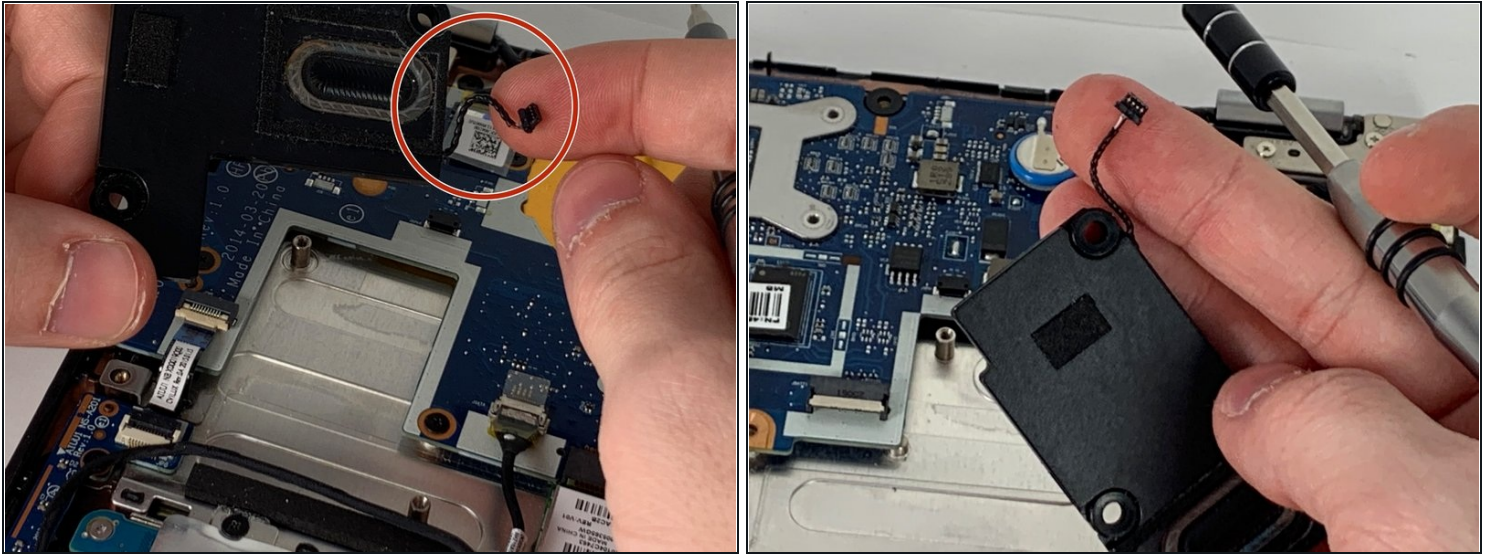

- Carefully detach the speaker wire and remove the speaker.

To reassemble your device, follow these instructions in reverse order.